


# Bruk av Console port på ECU 150-12A1

Koble til ECU-150-12A1 til en PC med en USB Micro kabel


Sjekk under Device Manager (Enhets Behandling) at USB porten kommer opp som en COM-port

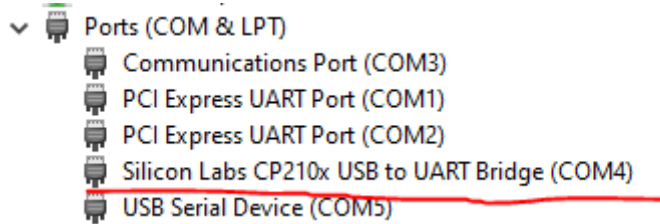

Bruk et seriverktøy for å koble deg til serieporten. Vi bruker her putty


Koble til serieporten med 115200 baud og standard

8N0 konfigurasjon

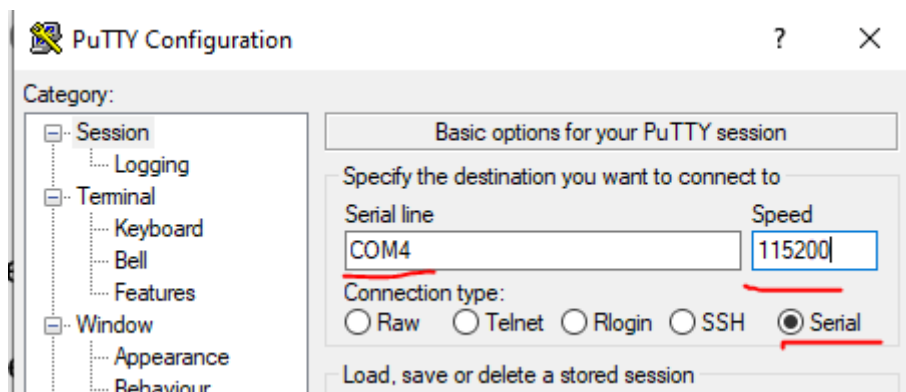


Koble spenningen til ECU-en og du vil se at den starter opp.

Den avslutter med å vise versjon på det installerte image.

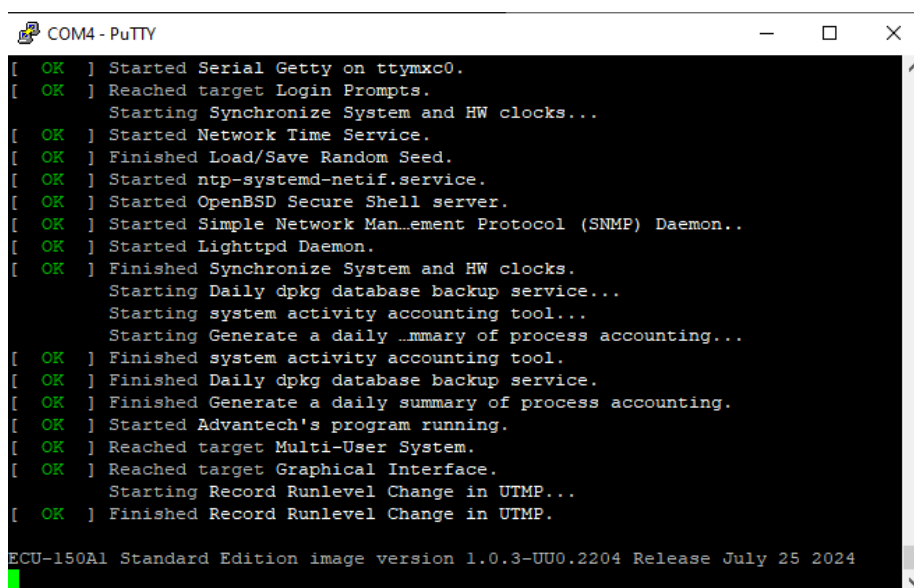

# Bruk av Console port på ECU 150-12A1

Trykk Enter og logg inn med root og blank passord.

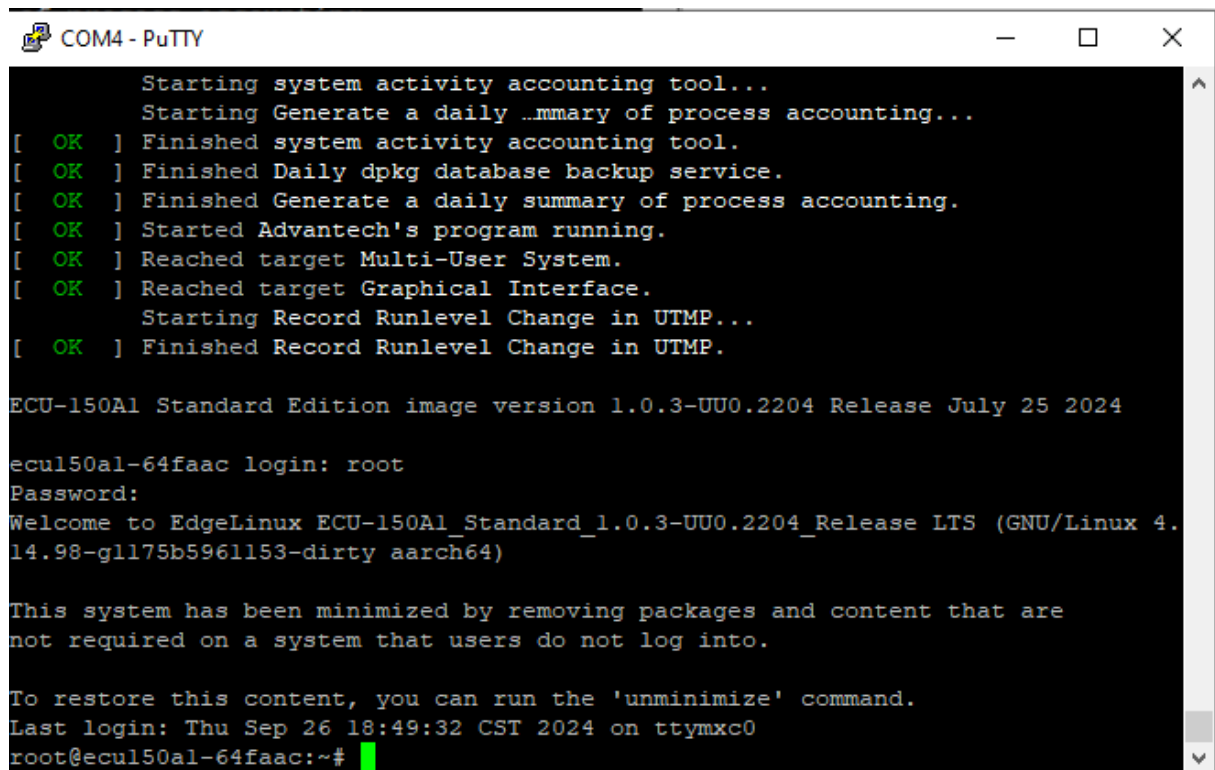

```
COM4 - PuTTY
Starting system activity accounting tool...
Starting Generate a daily summary of process accounting...
[ OK ] Finished system activity accounting tool.
[ OK ] Finished Daily dpkg database backup service.
[ OK ] Finished Generate a daily summary of process accounting.
[ OK ] Started Advantech's program running.
[ OK ] Reached target Multi-User System.
[ OK ] Reached target Graphical Interface.
Starting Record Runlevel Change in UTMP...
[ OK ] Finished Record Runlevel Change in UTMP.

ECU-150A1 Standard Edition image version 1.0.3-UU0.2204 Release July 25 2024

ecul50a1-64faac login: root
Password:
Welcome to EdgeLinux ECU-150A1_Standard_1.0.3-UU0.2204_Release LTS (GNU/Linux 4.
14.98-g1175b5961153-dirty aarch64)

This system has been minimized by removing packages and content that are
not required on a system that users do not log into.

To restore this content, you can run the 'unminimize' command.
Last login: Thu Sep 26 18:49:32 CST 2024 on ttymxc0
root@ecul50a1-64faac:~#
```