
Advantech IIoT Group

Advantech TPC-100W Software
User Manual

Version <1.25>

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

Revision History

Date	Version	Description
2026/03/24	1.25	Update content for IEC 62443
2025/09/05	1.24	Add USB Backup-Restore Mode
2025/08/11	1.23	Add Bridge page in Settings tool Add VNC server page in Settings tool
2025/04/16	1.22	Add FRAM test
2024/10/22	1.21	Support atcc.sys-backup command to sign backup files
2024/10/08	1.20	Support install package in Settings tool
2024/09/11	1.19	1. Support import certificate in Settings tool 2. Support enable/disable hardware acceleration in Chromium in Settings tool 3. Support enable/disable chromium touch-events/extensions/ignore-certificate-errors 4. Support config Chromium download directory in Settings tool
2024/07/08	1.18	Add Yocto 4.2 Add more details of Yocto 4.2 installation.
2024/06/05	1.17	Update Settings Tool images Add start_custom.sh option in Settings Tool Support export downloads
2024/01/23	1.16	1. Add Password page in Settings tool 2. Add Exit button in Settings tool 3. Add how to change keyboard layout for terminal
2023/11/08	1.15	1. Add Logo page in Settings tool 2. Add Firewall tab in Network page
2023/10/05	1.14	Add third-party software license
2023/08/24	1.13	Add Yocto 4.0 Add factory reset mode Update First login Update Settings tool :

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

		1. System Support enable/disable ethernet/USB/system virtual keyboard for chromium Support reboot system automatically Support open home page for chromium 2. Security Support authentication with system user 3. Operate Support export screenshots Support open terminal
2023/05/31	1.12	Add the installation from top bar icon Add the note for docker Add Q&A for opcua certificate
2023/04/12	1.11	Add how to import/export Settings config by command line interface
2023/02/24	1.10	1. Add how to backup eMMC rootfs to Micro SDCard and restore system 2. Add how to create .swu image and restore system 3. Add change logo chapter 4. Add how to start Weston(desktop service) and startup Application as non-root user
2023/01/30	1.9	1. Add the FTP page of GUI Settings tool 2. Add Static Page option in Startup
2022/11/09	1.8	1. Add the Backup page of GUI Settings tool 2. Update Gesture
2022/10/06	1.7	1. Update the Update page of GUI Settings tool 2. Update Gesture 3. Add Watchdog chapter
2022/09/14	1.6	1. Add USB storage chapter.
2022/08/16	1.5	1. Change the Startup to System page of GUI Settings tool 2. Add readonly and COM setting in System page of GUI Settings tool
2022/07/28	1.4	1. Add Yocto 3.3

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

		2. Add more detailed information for "Install Yocto Software"
2022/07/04	1.3	Update the method of install Yocto 3.0 to emmc.
2022/06/17	1.2	Add the OPCUA page of GUI Settings tool
2022/05/24	1.1	Add the detailed information of GUI Settings tool
2022/05/19	1.0	First version

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

Table of Contents

1.	ARM Yocto	7
2.	ARM Yocto Software Support	7
	2.1. System Default Software	7
	2.3. Install Yocto Software	9
	2.4 First login	13
3.	TPC-100W Module Extension	17
	3.1 Module Information	17
	3.2 The Configuration and Connection of WIFI Module	17
	3.3 The Configuration and Connection of Bluetooth Module	21
4.	Time and Date Setting	23
5.	CAN Setting	24
6.	Brightness Setting	25
7.	COM Setting	25
8.	Network Setting	27
9.	Firewall Setting	28
10.	Device Information	29
11.	Backing up system	30
	11.1 Backing up eMMC rootfs to Micro SD Card	30
	11.2 Backing up eMMC Root Filesystem to USB drive	31
	11.2.1 USB Backup-Restore Mode in EFI mode	32
	11.2.2 Generate a signed Update file (.swu image)	33
	11.3 Important Considerations for Restoring the File System	35
	11.3.1 Keys, Certificates, and Identity Files Removed During Backup	35
	11.3.2 Actions Required After System Restore	36
12.	GUI Settings Tool	37
	12.1 Introduction of Advantech TPC-100W Settings Tool	37
	12.2 Platform Supported	37
	12.3 How to Use TPC-100W Settings Tool	37

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12.4 How to Use Gesture	79
12.5 How to Take Screenshots	82
13. Weston Keyboard Shortcuts	84
14. Playing video	84
15. USB storage	84
16. Watchdog	84
17. Change boot logo	85
18. FRAM Testing	86
19. About LICENSE	87
20. Appendix	88

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

1. ARM Yocto

TPC-100W platform is an embedded system with Linux Yocto 3.0/3.3/4.0/4.2. It contains system-required commands and drivers ready. The Yocto Project is an open source collaboration project that helps developers create custom Linux-based systems that are designed for embedded products regardless of the product's hardware architecture. Yocto Project provides a flexible toolset and a development environment that allows embedded device developers across the world to collaborate through shared technologies, software stacks, configurations, and best practices used to create these tailored Linux images.

2. ARM Yocto Software Support

2.1. System Default Software

ARM Yocto 4.2 support complete IIoT function as default including:

- SSH
- Wayland Terminal
- Qt6.5.0
- Gstreamer1.22.5
- Imx-gpu-viv 6.4.11.p2.2
- Wayland 1.22.0
- Weston 12.0.4.imx
- Weston-xwayland 12.0.4.imx
- VNC Viewer
- TPM SLB9670
- GUI Settings Tool
- Recovery
- Security boot
- Watchdog
- Openssh-sftp-server 10.2p1
- Chromium 119.0.6045.199

ARM Yocto 4.0 support complete IIoT function as default including:

- SSH
- Wayland Terminal
- Qt6.4.3
- Gstreamer1.20.3
- Imx-gpu-viv 6.4.3.p4.8
- Wayland 1.20.0
- Weston 10.0.3.imx
- Weston-xwayland 10.0.3.imx
- VNC Viewer
- TPM SLB9670
- GUI Settings Tool
- Recovery
- Watchdog
- Openssh-sftp-server 8.9p1
- Chromium 101.0.4951.54

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

ARM Yocto 3.3 support complete IloT function as default including:

- SSH
- Wayland Terminal
- Qt5.15.2
- Gstreamer1.18.5
- Imx-gpu-viv 6.4.3.p2.6
- Wayland 1.18.0
- Weston 9.0.0.imx
- Weston-xwayland 9.0.0.imx
- VNC Viewer
- TPM SLB9670
- GUI Settings Tool
- Recovery
- Watchdog
- Openssh-sftp-server 8.5p1
- Chromium 96.0.4664.110

ARM Yocto 3.0 support complete IloT function as default including:

- SSH
- Wayland Terminal
- Qt5.15.0
- Gstreamer1.0
- Imx-gpu-viv 6.4.3.p1.4
- Wayland 1.18.0
- Weston 9.0.0.imx
- Weston-xwayland 9.0.0.imx
- VNC Viewer
- TPM SLB9670
- GUI Settings Tool
- Openssh-sftp-server 8.5p1
- Chromium 96.0.4664.110

2.2. GPU Accelerations

Vivante GPU accelerations for Wayland; The Hantro Video Processing Unit supports the following decoders:

- video/x-h265
- video/x-vp9
- video/x-h264
- video/x-vp8
- video/x-vp6-flash
- video/mpeg
- video/x-h263
- video/x-flash-video
- video/x-divx
- video/x-xvid
- video/x-cavs
- video/x-wmv
- video/x-pn-realvideo
- video/x-raw

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

2.3. Install Yocto Software

Firstly, burning image to microSD card and instruction as below. If you already have the microSD card with Yocto image, you can go to the second part directly.

Note. Recommend the microSD card is more than 16GB storage interface to avoid not enough storage space. If you install Yocto 4.2, please read [\[1\]](#) first.

If your PC is Linux environment:

1. Prepare the Linux environment that can use “dd” command. (Below uses ubuntu 18.04 as example.)
2. Use “sudo dd if=imgfile of=SDpartition bs=4096” to burn the img file to your microSD card. (Note: You should check which partition is your microSD card firstly and you can format your microSD card before this step to avoid compatibility issue.)

```
$ sudo dd if=TPC-100W-2g-v1.5.img of=/dev/sdc bs=4096
```

If your PC is Windows:


1. Use the Rufus to burn the img file to your microSD card. You can refer to below link for the usage of the tools.

Rufus:

<https://rufus.ie/en/>


Burn image to microSD steps :

1. Launch Rufus
2. Choose SD card device

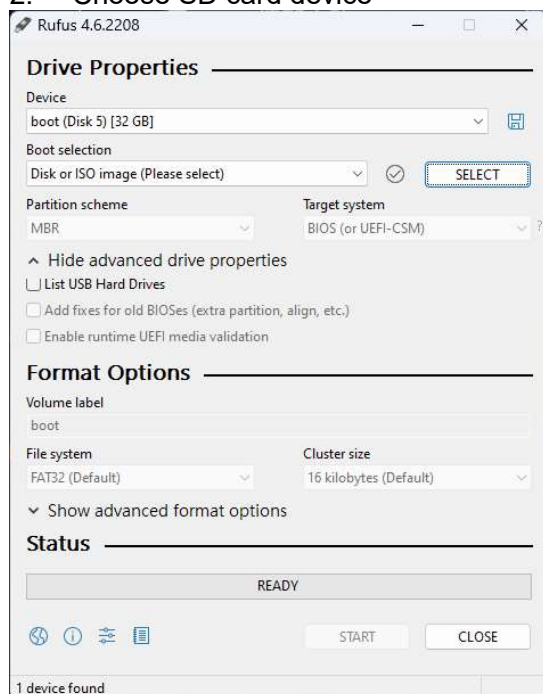

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>


3. Click SELECT to select img file

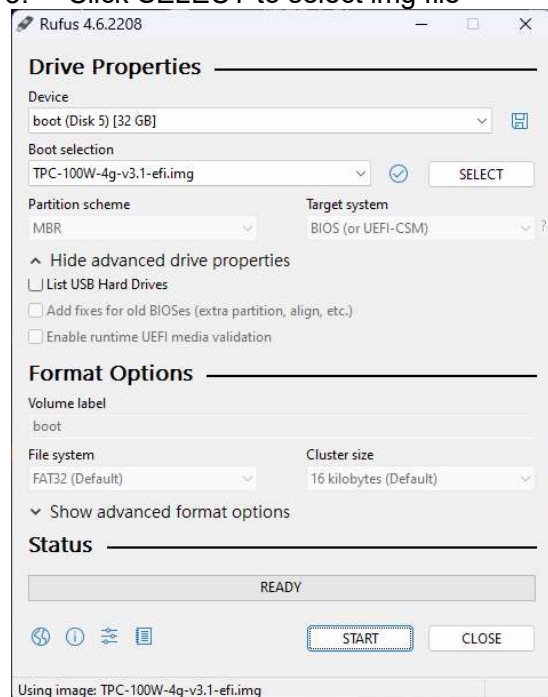


4. Click START to begin the image writing process

Second, after image is put into microSD card, use microSD card to update the image.


1. Remove the screws from back cover. Due to COM port cover need to put down, then slide up.

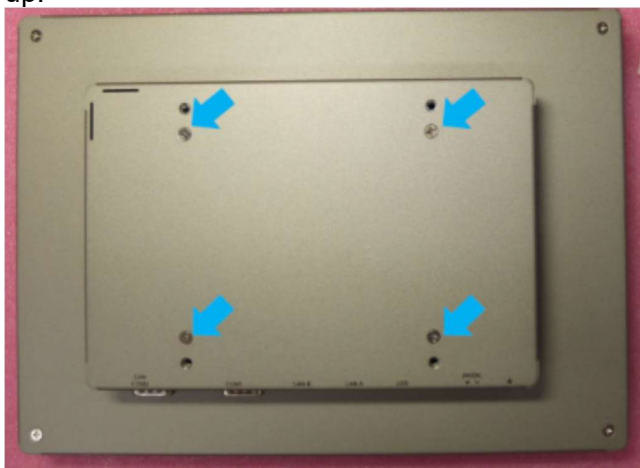


Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

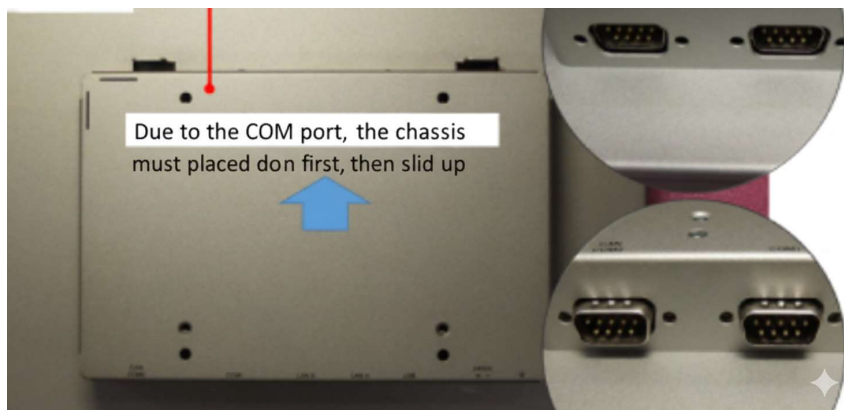

2. Insert microSD card, then adjust switch as below order (red remark).

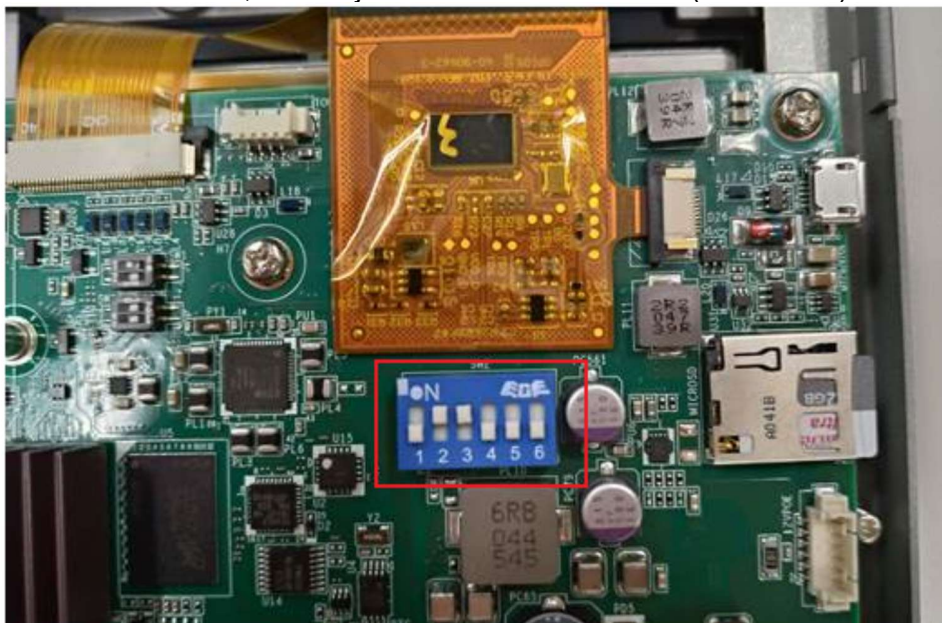


3. Power on the system. **SD card is used only for installing image to eMMC. Starting from Yocto 4.2, installation is automatic. For prior versions, you can touch the green icon in top bar to start installation without any following commands and keyboard.**

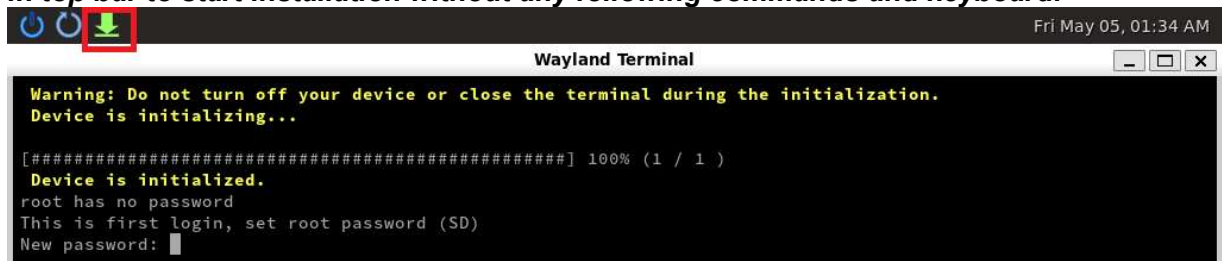

After installation, you just power off device and skip to 7.

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

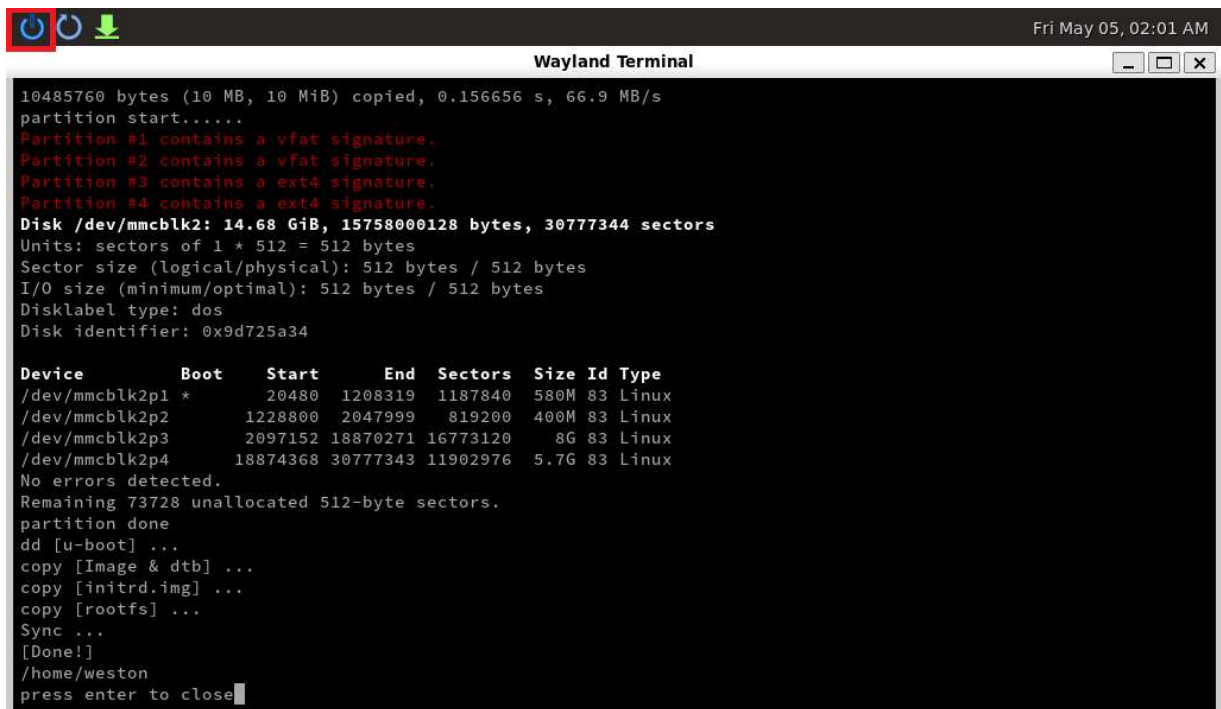

```

10485760 bytes (10 MB, 10 MiB) copied, 0.156656 s, 66.9 MB/s
partition start.....
Partition #1 contains a vfat signature.
Partition #2 contains a vfat signature.
Partition #3 contains a ext4 signature.
Partition #4 contains a ext4 signature.
Disk /dev/mmcblk2: 14.68 GiB, 15758000128 bytes, 30777344 sectors
Units: sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
Disklabel type: dos
Disk identifier: 0x9d725a34

Device      Boot    Start        End    Sectors    Size Id Type
/dev/mmcblk2p1 *      20480    1208319    1187840    580M 83 Linux
/dev/mmcblk2p2          1228800    2047999     819200    400M 83 Linux
/dev/mmcblk2p3          2097152    18870271   16773120     8G 83 Linux
/dev/mmcblk2p4        18874368    30777343   11902976    5.7G 83 Linux
No errors detected.
Remaining 73728 unallocated 512-byte sectors.
partition done
dd [u-boot] ...
copy [Image & dtb] ...
copy [initrd.img] ...
copy [rootfs] ...
Sync ...
[Done!]
/home/weston
press enter to close

```

4. (Optional for Yocto3.0)After login the system with desktop UI, open Terminal and input below commands. (This will close the desktop UI because it will cause the next process abnormally.)


```
sh-5.0# systemctl stop weston@root.service
```

5. Login the system with root account if need and enter below commands.

```


root@eamb99918:~# cd /mk_inand/scripts
root@eamb99918:/mk_inand/scripts# ./mkinand-linux.sh /dev/mmcblk2

```

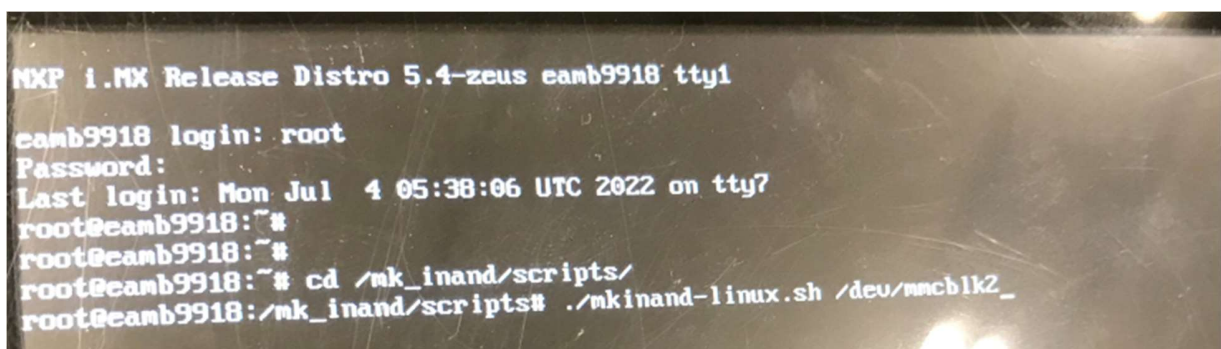

6. Waiting for update is finished. Then power off the system.
7. Adjust switch as below location, remove microSD card.

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

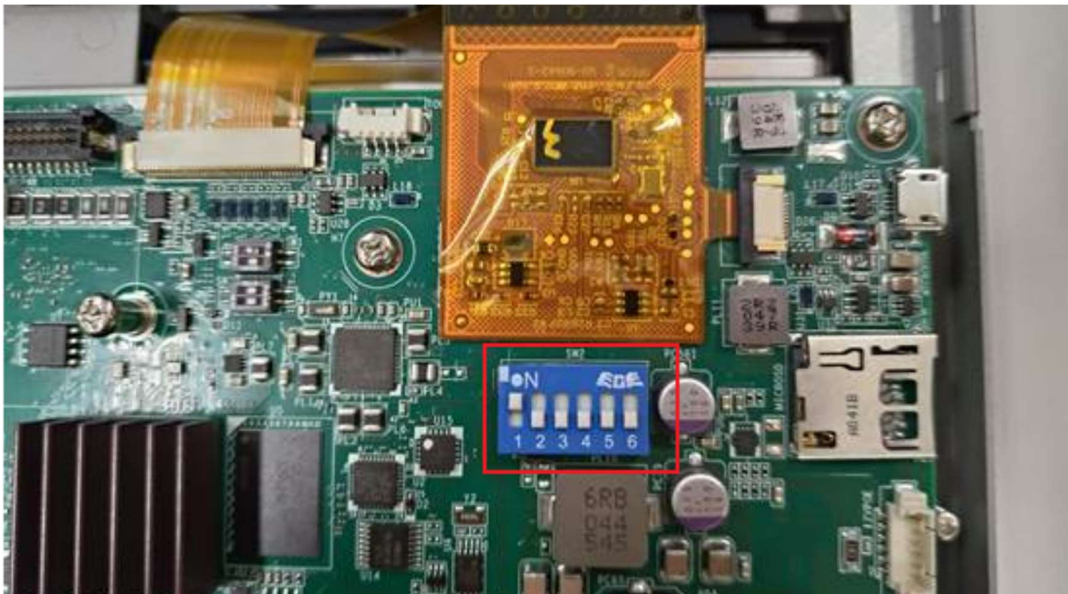


8. Power on again from eMMC. Then it will ask you to setup the password of operator system in eMMC. Please refer to chapter 2.4 First login for more information.

2.4 First login

If you are the first time to login the system, you would need to setup the password. Please connect the physical keyboard or use on screen keyboard and use the account “root” to login.

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>


If your screen displays this, please enter the default password “**yoctolinux123**”, then enter your new root password twice. You will also need to create a user account. Please note that the password must be **at least 6 characters long** and include **at least one uppercase letter, one lowercase letter**, and **one digit**. After setup password, it would auto reboot after 5 seconds.

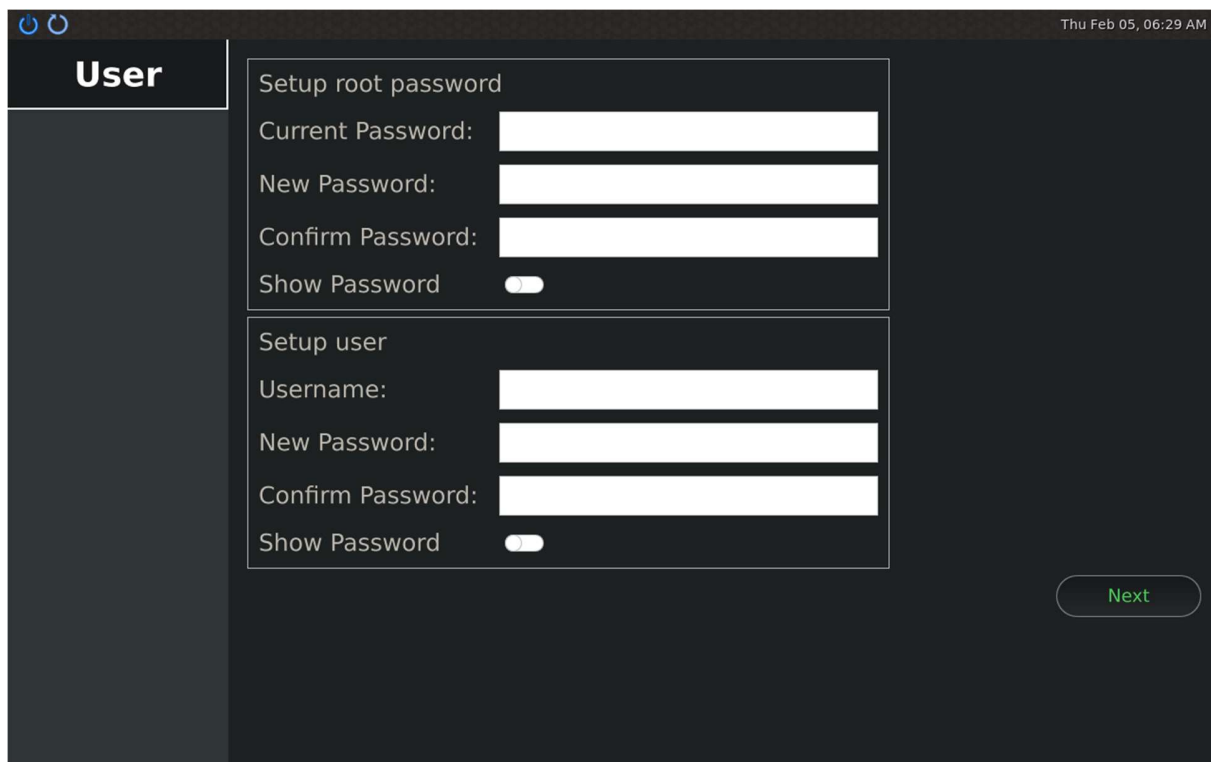


The screenshot shows a dark-themed user setup interface. On the left is a sidebar with a 'User' header. The main area contains two sections: 'Setup root password' and 'Setup user'. Each section has input fields for 'Current Password', 'New Password', and 'Confirm Password', along with a 'Show Password' toggle switch. A green 'Next' button is located at the bottom right. The top right corner displays the date and time: 'Thu Feb 05, 06:29 AM'.

If your screen displays this, please input the password you want to use 2 times for root. After setup password, it would auto reboot after 5 seconds.

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

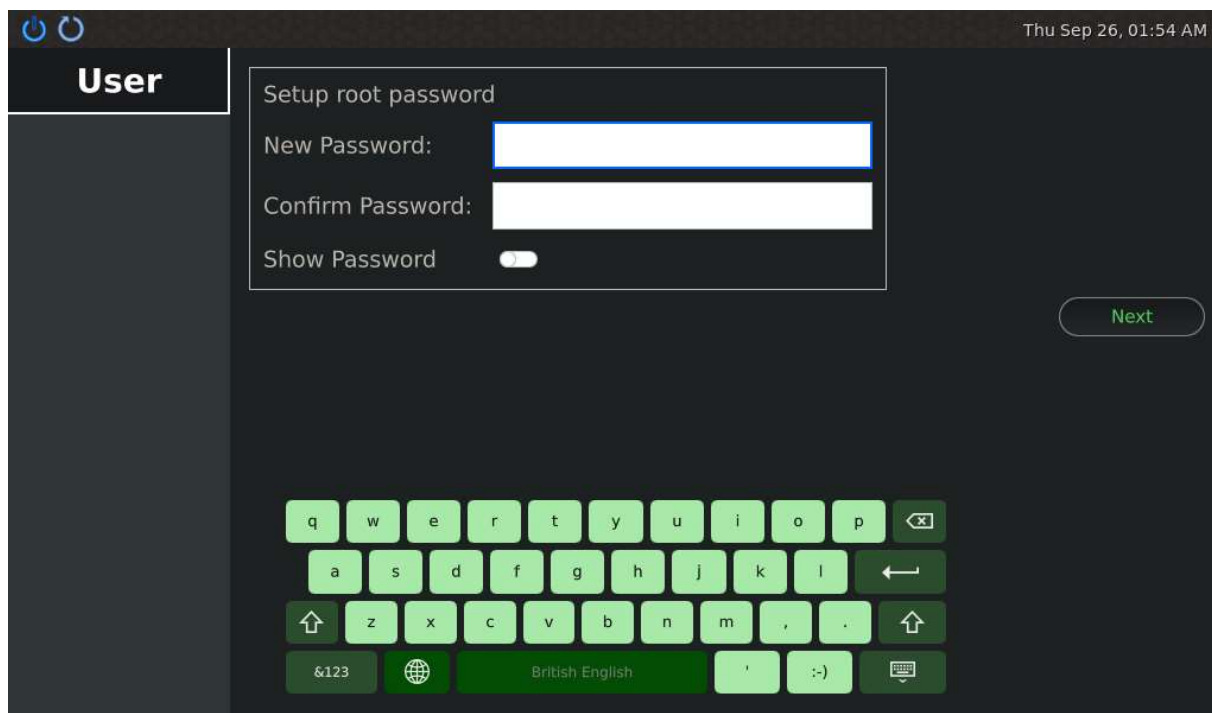

If your screen displays this, please input the password you want to use 2 times for root. Then it would auto reboot after 5 seconds.

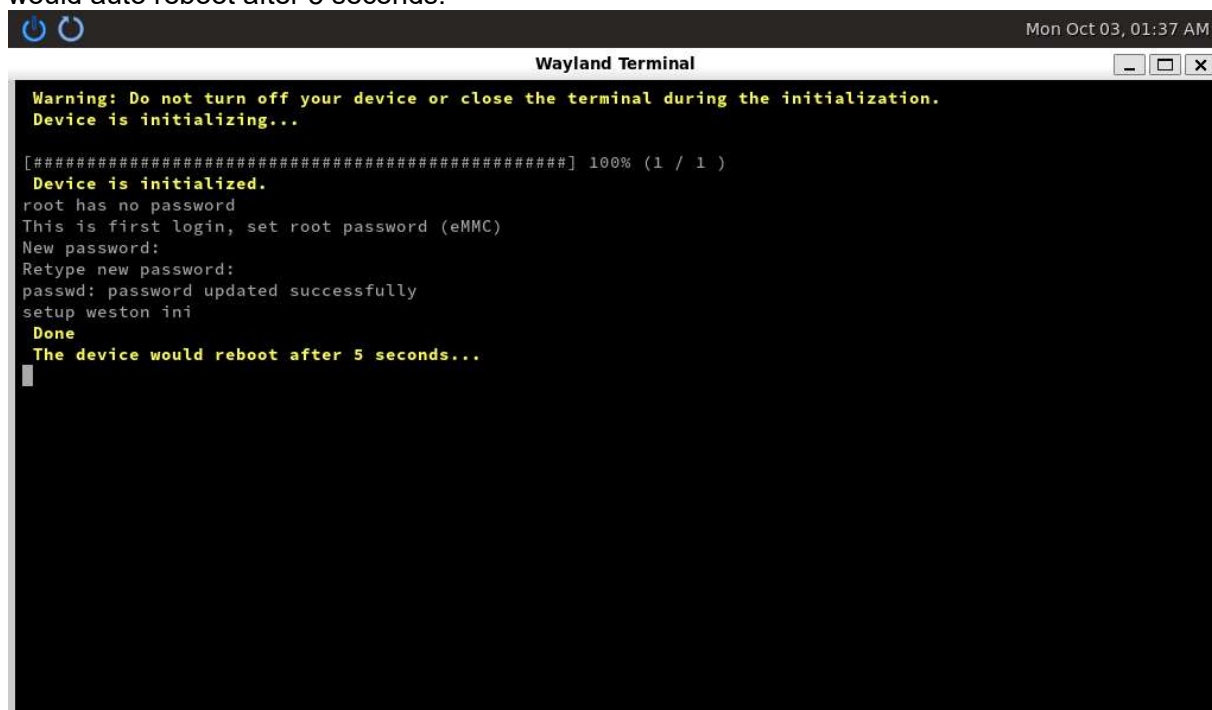

If your screen displays this, please use the account “root” to login, Then you have to input the password you want to use 2 times and reboot the system.

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

```

NXP i.MX Release Distro 5.4-zeus eamb9918 tty1

eamb9918 login: root
You are required to change your password immediately (administrator enforced)
New password:
Retype new password:
root@eamb9918:~# reboot_

```

Now you can use the Yocto system with GUI.


[1] You can get the files from Yocto 4.2.

File name	Target device	Description
TPC-100W-4g-v3.X-fw.img	SD	Automatically install firmware(u-boot).
TPC-100W-4g-v3.X.img (non-EFI boot)	SD	Manually install firmware(u-boot), Linux kernel and root file system to EMMC.
TPC-100W-4g-v3.X-efi.img (EFI boot)	SD	Automatically install firmware(u-boot), EFI file, Linux kernel and root file system to EMMC
TPC-100W-4g-v3.X.iso (EFI boot)	USB	Automatically Install EFI file, Linux kernel and root file system to EMMC.

Only in Yocto 4.2, TPC-100W can support USB installation and secure boot in EFI boot. As with other X86 architectures, there is the following fixed order of boot devices.

order	device
#1	USB#1
#2	SD
#3	EMMC

If TPC-100W is plugged into two USB storage devices during USB installation, the USB storage burned TPC-100W-4g-v3.X.iso needs to be inserted into the high priority port.

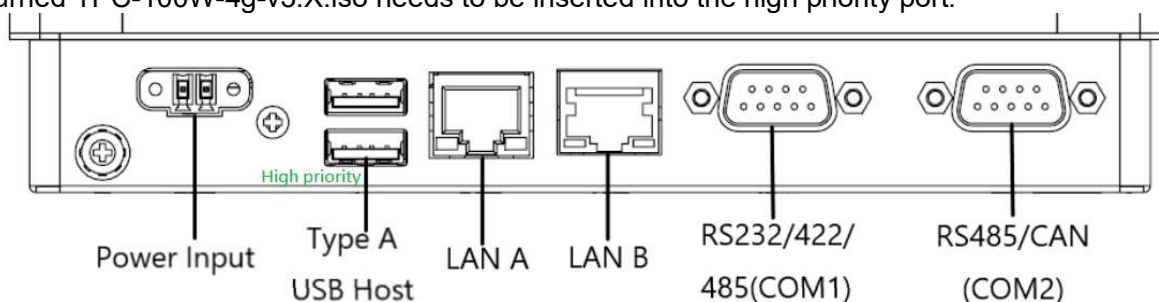

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

3. TPC-100W Module Extension

TPC-100W supports one M.2 E-Key slot which allows users to expand the functionality. There are pre-configured Wi-Fi modules ready to use. This chapter will take Wi-Fi module as an example to demonstrate how to use a module on TPC-100W.

3.1 Module Information

- P/N: 968DD00086
M.2 2230 RYWDB02 802.11a/b/g/n+BT5
Cable: 17cm~20cm
- P/N: EWM-W194M201E
M.2 2230 SDIO-UART Module IEEE 802.11ac/a/b/g/n, Bluetooth 5.0, 2T2R
Cable: 17cm~20cm

3.2 The Configuration and Connection of WIFI Module

Configure by Command mode

1. Check the WIFI device exists.

```
$ ifconfig wifi
wifi0      Link encap:Ethernet HWaddr 88:da:1a:76:38:bc
          inet6 addr: fe80::8ada:1aff:fe76:38bc/64 Scope:Link
          UP BROADCAST MULTICAST DYNAMIC MTU:1500 Metric:1
          RX packets:0 errors:0 dropped:0 overruns:0 frame:0
          TX packets:0 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:0 (0.0 B) TX bytes:0 (0.0 B)

or

$ ifconfig mlan0 (or wlan0)
mlan0: flags=-28669<UP,BROADCAST,MULTICAST,DYNAMIC> mtu 1500
          ether 48:e7:da:78:20:01 txqueuelen 1000 (Ethernet)
          RX packets 0 bytes 0 (0.0 KiB)
          RX errors 0 dropped 0 overruns 0 frame 0
          TX packets 0 bytes 0 (0.0 KiB)
          TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0
```

Or you can use below command to check.

```
ls /sys/class/net/
can0 can1 eth0 eth1lo wifi0 (or mlan0, wlan0)
```

If the WIFI node exists, the WIFI driver works normally.

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

2. Enable WIFI.

```
$ connmanctl technologies
/net/connman/technology/p2p
    Name = P2P
    Type = p2p
    Powered = False
    Connected = False
    Tethering = False
/net/connman/technology/wifi
    Name = WiFi
    Type = wifi
    Powered = True
    Connected = False
    Tethering = False
/net/connman/technology/bluetooth
    Name = Bluetooth
    Type = bluetooth
    Powered = True
    Connected = False
    Tethering = False
/net/connman/technology/ethernet
    Name = Wired
    Type = ethernet
    Powered = True
    Connected = True
    Tethering = False
```

If “Powered = True”, it means WIFI is enabled.

If WIFI is disabled, please use below command to enable it.

```
$ connmanctl enable wifi
```

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

3. Scanning WIFI hotspot.

```
$ connmanctl scan wifi
$ connmanctl services
*AO Wired                ethernet_c400ad7d091c_cable
  advanxxx                wifi_88da1a7638bc_616476616e74656368_managed_psk
  TP-LINK_A990            wifi_88da1a7638bc_54502d4c494e4b5f41393930_managed_psk
  QA-Test                 wifi_88da1a7638bc_51412d54657374_managed_psk
  TP-LINK_603854           wifi_88da1a7638bc_54502d4c494e4b5f363033383534_managed_none
  PCCWS_LOCAL             wifi_88da1a7638bc_50434357535f4c4f43414c_managed_psk
  QA-Test-5G              wifi_88da1a7638bc_51412d546573742d3547_managed_psk
  php                     wifi_88da1a7638bc_706870_managed_psk
                           wifi_88da1a7638bc_hidden_managed_none
                           wifi_88da1a7638bc_hidden_managed_psk
  KOALXA-AP-2.4           wifi_88da1a7638bc_4b4f414c58412d41502d322e34_managed_psk
  PCCWS_GDCN              wifi_88da1a7638bc_50434357535f4744434e_managed_psk
  ChinaNet-APUU           wifi_88da1a7638bc_4368696e614e65742d41505555_managed_psk
  DIRECT-8CAXA-JIANFENGmsMZ wifi_88da1a7638bc_4449524543542d38434158412d4
                           a49414e46454e476d734d5a_managed_psk
  HP-HOTSPOT-98-LaserJet M1218 wifi_88da1a7638bc_48502d484f5453504f542d39382d4c
                           617365724a6574204d31323138_managed_none
  KoalXARd@6              wifi_88da1a7638bc_4b6f616c584152644036_managed_psk
  TP-LINK_F8FE            wifi_88da1a7638bc_54502d4c494e4b5f46384645_managed_none
  KOALXA-AP-5             wifi_88da1a7638bc_4b4f414c58412d41502d35_managed_psk
```

4. Connect to WIFI hotspot.

If the WIFI hotspot needs password, it will remind you to input.

```
connmanctl
connmanctl> agent on
Agent registered
connmanctl> connect wifi_88da1a7638bc_616476616e74656368_managed_psk
Agent RequestInput wifi_88da1a7638bc_616476616e74656368_managed_psk
  Passphrase = [ Type=psk, Requirement=mandatory ]
Passphrase? *****
Connected wifi_88da1a7638bc_616476616e74656368_managed_psk
connmanctl> quit
```

5. Now you can browse the internet by WIFI.

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

6. Disable WIFI. Require disconnect WiFi before disable WiFi, otherwise connmanctl would be abnormal.

```
$ connmanctl disconnect wifi_88da1a7638bc_616476616e74656368_managed_psk
$ connmanctl disable wifi
```

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

3.3 The Configuration and Connection of Bluetooth Module

Configure by Command mode

1. Check the Bluetooth device status.

```
root@Qing: ~# hciconfig
hci0: Type: BR/EDR Bus: USB
BD Address: 00:1A:7D:DA:71:13 ACL MTU: 310:10 SCO MTU: 64:8
UP RUNNING
RX bytes:574 acl:0 sco:0 events:30 errors:0
TX bytes:368 acl:0 sco:0 commands:30 errors:0
```

If there is no device showed, it means no driver or device.

2. Enable Bluetooth service.

```
systemctl status bluetooth
## If it's not active, please execute the following command
systemctl enable bluetooth.service
systemctl start bluetooth
```

```
connmanctl enable bluetooth
#or
# hciconfig hci0 up
```

3. Open Bluetooth.

```
bluetoothctl

[bluetooth]# power on
[bluetooth]# pairable on
```

4. Scanning Bluetooth device.

```
## start scanning
[bluetooth]# scan on
Discovery started
[CHG] Controller 00:19:88:5E:10:B1 Discovering: yes
[NEW] Device 98:39:8E:1B:D8:88 Galaxy A5 (2016)
[CHG] Device 98:39:8E:1B:D8:88 RSSI: -86
Now, Copy the MAC Address of your PC
```

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

Start scanning

Stop scanning:

```
## stop scanning
[bluetooth]# scan off
```

Please record the MAC address you want to connect.

5. Pair and connect to the Bluetooth device.

Pair the device by MAC address. If the device is paired before, you can ignore this.

```
[bluetooth]# pair 98:39:8E:1B:D8:88
Attempting to pair with 98:39:8E:1B:D8:88
[CHG] Device 98:39:8E:1B:D8:88 Connected: yes
Request confirmation
[agent] Confirm passkey 117022 (yes/no):
```

Connect the device by MAC address.

```
[bluetooth]# connect 98:39:8E:1B:D8:88
Attempting to connect to 98:39:8E:1B:D8:88
[CHG] Device 98:39:8E:1B:D8:88 Connected: yes
Connection successful
[CHG] Device 98:39:8E:1B:D8:88 ServicesResolved: yes
```

Trust the device by MAC address.

```
[bluetooth]# trust 98:39:8E:1B:D8:88
```

Now the connection is successful. You can exit the bluetoothctl.

```
[bluetooth]# quit
```

6. Using Obex profile to test the file transmission by Bluetooth.

```
$ echo "helloworld" > /home/root/test.txt
$ export $(dbus-launch)
$ /usr/libexec/bluetooth/obexd -r /home/root -a -d &
```

```
obexctl
[obex]# connect 98:39:8E:1B:D8:88
[obex]# send <file>
[obex]# quit
```

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

4. Time and Date Setting

Set system time (2021/10/07 09:00:00):

```
sh-5.0# date -s "2021/10/07 09:00:00"
```

Synchronize time from the NTP server:

```
sh-5.0# ntpdate <NTPSERVERIP>
```

Reset RTC hardware clock time (use current system time):

```
sh-5.0# hwclock -w
```

Reset system time (use RTC hardware clock time):

```
sh-5.0# hwclock -s
```

Set system time zone (use Taipei time):

```
sh-5.0# cp /usr/share/zoneinfo/Asia/Taipei /etc/localtime
sh-5.0# sync
```

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

5. CAN Setting

TPC-100W support FINTEK CAN. The below table shows the detailed information of CAN on TPC-100W and here we list the basic command to use CAN on TPC-100W.

HW	DEVICE	MODE
Fintek CAN0	can0	socket can

Setting: Open CAN device (The following examples will configure “can0” to bit-rate 250000, sample-point 0.875 and error restart with 100ms.)

```
sh-5.0# ifconfig can0 down
sh-5.0# ip link set can0 type can restart-ms 100
sh-5.0# ip link set can0 type can bitrate 250000 sample-point 0.875
sh-5.0# ip link set can0 type can berr-reporting on
sh-5.0# ifconfig can0 txqueuelen 1000
sh-5.0# ifconfig can0 up
```

We'll use “candump” to receive data, “cangen” & “cansend” to send data. The “cangen” will send random data & ID and “cansend” will send specific data & ID to CANBUS.

Send message (“123#R”) to can0:

```
sh-5.0# cansend can0 123#R
```

Receive message from can0:

```
sh-5.0# candump can0
```

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

6. Brightness Setting

1. Get brightness value:

```
sh-5.0# cat /sys/class/backlight/lvds_backlight/@0/brightness
```

2. Set brightness value: You can set the value from 0~100. Please notice that value 0 will let the screen be black.

Note: If the value is 0~4, it will be reset to 5 by systemd-backlight service after reboot.

```
Value 1
sh-5.0# echo 1 >> /sys/class/backlight/lvds_backlight/@0/brightness
Value 100
sh-5.0# echo 100 >> /sys/class/backlight/lvds_backlight/@0/brightness
```

Note: You have to save brightness in systemd-backlight service if you cut off the power directly. At the next boot, systemd-backlight service would restore brightness to the previous state.

```
sh-5.0# /lib/systemd/systemd-backlight save backlight:lvds_backlight@0
sh-5.0# sync
```

7. COM Setting

TPC-100W supports 2 COM port. One is RS232/422/485 and another is RS485. Below commands can be used to change the settings. Please note these settings will back to default after reboot. If you want to keep the settings after reboot, you can use "GUI Settings Tool". (Please check chapter 9.3.5 for more information.)

Set COM1 as RS232 mode and baud rate 115200.

```
sh-5.0# echo out > /sys/class/gpio/gpio85/direction
sh-5.0# echo out > /sys/class/gpio/gpio86/direction
sh-5.0# echo 1 > /sys/class/gpio/gpio85/value
sh-5.0# echo 0 > /sys/class/gpio/gpio86/value
sh-5.0# stty -F /dev/ttymx0 -echo -onlcr 115200
```

Set COM1 as RS422 mode and baud rate 115200.

```
sh-5.0# echo out > /sys/class/gpio/gpio85/direction
sh-5.0# echo out > /sys/class/gpio/gpio86/direction
sh-5.0# echo 1 > /sys/class/gpio/gpio85/value
sh-5.0# echo 1 > /sys/class/gpio/gpio86/value
sh-5.0# stty -F /dev/ttymx0 -echo -onlcr 115200
```

Set COM1 as RS485 mode and baud rate 115200.

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

```
sh-5.0# echo out > /sys/class/gpio/gpio85/direction
sh-5.0# echo out > /sys/class/gpio/gpio86/direction
sh-5.0# echo 0 > /sys/class/gpio/gpio85/value
sh-5.0# echo 1 > /sys/class/gpio/gpio86/value
sh-5.0# stty -F /dev/ttymx0 -echo -onlcr 115200
```

Set COM2 baud rate 115200.

```
sh-5.0# stty -F /dev/ttymx2 -echo -onlcr 115200
```

You need to set the flags of “struct serial_rs485” for hardware design before v1.6 of image. The logical level for RTS pin equal to 0 when sending and equal to 1 after sending. Here is the sample code as below.

```
#include <unistd.h>
#include <stdio.h>
#include <stdlib.h>
#include <string.h>
#include <fcntl.h>
#include <errno.h>
#include <linux/serial.h>
#include <sys/ioctl.h> //Include definition for RS485 ioctls: TIOCGRS485 and TIOCSRS485

int main(int argc, char *argv[])
{
    struct serial_rs485 rs485conf;
    char* dev_path = "/dev/ttymx2"; //change to /dev/ttymx0 for COM1
    int fd = open(dev_path, O_RDWR);
    if (fd < 0) {
        fprintf(stderr, "ERROR Can't open the device %s (%s)\n", dev_path, strerror(errno));
        goto end;
    }
    if (ioctl(fd, TIOCGRS485, &rs485conf) < 0) {
        fprintf(stderr, "ERROR Can't get the device %s config (%s)\n", dev_path, strerror(errno));
        goto end;
    }
    rs485conf.flags |= SER_RS485_RTS_AFTER_SEND; //Set logical level for RTS pin equal to 0 when sending
    rs485conf.flags &= ~SER_RS485_RTS_ON_SEND; //Set logical level for RTS pin equal to 1 after sending
    rs485conf.flags &= ~SER_RS485_RX_DURING_TX; //Do not send data while receiving data
    if (ioctl(fd, TIOCSRS485, &rs485conf) < 0) {
        fprintf(stderr, "ERROR Can't set the device %s config to rs485 (%s)\n", argv[1], strerror(errno));
        goto end;
    }
}
end:
if (fd > 0) close(fd);
return 0;
}
```

You can reference “[RS485 Serial Communications](#)” for more details.

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

8. Network Setting

TPC-100W using ConnMan to manage network. Below commands can be used to change the settings.

1. Get Network services:

```
sh-5.0# connmanctl services
*AO Wired          ethernet_c400ad971b0b_cable
```

2. Set Network IP address:

```
sh-5.0# connmanctl config ethernet_{your_service} --ipv4 manual 192.168.10.2 255.255.255.0 192.168.10.1
or
sh-5.0# connmanctl config ethernet_{your_service} --ipv4 dhcp
```

3. Set Network domain name servers:

```
sh-5.0# connmanctl config ethernet_{your_service} --nameservers 8.8.8.8 4.4.4.4
```

TPC-100W has two LAN to connect to different local networks. It maybe connects failure due to routing table. For example, LAN A (eth0) is local network without internet and LAN B (eth1) is local network with internet.

```
root@eamb9918-cc827f3bbcf5:~# route -n
Kernel IP routing table
Destination      Gateway          Genmask         Flags Metric Ref    Use Iface
0.0.0.0          192.168.1.1     0.0.0.0         UG      0      0      0 eth0
0.0.0.0          192.168.1.1     0.0.0.0         UG      10     0      0 eth0
0.0.0.0          172.17.9.254    0.0.0.0         UG      10     0      0 eth1
172.17.8.0       0.0.0.0         255.255.254.0   U        0      0      0 eth1
172.17.9.254     0.0.0.0         255.255.255.255 UH        0      0      0 eth1
172.17.9.254     0.0.0.0         255.255.255.255 UH      10     0      0 eth1
172.20.1.100     172.17.9.254    255.255.255.255 UGH       0      0      0 eth1
172.20.1.100     172.17.9.254    255.255.255.255 UGH      10     0      0 eth1
172.22.2.99      172.17.9.254    255.255.255.255 UGH       0      0      0 eth1
172.22.2.99      172.17.9.254    255.255.255.255 UGH      10     0      0 eth1
192.168.1.0       0.0.0.0         255.255.255.0   U        0      0      0 eth0
192.168.1.1       0.0.0.0         255.255.255.255 UH        0      0      0 eth0
192.168.1.1       0.0.0.0         255.255.255.255 UH      10     0      0 eth0
root@eamb9918-cc827f3bbcf5:~# connmanctl services
*AR Wired          ethernet_cc827f3bbcf5_cable
*AR Wired          ethernet_aecfb9f4d529_cable
```

You can use move-before / move-after of connman to adjust routing table.

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

```

root@eamb9918-cc827f3bbcf5:~# connmanctl move-before ethernet_aecfb9f4d529_cable
ethernet_cc827f3bbcf5_cable
Moved ethernet_aecfb9f4d529_cable before ethernet_cc827f3bbcf5_cable
root@eamb9918-cc827f3bbcf5:~# route -n
Kernel IP routing table
Destination      Gateway         Genmask         Flags Metric Ref    Use Iface
0.0.0.0          172.17.9.254   0.0.0.0         UG      0      0      0 eth1
0.0.0.0          172.17.9.254   0.0.0.0         UG      10     0      0 eth1
172.17.8.0       0.0.0.0        255.255.254.0   U       0      0      0 eth1
172.17.9.254     0.0.0.0        255.255.255.255 UH      0      0      0 eth1
172.17.9.254     0.0.0.0        255.255.255.255 UH      10     0      0 eth1
172.20.1.100     172.17.9.254   255.255.255.255 UGH     0      0      0 eth1
172.20.1.100     172.17.9.254   255.255.255.255 UGH     10     0      0 eth1
172.22.2.99      172.17.9.254   255.255.255.255 UGH     0      0      0 eth1
172.22.2.99      172.17.9.254   255.255.255.255 UGH     10     0      0 eth1
192.168.1.0      0.0.0.0        255.255.255.0   U       0      0      0 eth0
192.168.1.1      0.0.0.0        255.255.255.255 UH      0      0      0 eth0
192.168.1.1      0.0.0.0        255.255.255.255 UH      10     0      0 eth0

```

Please reference <https://wiki.archlinux.org/title/ConnMan> for more details.

9. Firewall Setting

Linux Yocto image for TPC-100W enable 22 SSH, 80 HTTP, 443 HTTPS, 8080 SWUPDATE by default for usage. You can follow below command to change it.

1. Check the list of iptables.

```
sh-5.0# iptables -L
```

2. Modify the /etc/iptables/iptables.rules and reboot the system.

```

# Generated by iptables-save v1.8.3 on Wed Feb 23 10:16:51 2022
*filter
:INPUT DROP [3652:224108]
:FORWARD ACCEPT [0:0]
:OUTPUT ACCEPT [8:1414]
-A INPUT -i lo -j ACCEPT
-A INPUT -m state --state RELATED,ESTABLISHED -j ACCEPT
-A INPUT -p tcp -m state --state NEW -m tcp --dport 22 -j ACCEPT
-A INPUT -p tcp -m state --state NEW -m tcp --dport 80 -j ACCEPT
-A INPUT -p tcp -m state --state NEW -m tcp --dport 443 -j ACCEPT
-A INPUT -p tcp -m state --state NEW -m tcp --dport 8080 -j ACCEPT
-A INPUT -p icmp -m icmp --icmp-type 8 -j ACCEPT
COMMIT
# Completed on Wed Feb 23 10:16:51 2022

```

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

10. Device Information

TPC-100W provide atcc.info to get device information. Below commands can be used to show the information.

Get Device Information :

```
sh-5.0# atcc.info
Board Information:
  BOARD_VERSION: 1.0
  SERIAL_NUMBER: 123456789
  MANUFACTURING_TIME: 2023/02/16 00:00:00
Image Information:
  NAME: "NXP i.MX Release Distro"
  VERSION: "5.10-hardknott (hardknott)"
  VERSION_ID: 5.10-hardknott
  PRETTY_NAME: "NXP i.MX Release Distro 5.10-hardknott (hardknott)"
  IMAGE_VERSION: "TPC-100W-Yocto3.3.3-v1.0"
  KERNEL_VERSION: "Linux version 5.10.72"
  UBOOT_VERSION: "U-Boot 2021.04"
```

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

11. Backing up system

There are two ways to back up current system.

Note:


Please disable read-only system first.

Note:

Only the system root filesystem is backed up. Mount points and the "/userdata" partition are not included.

11.1 Backing up eMMC rootfs to Micro SD Card

1. Clone the system but with clean settings, such as re-create the ssh-key for other device,default hostname....etc..
2. Insert microSD card, then adjust switch as below order (red remark).

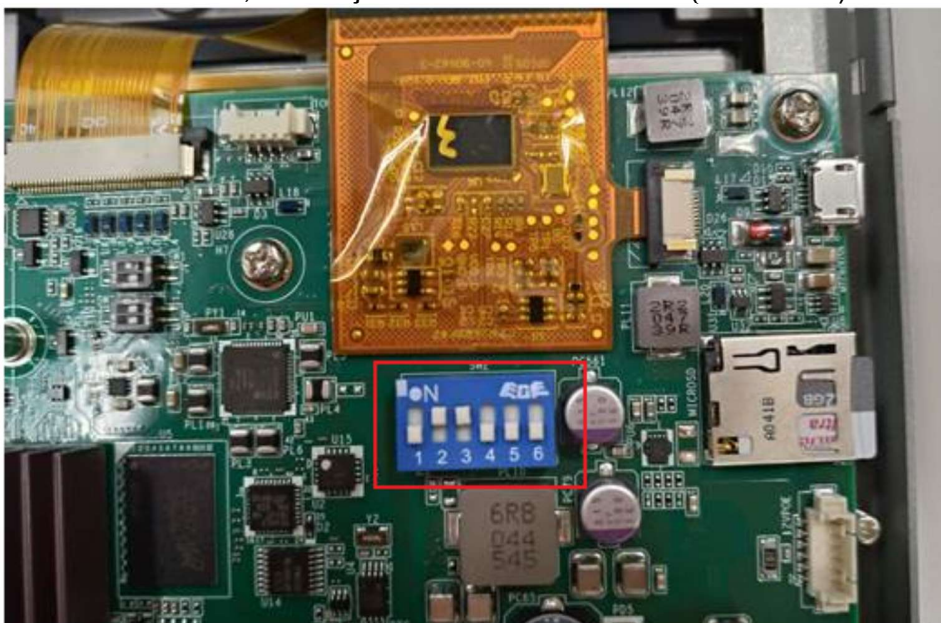

3. Power on the system , login with root account and enter below commands.

```
root@eamb99918:~# cd /mk_inand/scripts
root@eamb99918:/mk_inand/scripts# ./backup_emmc_rootfs_to_sdcard.sh /dev/mmcbk2
```

4. It will format /dev/mmcbk1b4 partition of the microSD card to store the backup rootfs file , please wait for the script to finish ,then the backup rootfs file 'rootfs.tar.gz' is in the folder '/userdata'.
5. Power off the device.You can use this microSD card to burn the backup system to other device
6. If you want to restore system with this microSD card , Please follow the instructions below:
 - 6.1 Insert the microSD card into the device you want to restore the system and power it on .

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

6.2 If microSD card already has a backup rootfs file ,enter below commands and respond to the question , enter "y" to restore the system with backup rootfs file, enter "n" to restore to original .

```
root@eamb99918:~# cd /mk_inand/scripts
root@eamb99918:/mk_inand/scripts# ./mkinand-linux.sh /dev/mmcblk2
backup files detected in /userdata/rootfs.tar.gz ,
Do you want to use this backup file to restore the system?[y/n]
```

6.3 Currently, only the legacy system can perform this backup operation. If you want to back up the EFI system rootfs, ,please refer to “11.2.1 Generate a compressed rootfs archive in EFI mode” for detail.

```
root@eamb9918-cc827f47d993:/mk_inand/scripts# ./backup_emmc_rootfs_to_sdcard.sh /dev/mmcblk2
The backup system has EFI files. Unlike current non-EFI systems, backup operations are prohibited.
```

11.2 Backing up eMMC Root Filesystem to USB drive

1. Please connect to system using SSH ,log in to the system with root account.
2. Insert the usb-drive , and check the usb drive name of the partition is /dev/sda

```
root@eamb9918-c400ad971ad5:~# lsblk
NAME            MAJ:MIN RM  SIZE RO TYPE MOUNTPOINT
sda              8:0    1 29.4G  0 disk
└-sda1          8:1    1 29.4G  0 part /run/media/sda1
```

3. Use “atcc.sys-backup” command
 - 3.1 For versions prior to v3.1 , enter below commands and respond to the question , enter "y" to start backup system, enter "n" to cancel it

```
root@eamb9918:~# atcc.sys-backup /dev/sda --reboot
[Backup] Start backup current system to /dev/sda
[Backup]All data on /dev/sda now will be destroyed! Continue? [y/n]
```

After system restarted , system enter recovery mode , format usb-drive and create a backup swu file “swupdate-image_xx.swu “ in usb-drive ,then reboot again .

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

3.2 For versions 3.2 and later, show the “atcc.sys-backup” command option

```
root@eamb9918:~# atcc.sys-backup -h
```

Usage: atcc.sys-backup [OPTIONS]

Options:

-I, --import-crt=PATH	Path to the firmware update certificate.
-E, --import-aeskey=PATH	Path to the AES key(signed).
-D, --deleteAll	Delete private key and certificate in device
-d, --device=PATH	Path to the USB device (e.g., /dev/sda).
-p, --passin=PHRASE	Passphrase for operations.
-s, --sign	Activate signing the image.
-u, --to-usb	Save backup file in usb with zstd format. "
--reboot	Reboot the system after operations.
-h, --help	Show this help message.

enter below commands for example and change “--passin =<your password>” with your own password .

```
root@eamb9918:~# atcc.sys-backup --device=/dev/sda --passin=advantech --sign --reboot
```

Important : You are about to perform a backup operation. Please ensure all important data is properly saved.

This section introduces the backup formats and methods, which differ depending on the selected mode.

11.2.1 USB Backup-Restore Mode in EFI mode

In UEFI mode, you can perform system backup and restore using a prepared USB drive. To prepare this Backup-Restore USB drive, please use the **official Recovery ISO** file and burn it to a USB stick.

For Backup : After boot into UEFI mode ,insert the prepared Backup-Restore USB drive into the device. Run the backup command:

```
root@eamb9918:~# atcc.sys-backup --device=/dev/sda -u --reboot
```

The system will automatically reboot into backup-restore mode. Please wait until the process completes. When prompted, remove the USB drive. The system will reboot automatically afterward.

Alternatively, you may refer to “**12.3.12 – Operate Actions**” for detailed instructions on using the Setting Tools utility to restore the system without using command-line operations.

If you plan to reuse the same USB drive for another backup operation, you must recreate it again using the official Recovery ISO and re-burn it to the USB stick.

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

For Restoring, insert the same Backup-Restore USB drive before powering on the device. The restore process will start automatically. Wait until the restore finishes. Remove the USB drive when prompted, the system will reboot.

Note:

This Backup & Restore function is different from the installation function. It must only be used when the system is already in a bootable condition.

11.2.2 Generate a signed Update file (.swu image)

1. Different from the above 11.2.1: if you want to generate a signed update file (.swu image) directly inside the system (without requiring a USB device), you can select this mode for backup purposes.
2. After executing the command, respond to the prompt by entering 'y' to create a new private key and a new certificate. The system will then automatically reboot and begin the recovery process..

```
root@eamb9918:~# atcc.sys-backup --device=/dev/sda --passin=advantech --sign --reboot
```

There is no private key or certificate on this device. Would you like to create one ?[Y/N].

Choose [Y] to create a new key and certificate,

otherwise choose [N] to import a specific private key and certificate: Y

=====> start create default keys.....

=====> /etc/ssl/certs/backup_ca.pem and /etc/ssl/private/backup_priv.pem successfully created

Please note that, by default, the backup file will not include the private key or any authentication-related Information.

Ensure that you securely store your private key and certificate to avoid any loss of access.

Now ,we back up the private key to the USB drive. This private key is for backup purposes only.

[Warning] All data on /dev/sda now will be destroyed after rebootng the system ! Continue? [y/n] Y

Rebooting now.....

If you enter "n" to import an existing encryption private key and certificate, the system will first check if the relevant files are present on the USB drive and prompt you to load them directly. If the files are not found on the USB, please enter the file path manually..


3. After system automatically reboot and begin the recovery process.It format usb-drive and create a backup swu file "swupdate-backup-image_xx.swu ", AES key file "aes_key.sig" , private key file "backup_priv.pem", and certificate file "backup_ca.crt" in usb-drive ,then reboot again .
4. If you want to restore system with this swu image ,please refer to "**12.3.11 Update Configuration for detail**" or use the command line to restore the system

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- 4.1 For versions 3.2 and later ,it is important to import the AES key file and certificate file before restore system . The import file path in the following example needs to be replaced by yourself.

```
root@eamb9918:~# atcc.sys-backup --import-crt= /run/media/sda1/backup_ca.crt
Import firmware update certificate successfully, the path is /usr/src/device/backup_image/backup_ca.crt
root@eamb9918:~# atcc.sys-backup --import-aeskey= /run/media/sda1/aes_key.sig
Import aes_key successfully, the path is /usr/src/device/backup_image/aes_key.sig
```

- 4.2 Because this swu image has backup settings , it is invalid to set these two options “Backup Settings” 、 “Backup root User” in settings Tools

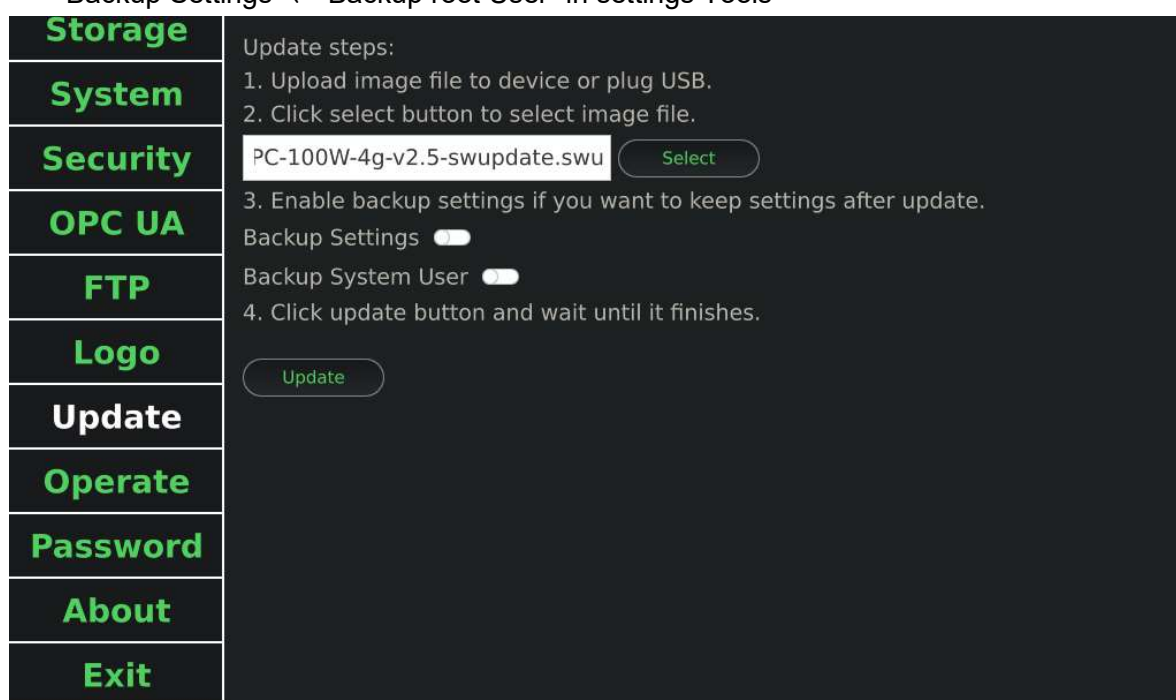

- 4.3 If you want to use the command line to restore the system instead of performing the system recovery function in the setting tool. Please copy swu image into “/userdata” folder.

- 4.4 For versions prior to v3.1 , enter below commands

```
root@eamb9918:~# swupdate --update -g -i /userdata/swupdate-image_1.0.swu -N 1.5 --reboot
```

For versions 3.2 and later, enter below commands. Please also copy certificate file ,and aes key(signed) into “/userdata” folder.

```
root@eamb9918:~# swupdate --update -g -i /userdata/swupdate-image_1.0.swu -N 1.5
-k /userdata/backup_ca.crt -K /userdata/aes_key.sig --reboot
```

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

11.3 Important Considerations for Restoring the File System

When restoring the file system, you may encounter issues related to user accounts or system settings. Please review and adjust these settings as necessary.

11.3.1 Keys, Certificates, and Identity Files Removed During Backup

To prevent cloned systems from sharing the same identity, the backup process removes several security-sensitive keys, certificates, and identity-related files, including:

- Network identity and configuration:

- /var/lib/connman/*

- SSH host and private keys:

- /home/root/.ssh
- /etc/ssh/ssh_host_ed25519_key
- /etc/ssh/ssh_host_dsa_key
- /etc/ssh/ssh_host_ecdsa_key
- /etc/ssh/ssh_host_rsa_key

- System machine ID:

- /etc/machine-id

- OPC UA certificates:

- /opt/adv-opcua/*.der

- VNC server keys:

For cybersecurity reasons, the VNC server automatically generates a unique key and certificate when it is enabled. During the backup process, these files are intentionally removed to prevent reusing the same key and certificate on different devices.

- /etc/vnc/keys

- Backup-related private key and CA certificate:

- /usr/src/device/backup_image/aes_key.sig
- /etc/ssl/private/backup_priv.pem
- /usr/local/share/ca-certificates/backup_ca.crt
- /etc/ssl/certs (symlinks pointing to backup_ca.crt)

In addition, log files, caches, temporary files, and certain runtime browser files (e.g., Chromium Singleton* files) are also removed to avoid carrying over volatile or device-specific runtime state to the restored system.

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

11.3.2 Actions Required After System Restore

- **Update System Hostname**

To avoid server-name conflicts in OPC UA Discovery, change the system hostname by

```
root@eamb9918:~# hostnamectl set-hostname <hostname>
```

running the following command. Replace **<hostname>** with a new, unique hostname:

- **VNC Key and Certificate Regeneration**

After restoring the system, it is necessary to disable and then re-enable the VNC server. This step is required because the restore process removes the previous VNC key and certificate, and re-enabling the VNC server will automatically generate new ones to ensure secure operation.

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12. GUI Settings Tool

12.1 Introduction of Advantech TPC-100W Settings Tool

Advantech TPC-100W Settings Tool is a Linux-based utility. Settings Tool helps user to get image version, get/set network configuration, get/set time configuration, and get/set screen configuration. There is a binary in Settings Tool: **settings**.

- **settings**
A GUI program provides GUI interface for user. User can configure Screen, Network, Time of TPC-100W via this program. Execution of settings relies on Qt and OpenGL libraries, connmanctl and timedatectl command line tools.


12.2 Platform Supported

Linux, arm64

12.3 How to Use TPC-100W Settings Tool

There is one binary in TPC-100W Settings Tool, “**settings**”. “**settings**” is a GUI program. This section will explain how to use the GUI program, where to find logs.


- Login with system user to use Settings Tool
[Note: If you require full functionality, please log in as root, for example, to disable the login feature \(refer to 12.3.6 Security Configuration\) or open the terminal \(refer to 12.3.12 Operate Actions\).](#)

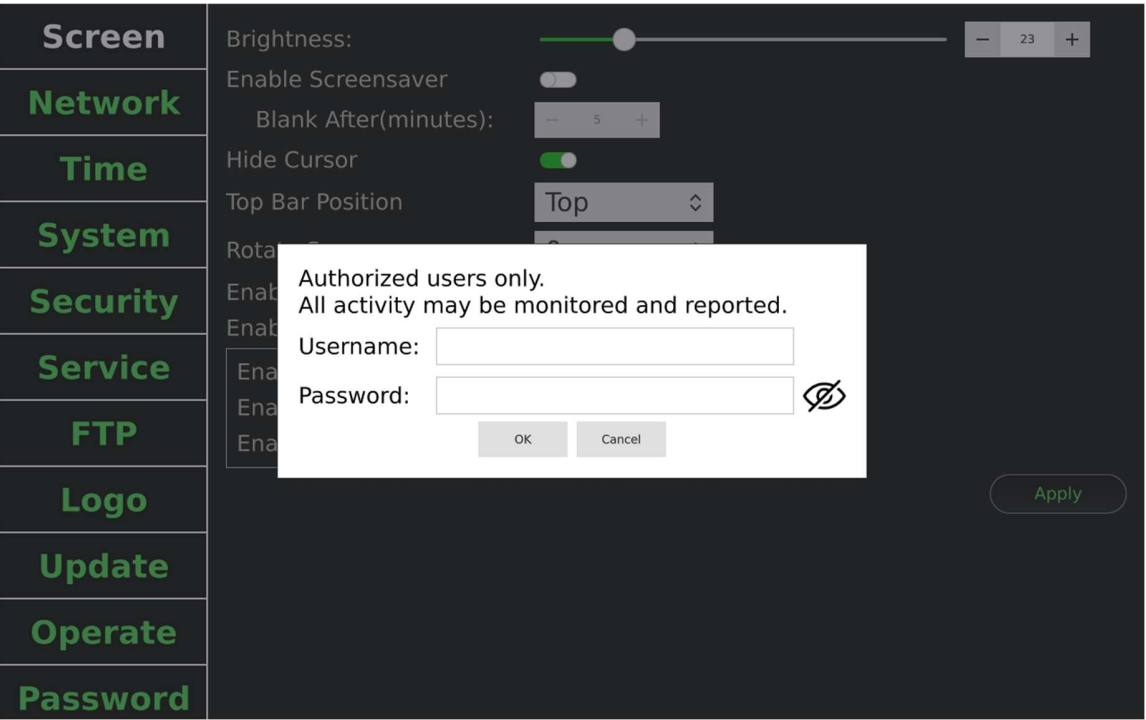

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- Click top bar icon to start **settings**

Note: The default top bar position is set to "None". You can configure it to appear at the top. (refer to 12.3.1 Screen Configuration).

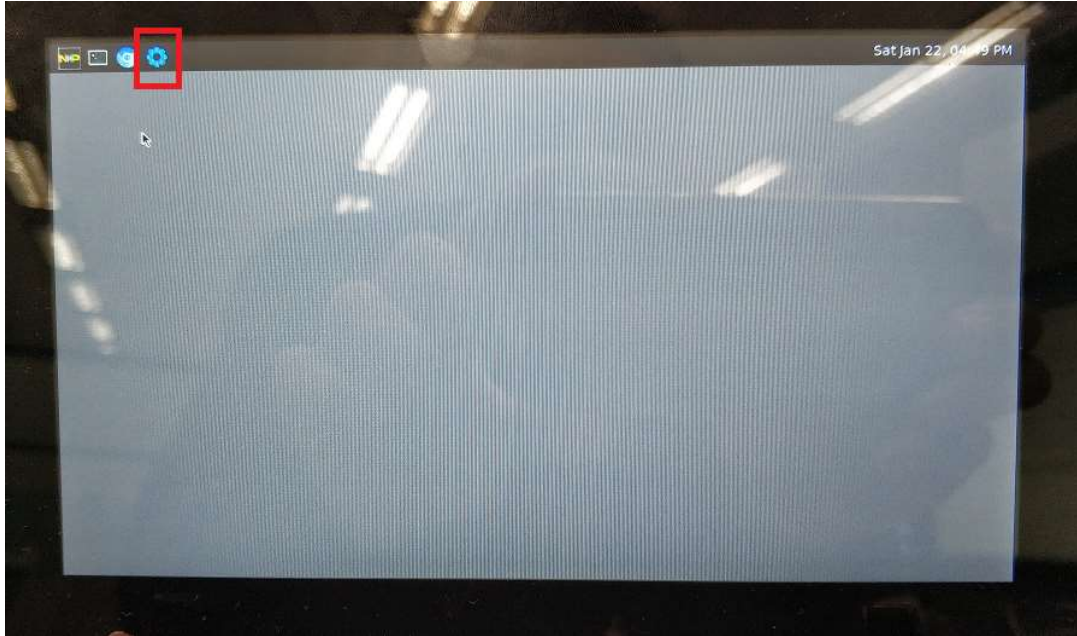

- To start **settings** by command line

```
sh-5.0# /usr/bin/settings
```

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12.3.1 Screen Configuration

All screen related configuration is in Screen page. After adjusted the brightness, it would be updated effective immediately. After adjusted the screensaver, hide cursor, gesture, you should click apply button to apply setting.

- To adjust brightness. You can use slider or spinbox to adjust value.

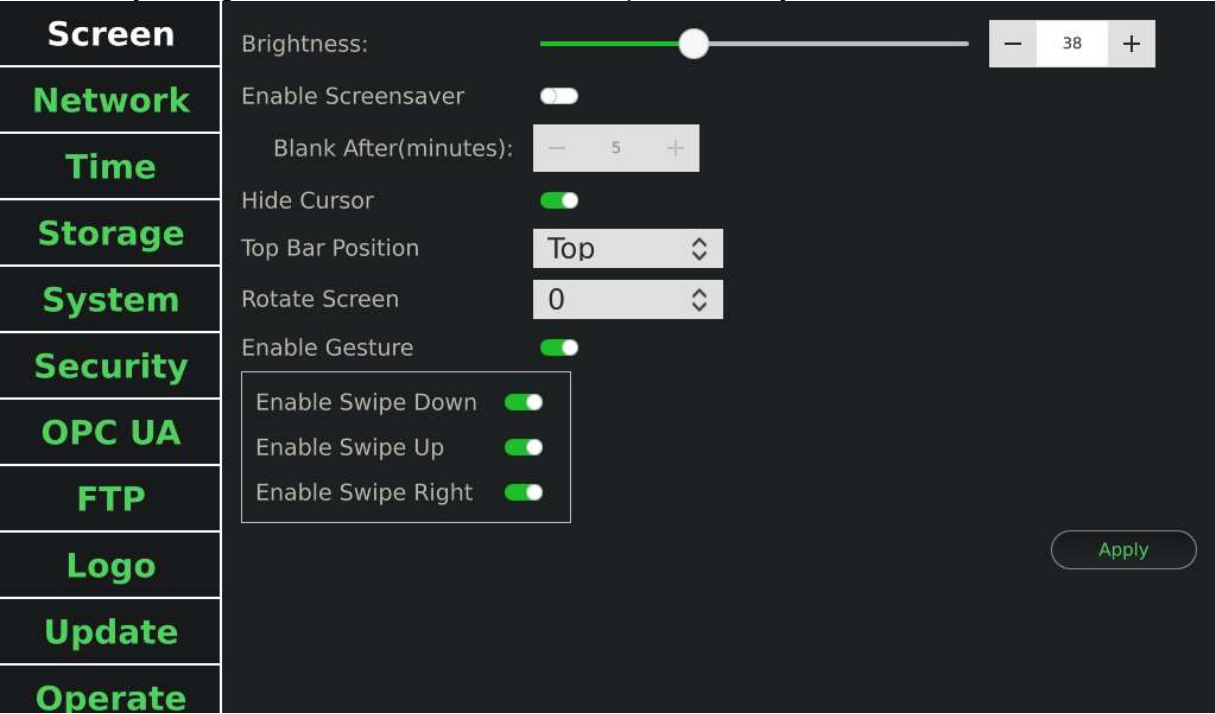


Figure Sample of Screen Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- To enable/disable screensaver. You can press switch button. You can use spinbox to adjust blank after minutes.

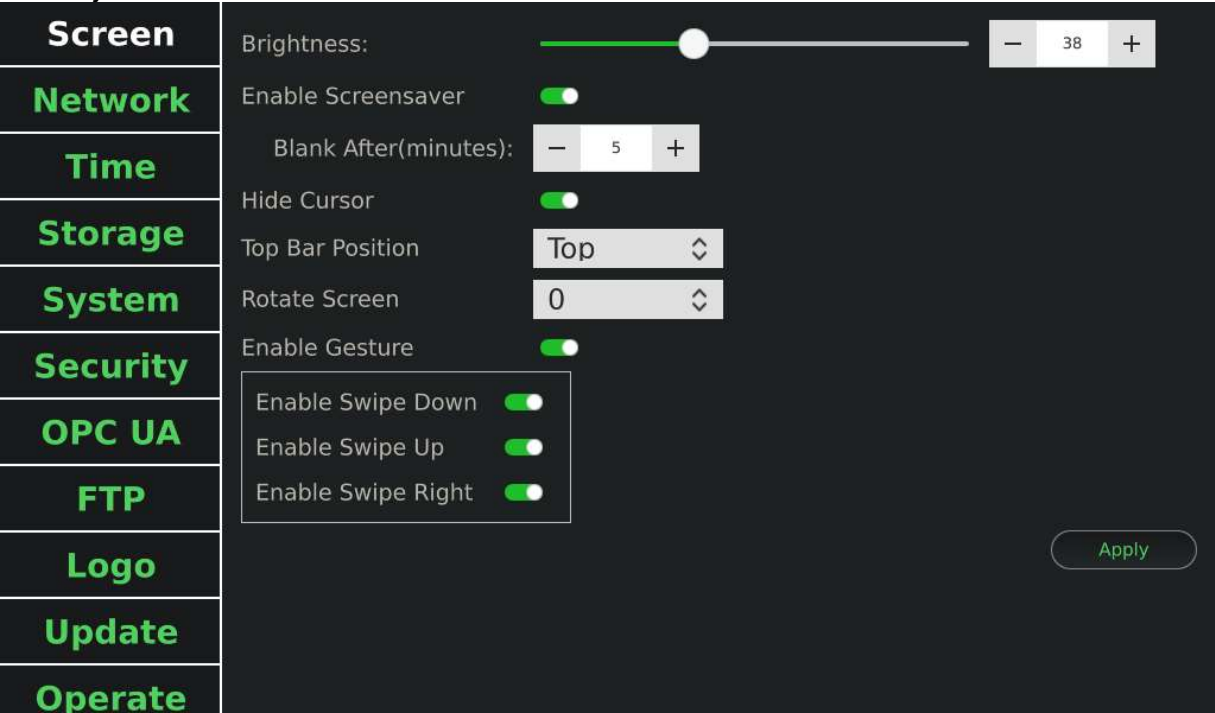


Figure Sample of Enable Screensaver Screen Page

- To enable/disable hide cursor. You can press switch button.

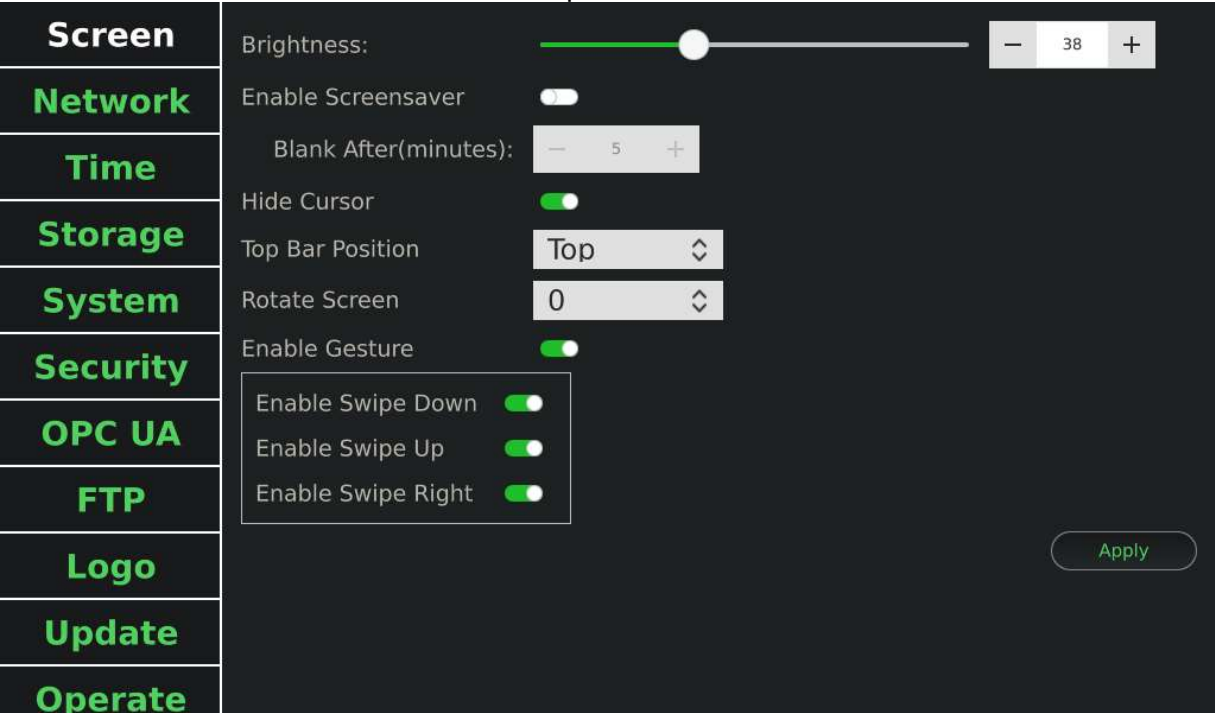


Figure Sample of Enable Hide Cursor Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

■ To set top bar position. You can press top bar position combobox.

The screenshot shows the 'Screen' settings page. On the left is a vertical sidebar with menu items: Screen, Network, Time, Storage, System, Security, OPC UA, FTP, Logo, Update, and Operate. The 'Screen' menu item is highlighted. The main content area has a dark background and contains the following settings:

- Brightness:** A slider bar with a green indicator and a numeric display showing '38'.
- Enable Screensaver:** A toggle switch that is currently turned off.
- Blank After(minutes):** A numeric input field with a value of '5' and minus/plus buttons.
- Hide Cursor:** A toggle switch that is currently turned on.
- Top Bar Position:** A dropdown menu currently showing 'Top'.
- Rotate Screen:** A dropdown menu currently showing '0'.
- Enable Gesture:** A toggle switch that is currently turned on.
- Gesture Sub-menu:** A sub-menu is open, showing three options: 'Enable Swipe Down', 'Enable Swipe Up', and 'Enable Swipe Right', all of which have their respective toggle switches turned on.
- Apply:** A green button in the bottom right corner.

Figure Sample of Top Bar Position Page

■ To set rotate screen. You can press rotate screen combobox.

This screenshot is identical to the one above, showing the 'Screen' settings page. The 'Rotate Screen' dropdown menu is currently set to '0'. The 'Top Bar Position' dropdown menu is also visible and set to 'Top'. All other settings, including the brightness slider, screensaver toggle, blank time, hide cursor toggle, enable gesture toggle, and the gesture sub-menu, remain the same as in the previous figure.

Figure Sample of Rotate Screen Page

■ To enable/disable gesture. You can press switch button.

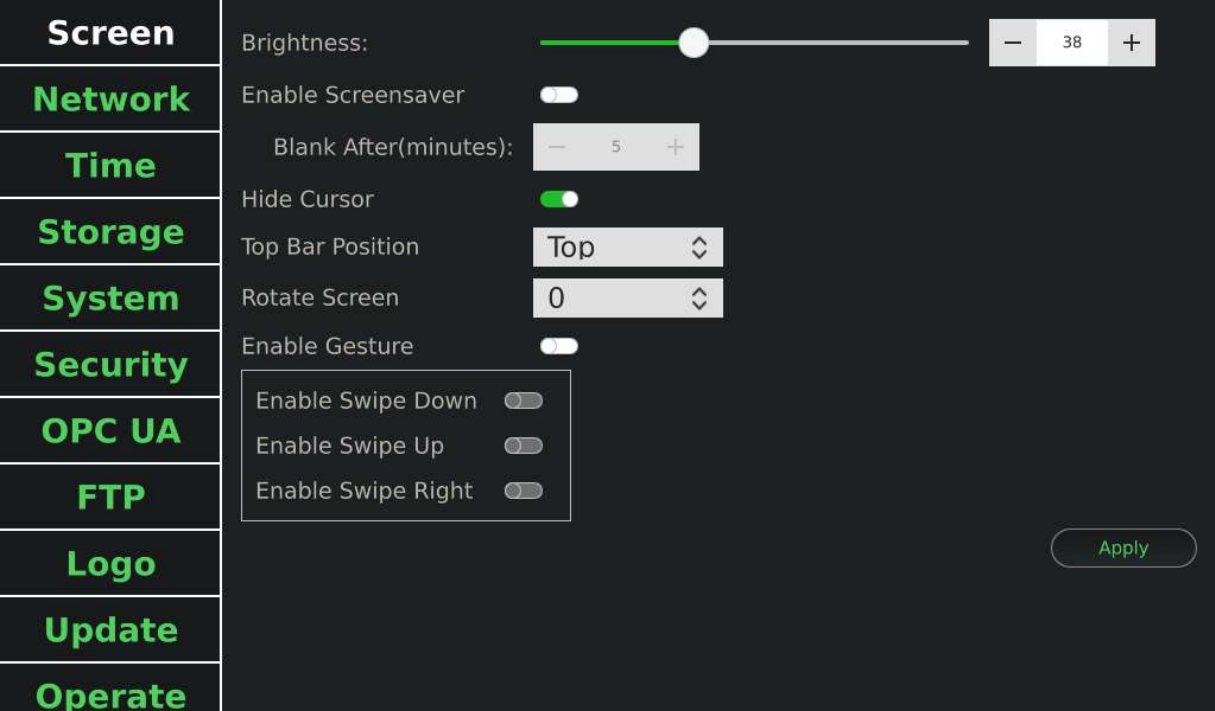


Figure Sample of Disable Gesture Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12.3.2 Network Configuration

All network related configuration is in Network page. The “Wired 1” tab is mapping to eth0 network interface and “Wired 2” tab is mapping to eth1 network interface. You can use the network settings whatever the network cable is connected or not. After adjusted the configuration, you should press Apply button to save configuration.

Note: The ifconfig interface of TPC-100W LAN A is eth1, and LAN B is eth0 on the image: [eamb9918-sdcard_1.1.0.img.tar.xz](#).

■ You can view wired 1/2 information. To edit it, you can press config button.



Figure Sample of View Network Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

■ To enable/disable DHCP. You can press switch button.

Screen

Network

Time

Storage

System

Security

OPC UA

FTP

Logo

Update

Operate

Wired 1Wired 2FirewallBridge

Link:

MAC Address: c4:00:ad:97:1b:0b

Enable DHCP

ApplyCancel

Figure Sample of Enable DHCP Network Page

■ To set static IP. You should disable DHCP, then set the IP address, network mask, default gateway, and DNS server.

Screen

Network

Time

Storage

System

Security

OPC UA

FTP

Logo

Update

Operate

Wired 1Wired 2FirewallBridge

Link:

MAC Address: c4:00:ad:97:1b:0b

Enable DHCP

IP Address: 172.17.8.96

Network Mask: 255.255.254.0

Default Gateway: 172.17.9.254

DNS Server 1: 172.20.1.100

DNS Server 2: 172.22.2.99

ApplyCancel

Figure Sample of Disable DHCP Network Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- To set Wired 2. You could press Wired 2 tab to change the page. If there is no connection on wired 2, you still can set DHCP or static IP. If you apply settings when the status is offline, it would save to app config. When the status back to online, it would take effect only once.

Screen

Network

Time

Storage

System

Security

OPC UA

FTP

Logo

Update

Operate

Wired 1

Wired 2

Firewall

Bridge

Link:

MAC Address: c4:00:ad:97:1b:0a

IP Address:

Default Gateway:

DNS Server:

Config

Figure Sample of View Wired 2 Network Page

Screen

Network

Time

Storage

System

Security

OPC UA

FTP

Logo

Update

Operate

Wired 1

Wired 2

Firewall

Bridge

Link:

MAC Address: c4:00:ad:97:1b:0a

Enable DHCP ☐

IP Address: Required

Network Mask:

Default Gateway:

DNS Server 1:

DNS Server 2:

Apply

Cancel

Figure Sample of Edit Wired 2 Network Page

- You can view/edit firewall rules which are added by Settings tool. Firewall rule settings are based on whitelist logic. You can add a rule to allow tcp/udp port.

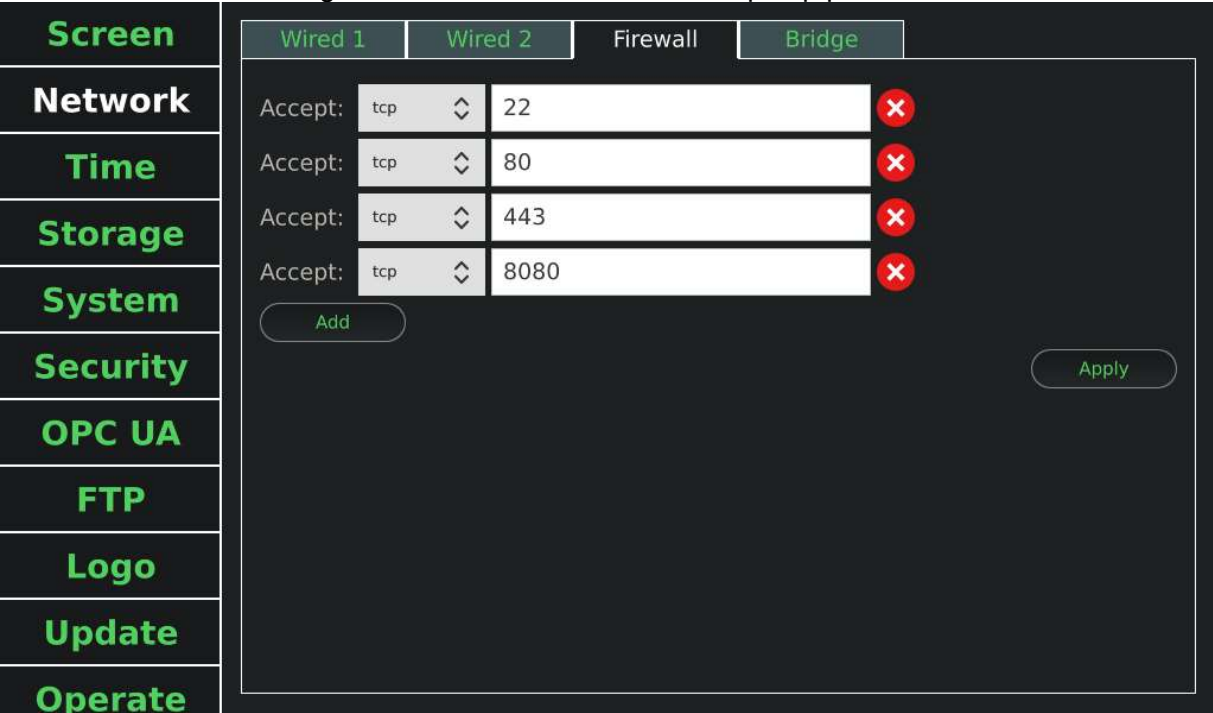


Figure Sample of Firewall Network Page

- To enable/disable Bridge. You can press switch button.



Figure Sample of View Bridge Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12.3.3 Time Configuration

All time related configuration is in time page. After adjusted the configuration, you should press Apply button to save configuration.

- To set timezone. You can press timezone combobox.

Screen

Network

Time

Storage

System

Security

OPC UA

FTP

Logo

Update

Operate

Current Time: 2024-06-06 01:25:27

Timezone:

(GMT+00:00) UTC

☒

Synchronize with NTP Server

NTP Server:

time3.google.com

☐

Manual Setting

Date:

2024-06-06

Time:

1

:

24

:

45

Apply

Figure Sample of Timezone Time Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- To set synchronize with NTP server. You can press synchronize with NTP server radio button. NTP server is optional, default obtain from DHCP.

Screen

Network

Time

Storage

System

Security

OPC UA

FTP

Logo

Update

Operate

Current Time: 2024-06-06 01:25:27

Timezone: (GMT+00:00) UTC

☒ Synchronize with NTP Server

NTP Server: time3.google.com

☐ Manual Setting

Date: 2024-06-06

Time: 1 : 24 : 45

Apply

Figure Sample of Synchronize with NTP Server Time Page

- To set manual setting. You could press manual setting radio button. There is calendar button to set date. There are hour, minute, and second comboboxes to set time.

Screen

Network

Time

Storage

System

Security

OPC UA

FTP

Logo

Update

Operate

Current Time: 2024-06-06 01:26:11

Timezone: (GMT+00:00) UTC

☐ Synchronize with NTP Server

NTP Server: time3.google.com

☒ Manual Setting

Date: 2024-06-06

Time: 1 : 24 : 45

Apply

Figure Sample of Manual Setting Time Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

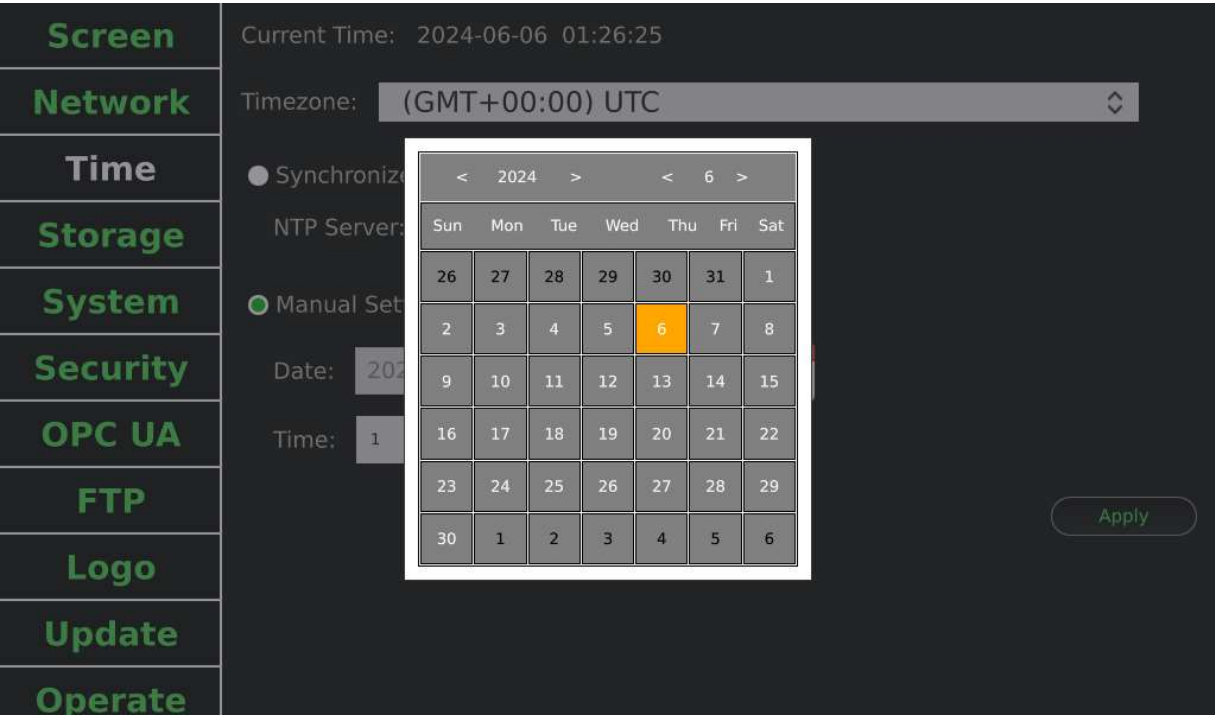


Figure Sample of Calendar Popup

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12.3.4 Storage Information

All storage related information is in storage page.

- To see eMMC information.

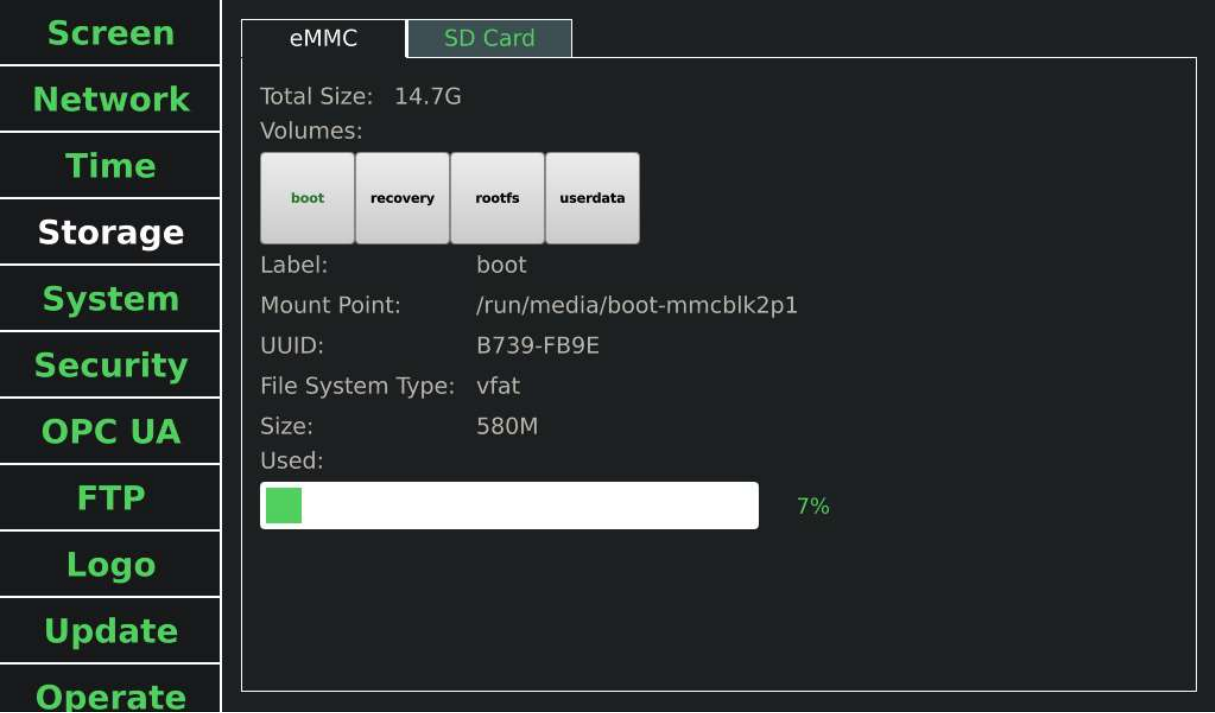


Figure Sample of eMMC Page

- To see SD card information.

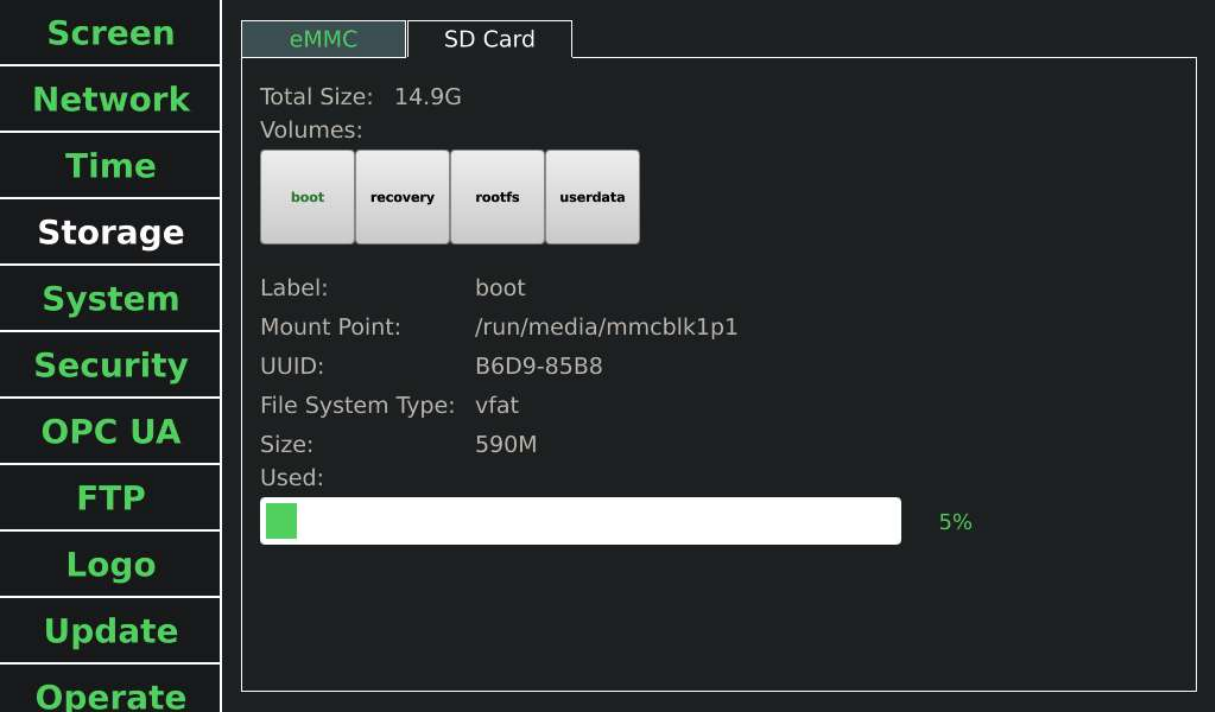


Figure Sample of SD card Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12.3.5 System Configuration

All system related configuration is in system page. After adjusted the configuration, you should press Apply button to save configuration. If you enable/disable default login as user or read-only file system, you need to reboot device for them to take effect.

- To set startup application. You can press application dropdown list. Default is settings tool.
Note: If startup application is VNC viewer, you should setup VNC configuration first at 13.3.7 VNC page. When VNC viewer start, it would start the monitor program first. The monitor program would check VNC server availability every 30 seconds. It would start VNC viewer only when VNC server is available to be connected.

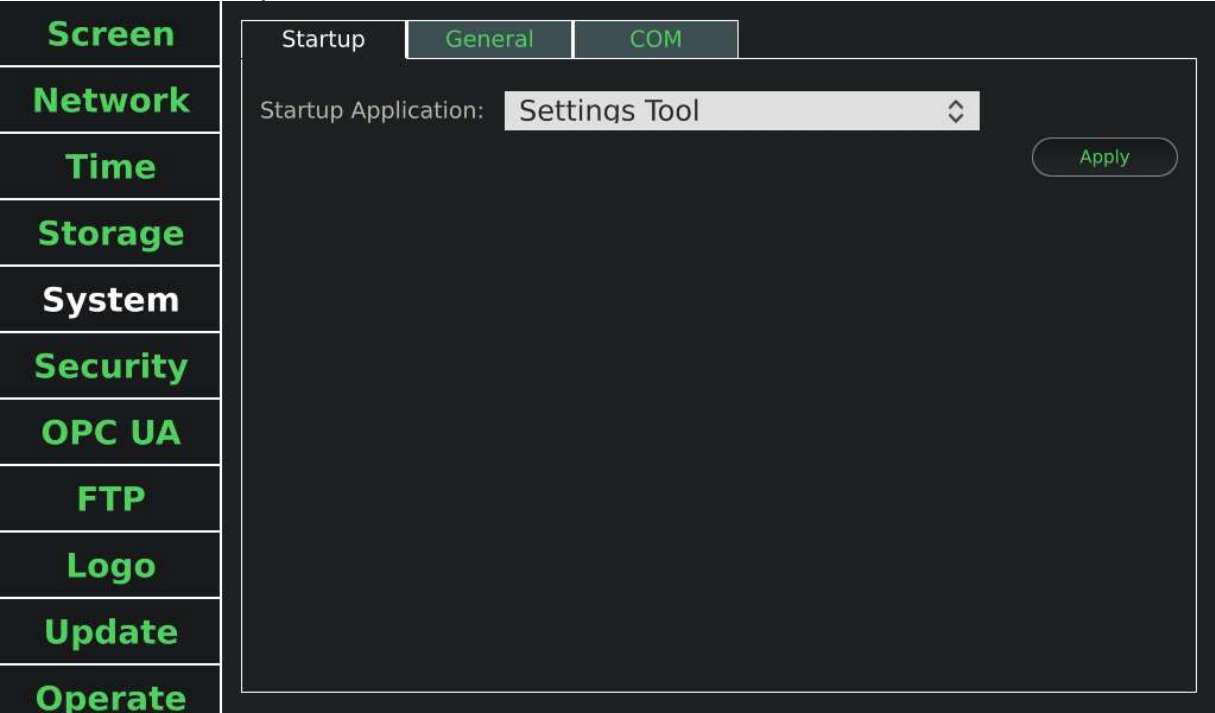


Figure Sample of System Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- To set static page. You can adjust timeout and URL. Or you can use custom static page.
Note: Static page would started by chromium. It would infinite retry each connection with timeout. You can use it to connect to your device.

Screen

Network

Time

Storage

System

Security

OPC UA

FTP

Logo

Update

Operate

StartupGeneralCOM

Startup Application: Static Page

Timeout(sec): 5

URL: http://172.17.8.19

Enable monitor startup application

Apply

Figure Sample of Static Page System Page

Screen

Network

Time

Storage

System

Security

OPC UA

FTP

Logo

Update

Operate

StartupGeneralCOM

Startup Application: Static Page (custom)

Static Page File: /userdata/custom.html

Select

Enable monitor startup application

Apply

Figure Sample of Custom Static Page System Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- To set Chromium(kiosk). You can set multiple URLs as your startup pages, and click radio button to be the home page. To enable/disable monitor startup application. You can press switch button.

Note:

If startup application is kiosk chromium · Static page · Static page(custom), It automatically restart chrome browser after a crash by enabling monitor startup application.

It is recommended that if enable monitor startup application is set, do not launch chromium on the top bar at the same time. please refer chapter 12.3.1 , set "Top bar position" to "None" to hide the top bar.

It is recommended that if you change your startup application and also enable monitor startup application, please restart your device for it to work properly.

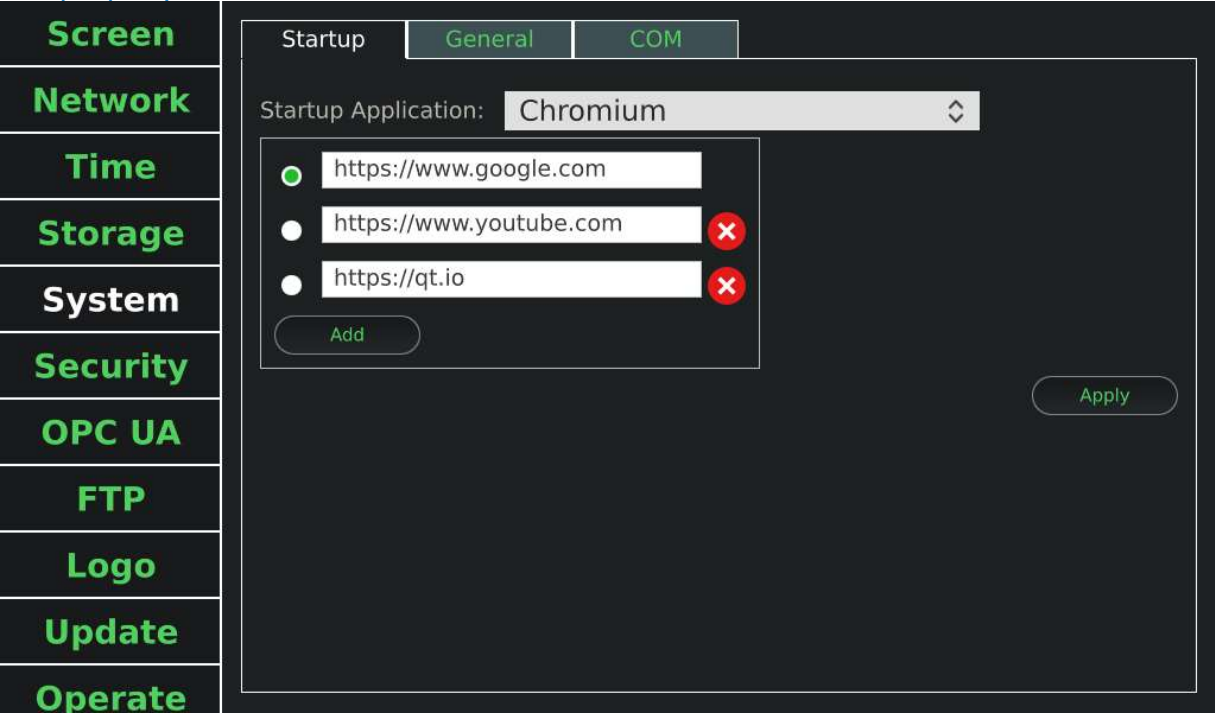


Figure Sample of Chromium(kiosk) System Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- To set start custom.sh. You can modify /usr/bin/start_custom.sh to run your application.

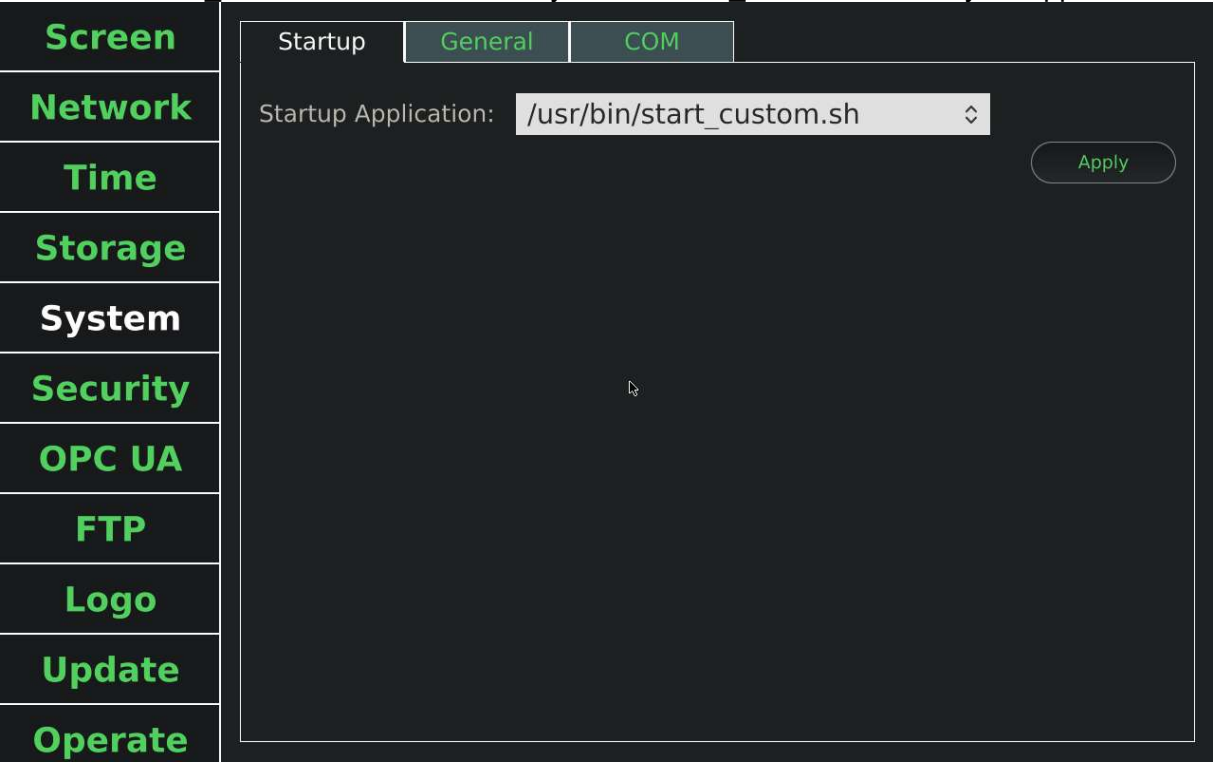


Figure Sample of Start Custom System Page

- To enable/disable default login desktop as user. You can press switch button.
Note: You have to enable security first. Make sure that the user using the Settings tool have been authenticated. Also user has no permission to use swipe up (close application), and swipe right (switch application).

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

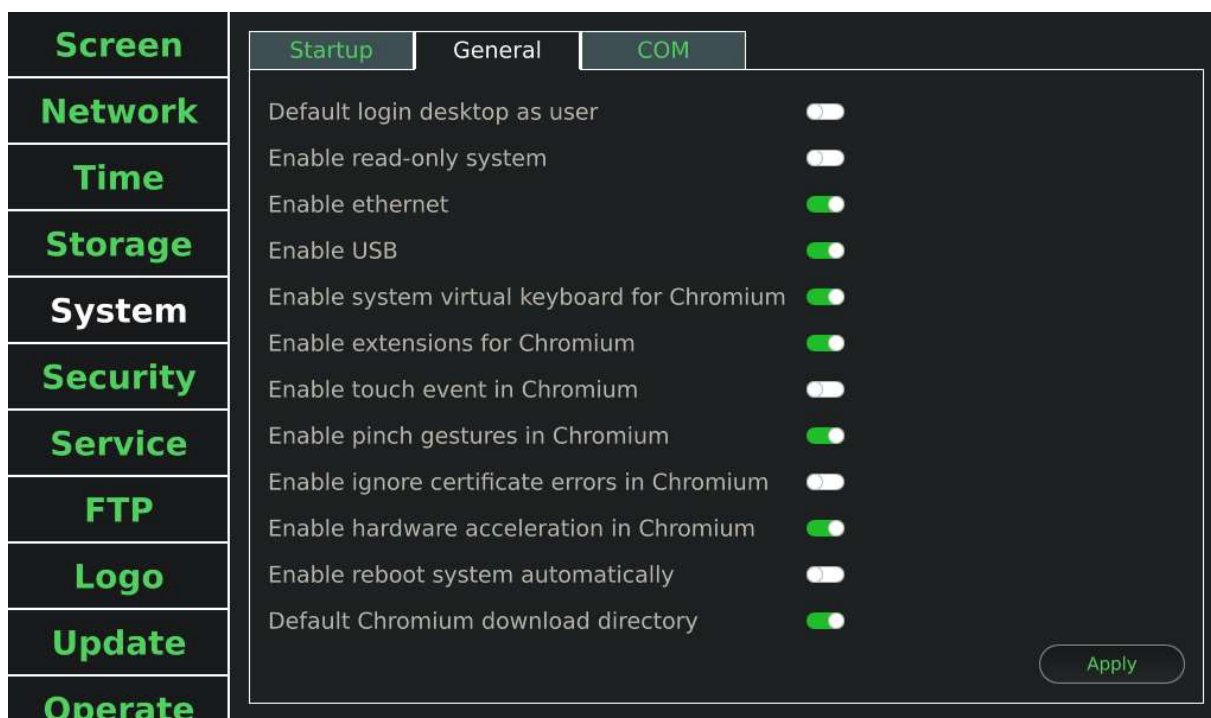


Figure Sample of Enable Default Login Desktop as User Page

- To enable/disable read-only system. You can press switch button.

Note: It only makes your root file system to be read-only.

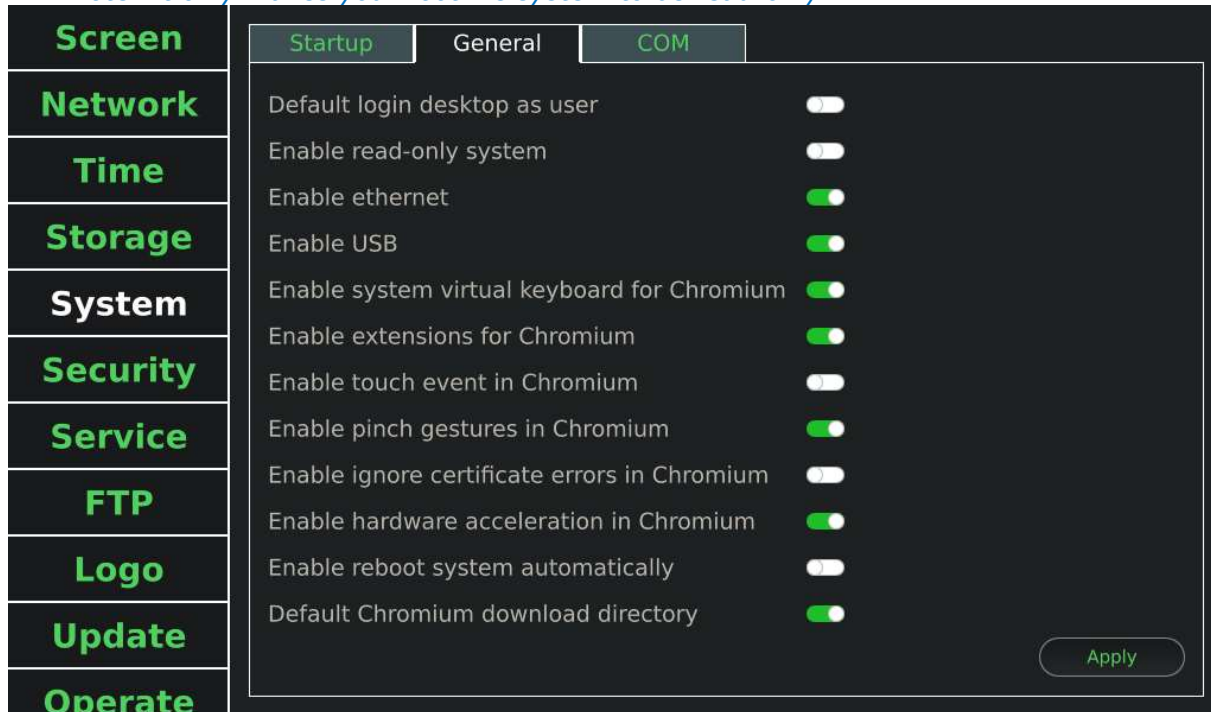


Figure Sample of Enable Read-only System Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- To enable/disable ethernet/USB/system virtual keyboard/extensions for Chromium/touch event/ignore certificate errors/hardware acceleration in Chromium. You can press switch button.

Note: When you disable USB, it does not affect USB that have been plugged in. It only takes effect afterwards. When you disable system virtual keyboard, it does not affect chromium that have been opened. It only takes effect afterwards.

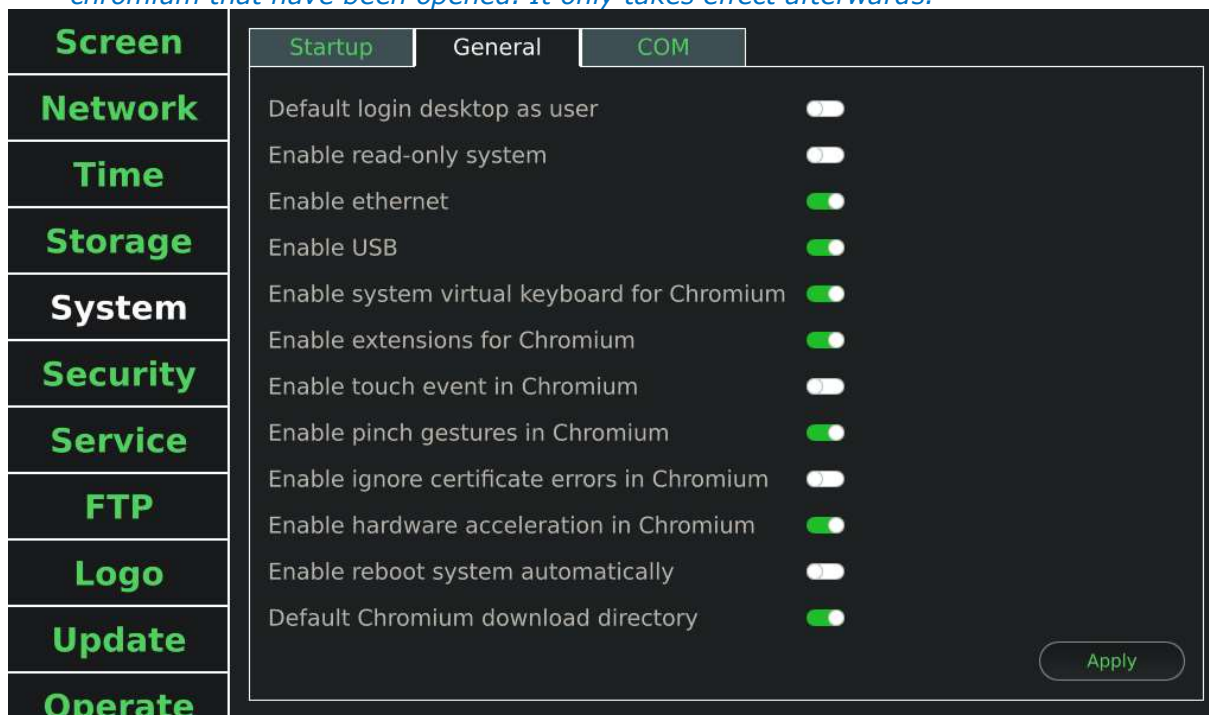


Figure Sample of Enable Ethernet Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- To enable/disable reboot system automatically. You can press switch button and setup schedule.

Note: If you change timezone after enable this, please reboot to take effect.

Screen

Network

Time

Storage

System

Security

Service

FTP

Logo

Update

Operate

StartupGeneralCOM

Enable system virtual keyboard for Chromium

Enable extensions for Chromium

Enable touch event in Chromium

Enable pinch gestures in Chromium

Enable ignore certificate errors in Chromium

Enable hardware acceleration in Chromium

Enable reboot system automatically

Mode: Daily

Minute: 0

Hour: 0

Default Chromium download directory

Apply

Figure Sample of Enable Reboot System Automatically Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- To enable/disable default Chromium download directory. You can press switch button and setup download directory.

Note: If you change download directory, please restart Chromium to take effect.

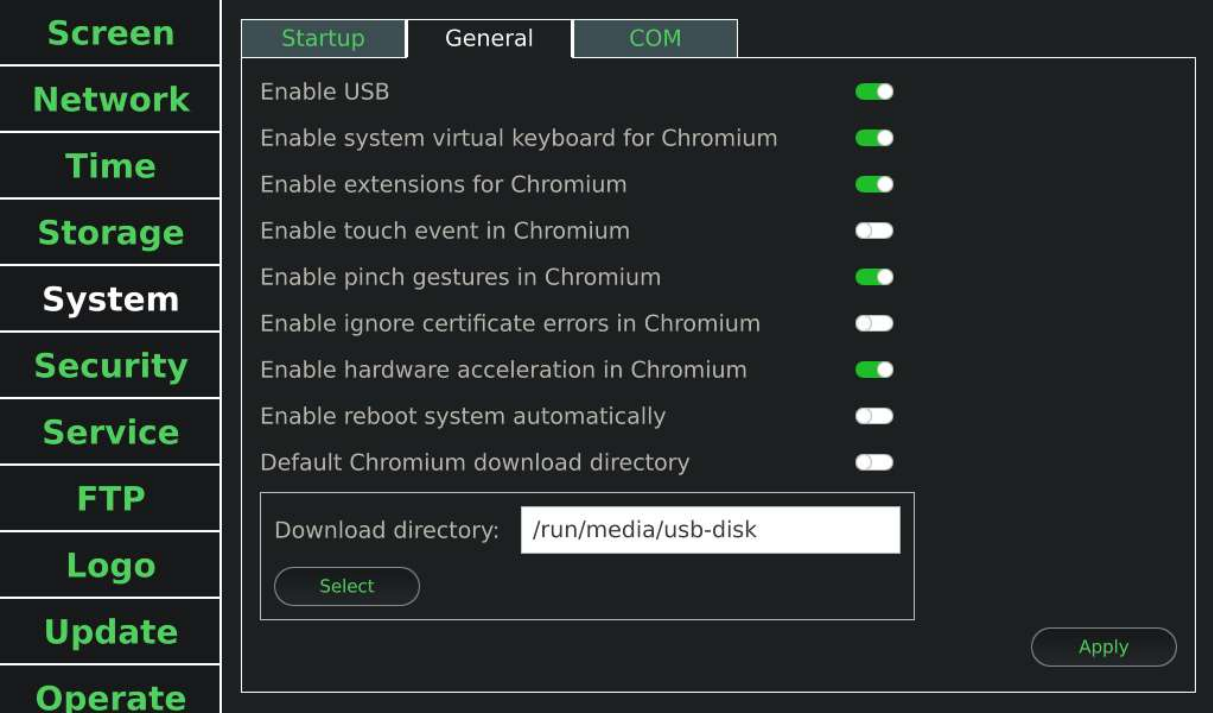


Figure Sample of Setup Chromium Download Directory Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- To set COM port. You can set COM1 mode to RS232, RS422, RS485. And you can set COM1 and COM2 baud rate.

Screen

Network

Time

Storage

System

Security

OPC UA

FTP

Logo

Update

Operate

StartupGeneralCOM

COM1 Mode:RS232

COM1 Baud Rate:9600

COM2 Mode:RS485

COM2 Baud Rate:9600

Apply

Figure Sample of COM System Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12.3.6 Security Configuration

All security related configuration is in security page. You can enable security function and set password or authentication with system user. Then you would need to enter password when start the settings tool. After adjusted the configuration, you should press Apply button to save configuration

- To enable security function. You can press enable switch button and set password.

Screen

Network

Time

Storage

System

Security

OPC UA

FTP

Logo

Update

Operate

Enable ☒

☒ Authentication with Password

Password:

●●●●●●

Show Password ☐

☐ Authentication with system user

Apply

Figure Sample of Security Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- After you enable security. You would need to enter password when you open Settings Tool next time.

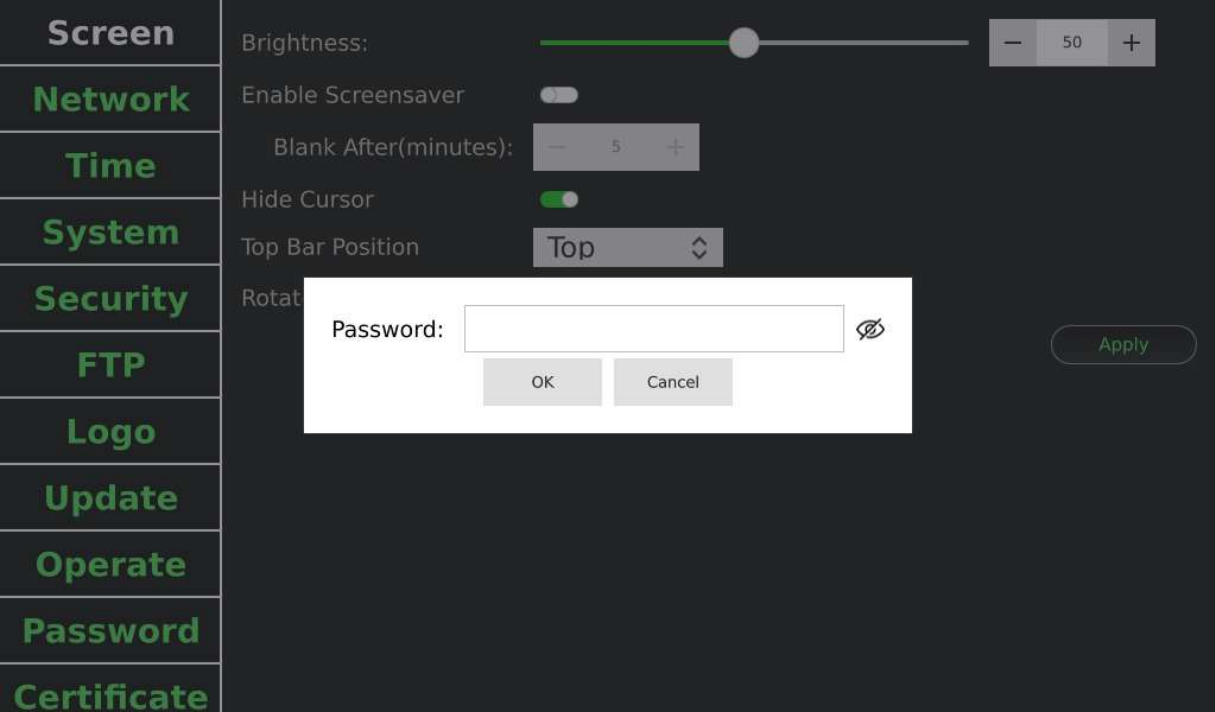


Figure Sample of Login with Password

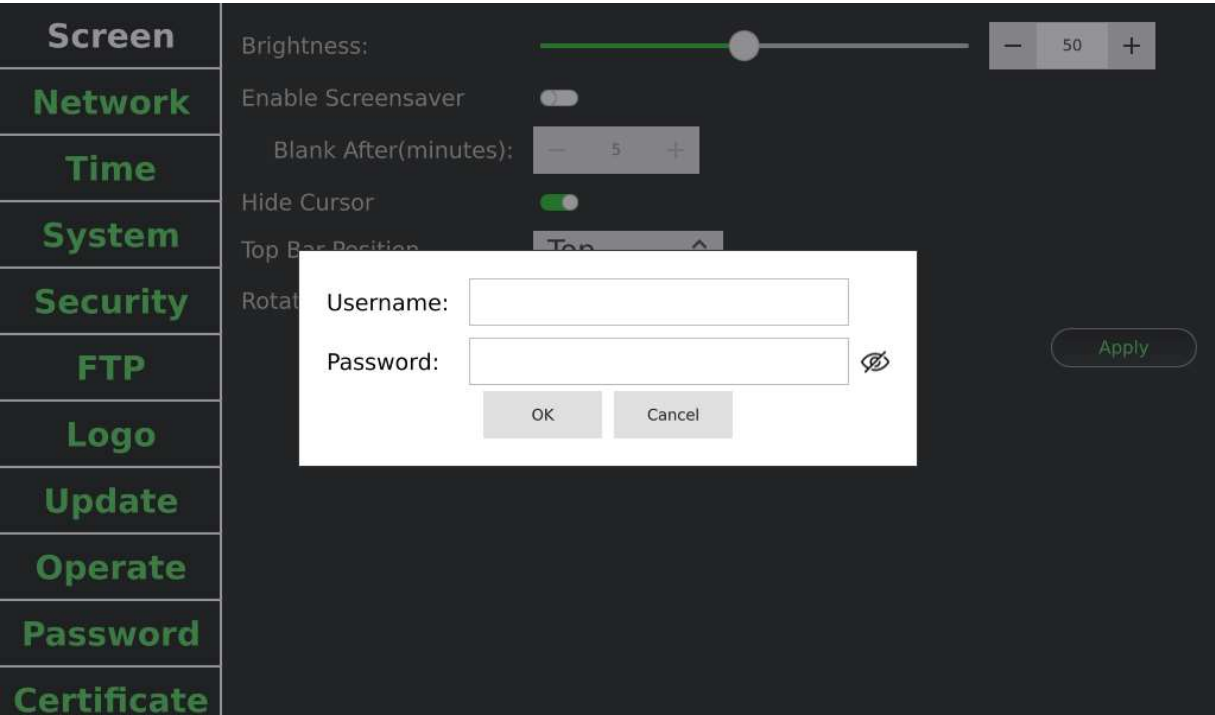


Figure Sample of Login with System User

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12.3.7 VNC Viewer Configuration

All VNC viewer related configuration is in system page's startup application. After adjusted the configuration, you should press Apply button to save configuration. This configuration is used for VNC viewer which is one of the startup applications.

- To set VNC server setting. You can set VNC server address with port and password. You can enable show password to see plain text. You can enable view only mode to ignore inputs. You can enable full screen/fit window mode of VNC viewer. You can set image quality of JPEG compression.

Screen

Network

Time

System

Security

FTP

Logo

Update

Operate

Password

About

StartupGeneralCOM

Startup Application: VNC Viewer

VNC Server:172.17.8.69:5900

Password:●●●●●●

Show Password☐

View only (inputs ignored)☒

Full screen mode☒

Fit window mode☒

Image quality:

−6+

Apply

Figure Sample of VNC Viewer Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12.3.8 Service Configuration

All Service related configuration is in service page. After adjusted the configuration, you should press Apply button to save configuration. If you enable/disable VNC server, you need to restart desktop service to take effect immediately. Server certificate path is “/etc/vnc/keys/server.crt”.

- To enable VNC server. You can press enable switch button. You can set VNC server port number.

*Note: Tested VNC client : Vinagre v3.22.0 + libgtk-vnc-2.0-0 1.3.1-1build2 (Ubuntu 24.04) and TigerVNC Viewer v1.15.0. You need to login with the user who started Weston service. This feature only supports the Remote Framebuffer protocol.
Vinagre: <https://help.ubuntu.com/community/Vinagre>
TigerVNC Viewer: <https://tigervnc.org/>*

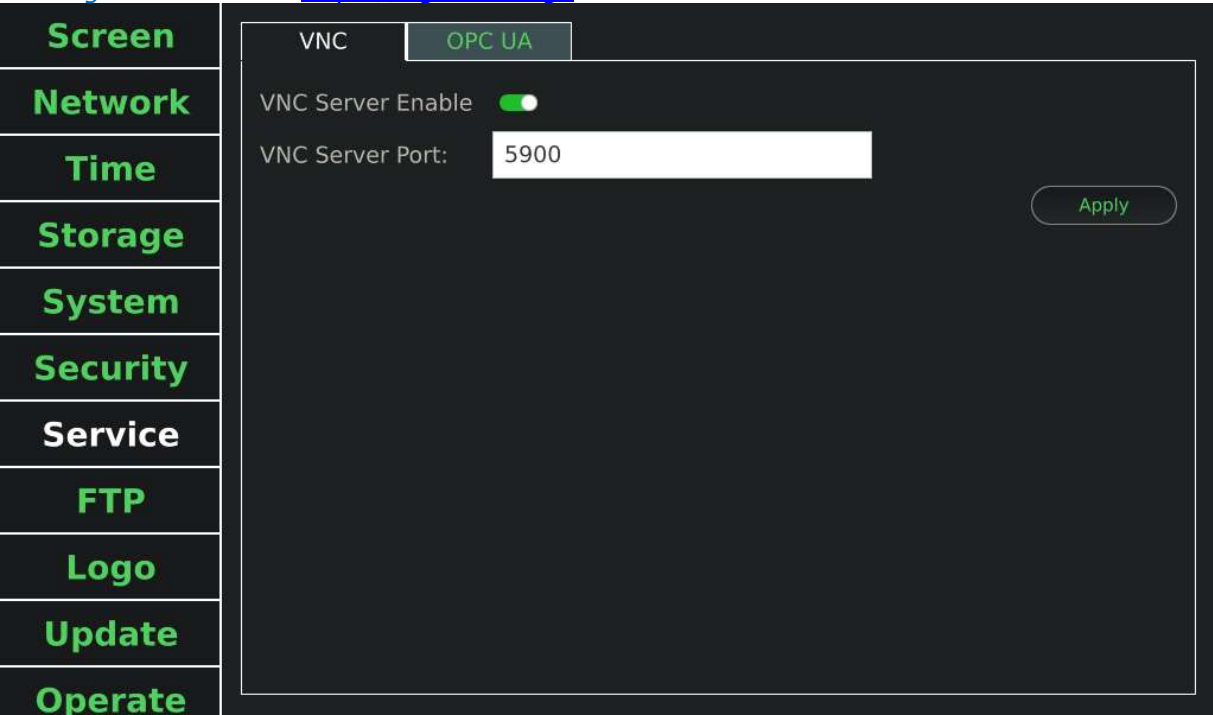


Figure Sample of VNC server Page

If you use Vinagre v3.22.0 + libgtk-vnc-2.0-0 1.3.1-1build2 (Ubuntu 24.04), you need to do the following setup:

1. Add server certificate to Ubuntu’s trusted authorities

```
$ sudo cp server.crt /usr/local/share/ca-certificates
$ sudo update-ca-certificates
```

2. Add the VNC server IP-to-hostname mapping in /etc/hosts

```
$ sudo nano /etc/hosts
{your_VNC_server_IP} vncserver
```

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

3. Ensure that the user password does not exceed 8 characters (due to Vinagre limitation)
4. Start VNC client

```
$ vinagre vncserver::5900
```

- To enable OPC UA server. You can press enable switch button. You can set OPC UA server port number and identity token. When you select “Username/Password” type, you can set custom username and password.

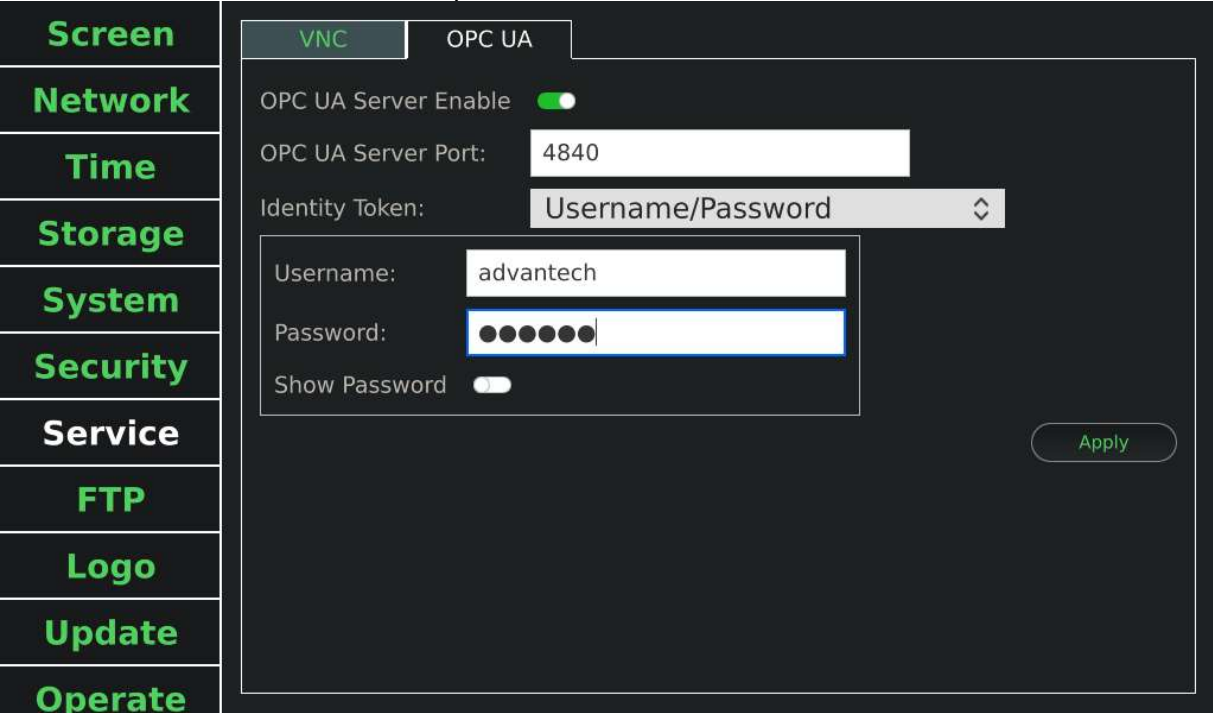


Figure Sample of OPC UA Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12.3.9 FTP Configuration

All FTP related configuration is in FTP page. After adjusted the configuration, you should press Get button to download file from FTP server. This configuration is used for FTP client.

- To use FTP client. You can set FTP server IP address, port number, username, password, remote file path, and local path. Remote file path must be a file on FTP server, not a folder. Local path can be a folder or a file name.

Figure Sample of FTP Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12.3.10 Logo Configuration

All logo related configuration is in logo page. Logo image only support 24-bit bmp format. Background color should be two digit hexadecimal format for red, green and blue (0xRRGGBB). And it cannot be 0x000000 for design reason. After adjusted the configuration, you should press apply button to update boot logo.

- To update boot logo. You can upload image to device or plug USB. Then you should press select button to select your image file.

Figure Sample of Logo Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12.3.11 Update Configuration

All update related configuration is in update page. After selected the image and adjusted the configuration, you should press Update button to update system. If you want to keep settings after update, you can enable backup settings, system user. After selected the package file, you should press Install button to install package.

- To update device. You can upload image to device or plug USB. Then you should press select button to select your image file.

Figure Sample of Update System Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

■ For example, select image file from USB.

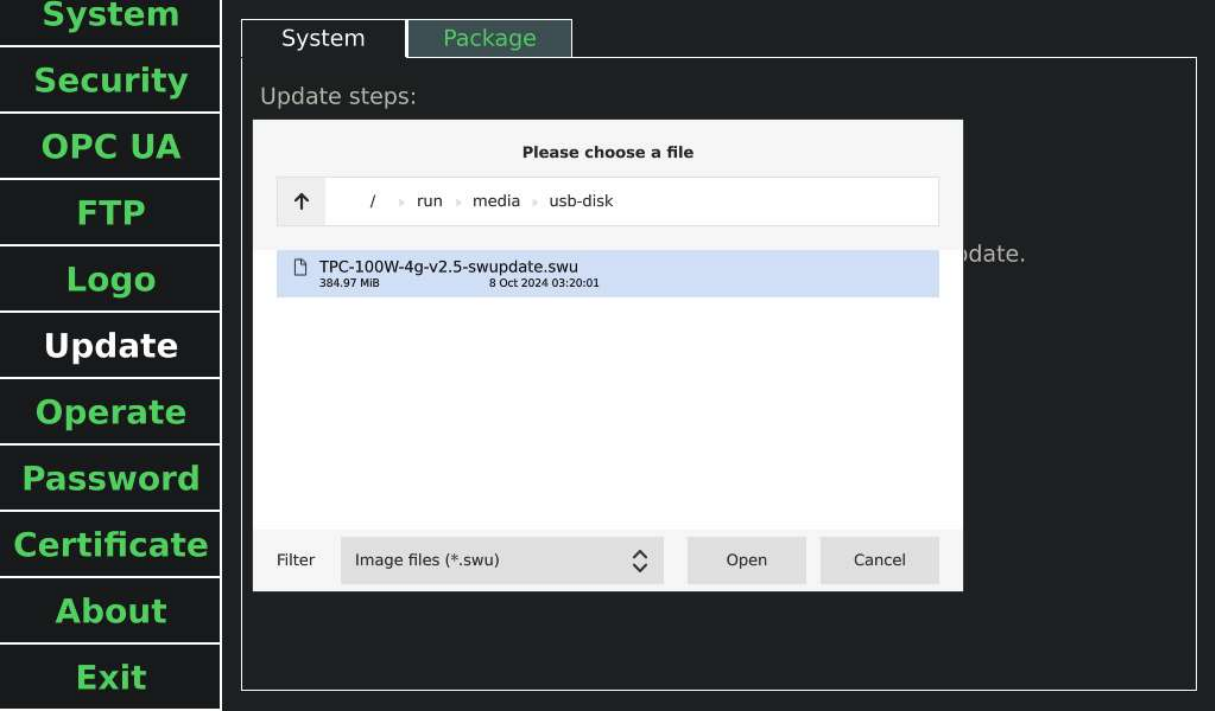


Figure Sample of Select Image File

■ To enable/disable backup settings and user. You can press switch button.
Note: The "Settings" means the configuration in Settings Tool. The "System User" means system root and weston user.



Figure Sample of Update with Backup

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- Press update button after selected image file.

NOTE: If swu file version >= v3.0, installation of swu files prior to v2.x is not allowed. If this happens, a message will be displayed and the update will be aborted

The screenshot displays the 'Update' menu in the Advantech TPC-100W software interface. The menu is located on the left side of the screen, with 'Update' highlighted. The main window shows the 'Update System' dialog box, which has two tabs: 'System' and 'Package'. The 'System' tab is active, showing the following steps:

1. Upload image file to device or plug USB.
2. Click select button to select image file.
3. Enable backup settings if you want to keep settings after update.
4. Click update button and wait until it finishes.

The dialog box also includes a text input field for the image file name, which currently contains 'PC-100W-4g-v2.5-swupdate.swu', and a 'Select' button. Below the input field, there are two toggle switches: 'Backup Settings' (which is currently turned off) and 'Backup System User' (which is currently turned on). At the bottom of the dialog box, there is an 'Update' button.

Figure Sample of Update System

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- To install package. You can upload package to device or plug USB. Then you should press select button to select your package file.

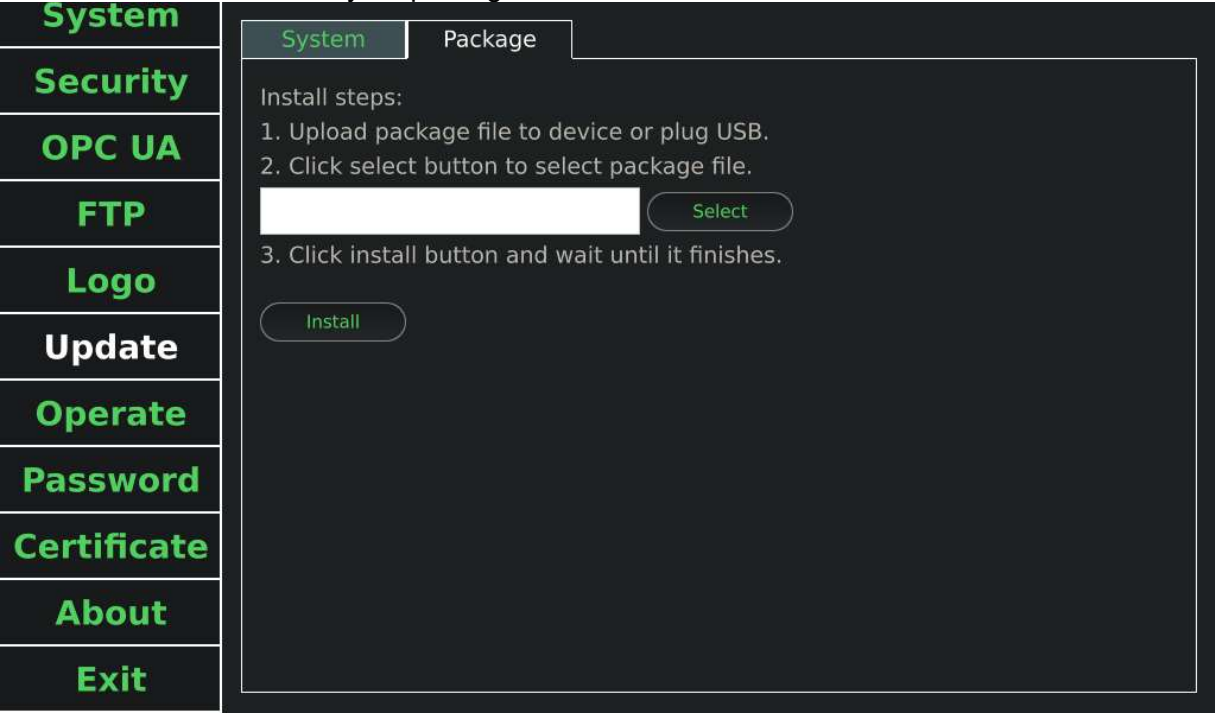


Figure Sample of Install Package Page

- For example, select package file from USB.

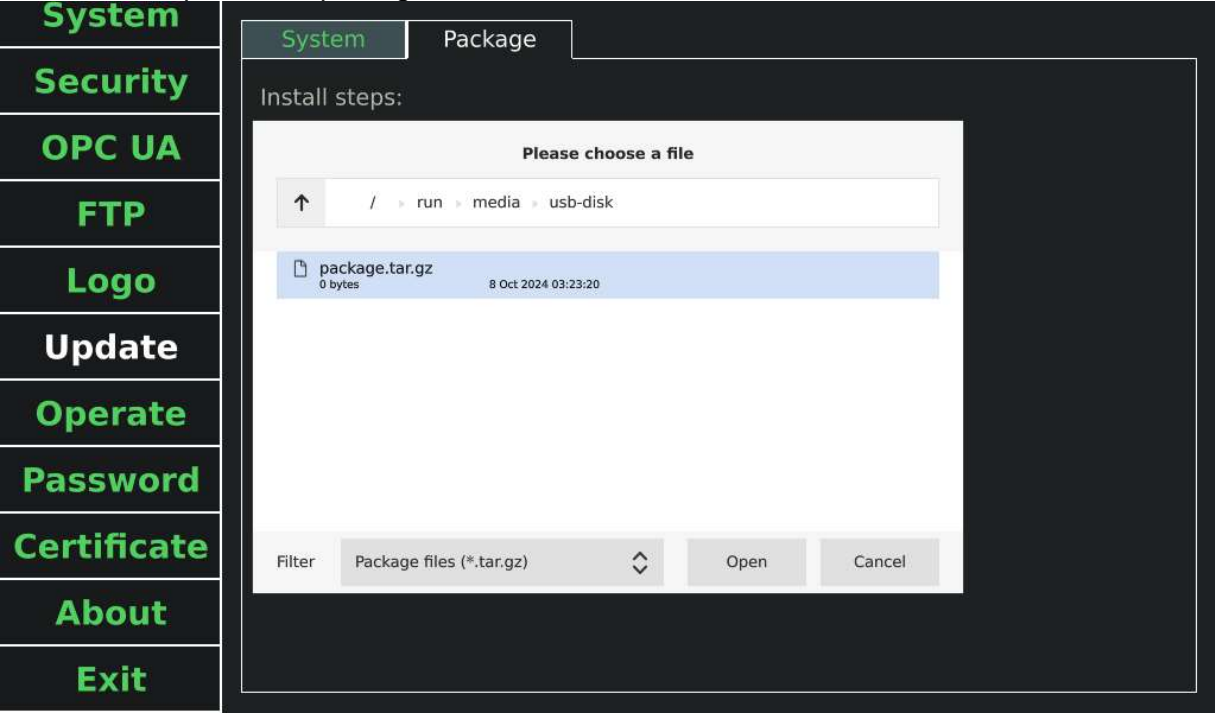


Figure Sample of Select Package File

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

■ Press install button after selected package file.

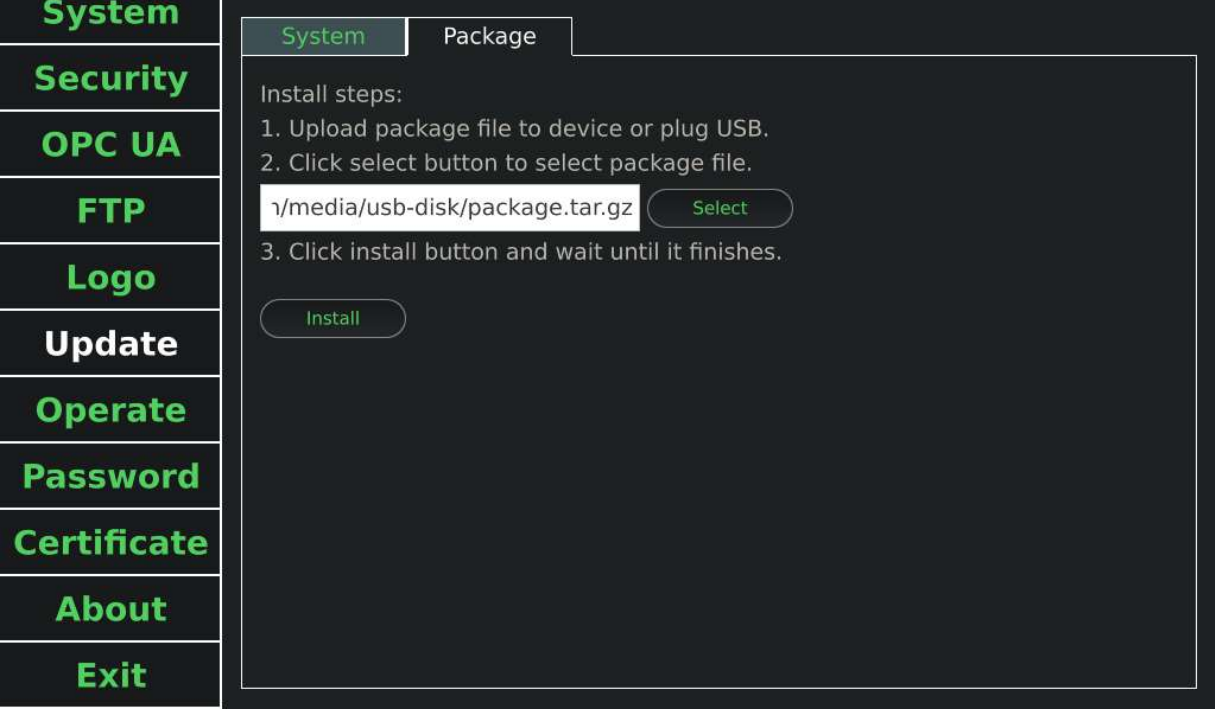


Figure Sample of Install Package

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12.3.12 Operate Actions

All operate related actions are in operate page. You can press Export button to export settings to a folder. And you can press Import button to import settings from exported file. You can press Export Screenshots button to export screenshots to a folder. You can press Reboot button to reboot system. You can press Shutdown button to shutdown system. You can press Exit button to exit application. You can press Open button to open terminal. You can press Reset button to factory reset(it only workable on emmc boot). You can press Export Downloads button to export downloads from Chromium to a folder. You can press Backup System button to backup whole system to USB.

*Note: Import actions would not affect "read-only system" in System. If you want to keep import settings after reboot, you should disable "read-only system" first.
Factory reset will restore your device to the factory default version, or the version you manually burned using an SD card.*

■ To export settings. You can export file to device or plug USB.



Figure Sample of Operate Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

■ For example, press Export button to select export folder.

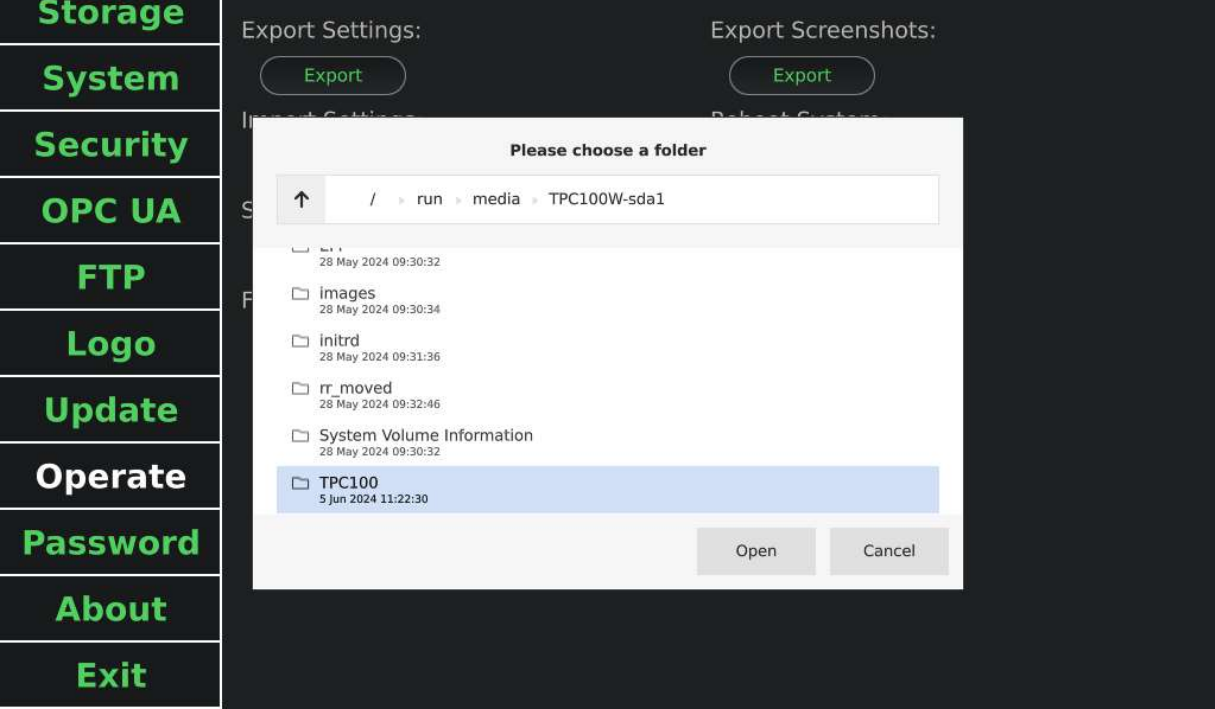


Figure Sample of Select Folder

■ To import settings. You can upload file to device or plug USB. Then you should press Import button to select your exported file.

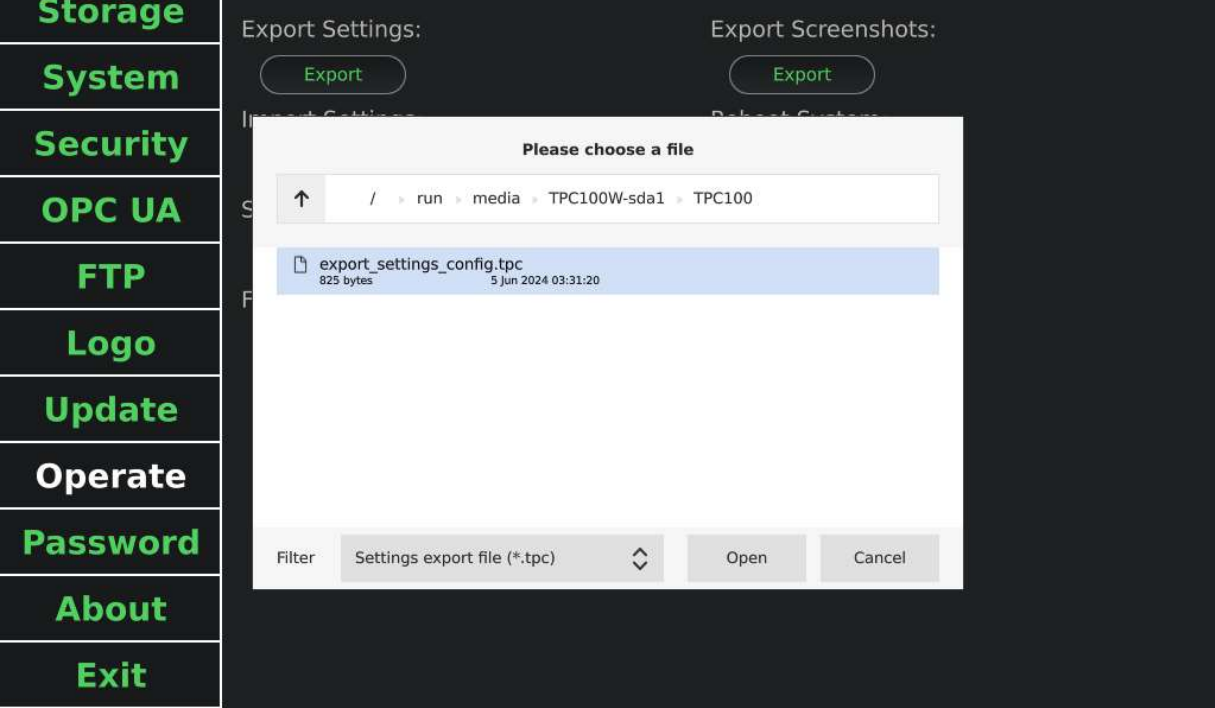


Figure Sample of Import Exported File

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- To exit settings. You can press exit button in Operate page or left side bar.

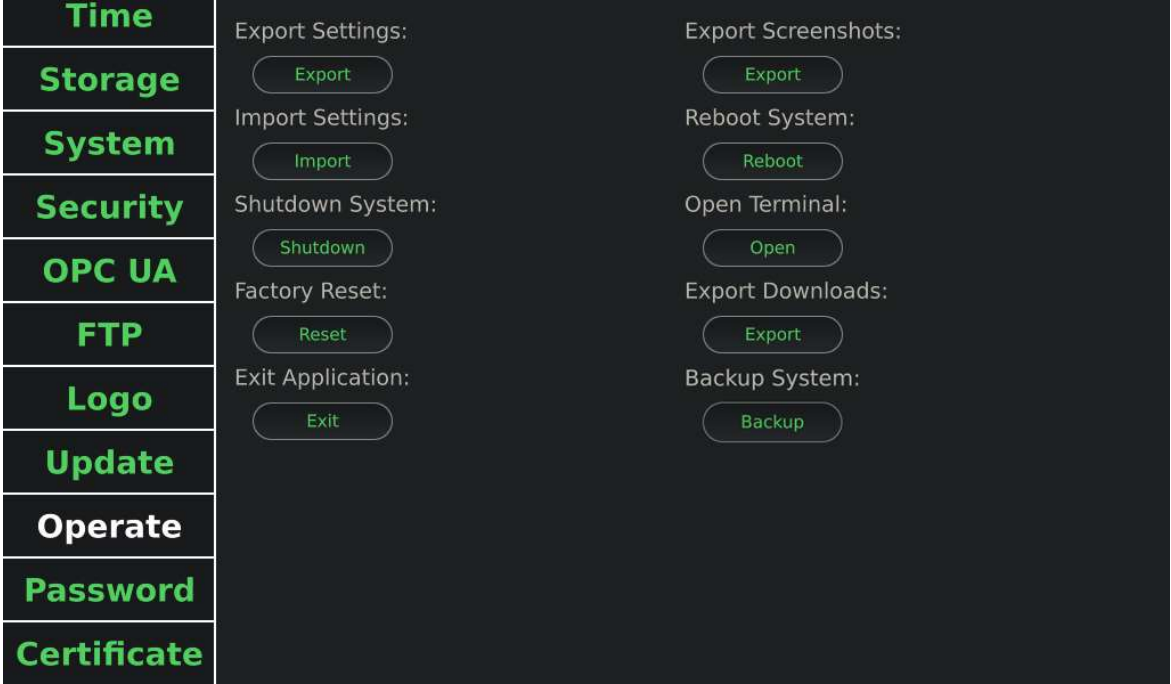


Figure Sample of Operate Page

- To back up the system, please insert the backup-restore USB as described in '11.2.1 USB Backup-Restore Mode in EFI mode'. If you plan to reuse the same USB drive for another backup operation, you must recreate it by using the official Recovery ISO file and burning it to the USB stick again before inserting it.

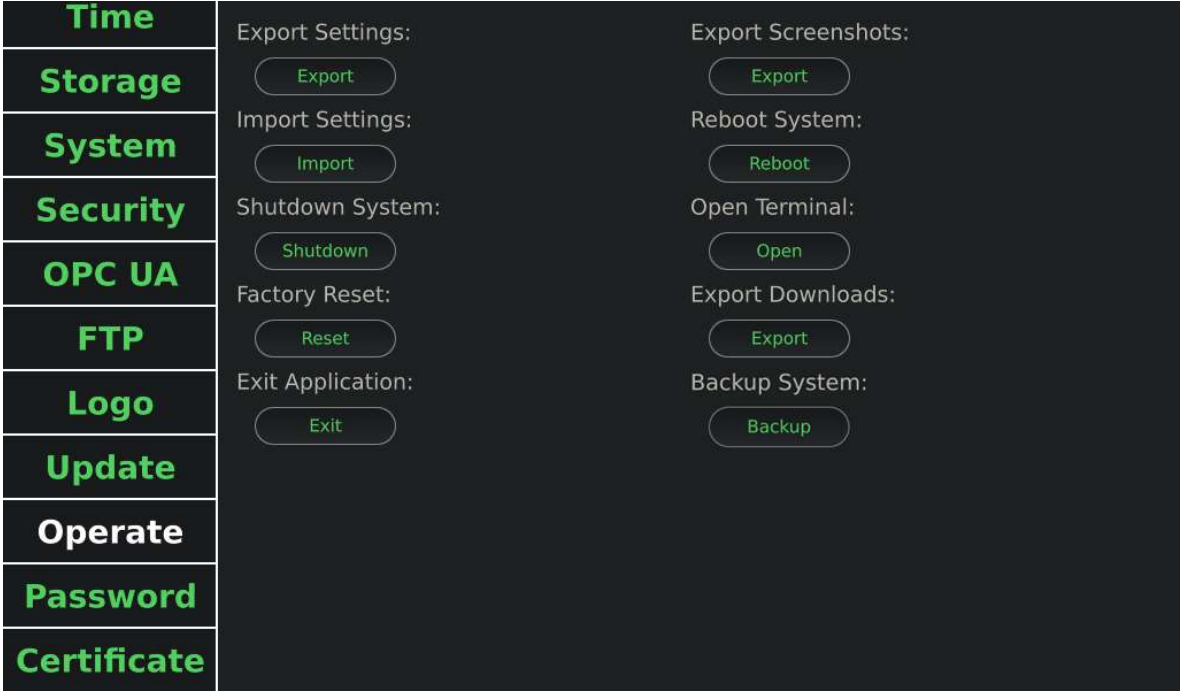


Figure Sample of Operate Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12.3.13 Change Password

You can change root password in Password page.

- To change password. You have to set current password. The new password can be set only if the authentication is success.

Screen

Network

Time

System

Security

FTP

Logo

Update

Operate

Password

Certificate

Change root password

Current Password:

New Password:

Confirm Password:

Show Password

Apply

Figure Sample of Password Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12.3.14 Import Certificate

When you connect to a website with a self-signed certificate using Chromium, you might see a security warning. You can import the certificate in Certificate page to avoid security warning.

Note: This is for root user now.

- To import certificate. You have to set nickname for certificate and choose certificate file. Then press Add button to import certificate.

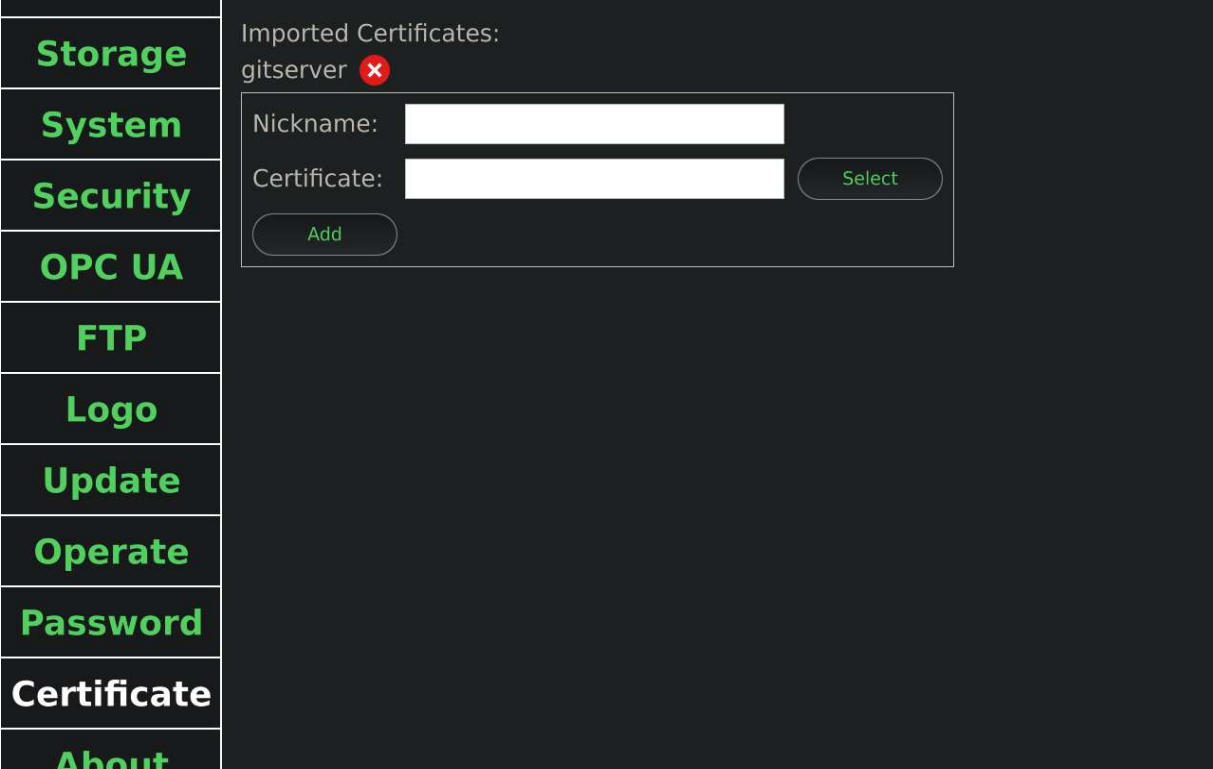


Figure Sample of Certificate Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12.3.15 About Information

All version and device related information is in about page.

- To see image, app, and important package version. To see CPU temperature.

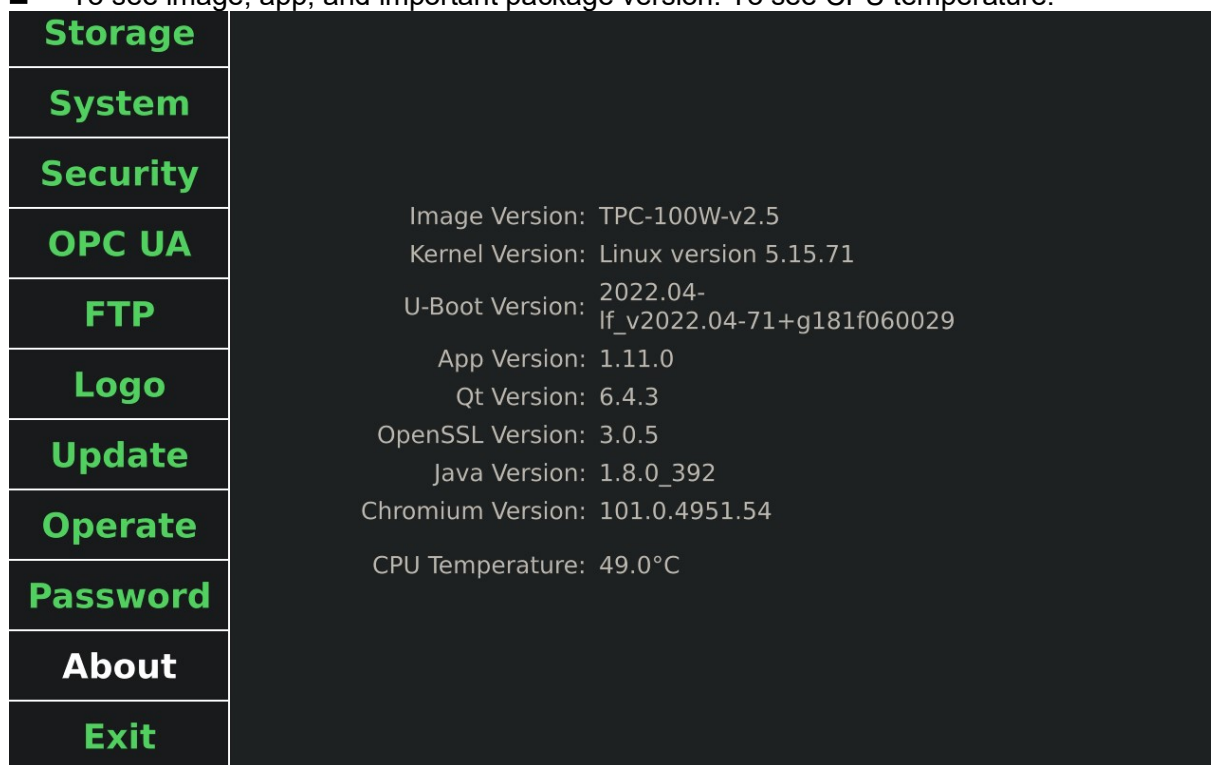


Figure Sample of About Page

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12.3.16 About Logs

■ TPC-100W Settings Tool Log

TPC-100W settings tool records debug message in log. Log path is “/tmp/settings.log”.

```
2022-01-19 09:02:53 - Debug: auto:120 Height:800 File:(src/mainwindow.cpp) Line:(39)
2022-01-19 09:02:53 - Debug: cmd:cat /sys/class/backlight/lvds_backlight00/brightness ret:0 File:(src/screen_utility.cpp) Line:(30)
2022-01-19 09:02:53 - Debug: cmd:connmanctl services | grep Wired | awk -F ' ' '{print $3}' value:ethernet_c408ad971b0a_cable
size:1 ret:0 File:(src/utility.cpp) Line:(39)
2022-01-19 09:02:53 - Debug: cmd:connmanctl services ethernet_c408ad971b0a_cable | grep -i 'ipv4.Configuration' | tr -d ' ' | awk -F ' ' '{print $1}' | awk -F '=' '{print $3}' | tr -d '\n' value:dhcp ret:0
File:(src/network_utility.cpp) Line:(181)
2022-01-19 09:02:53 - Debug: cmd:connmanctl services ethernet_c408ad971b0a_cable | grep -i 'ipv4' | grep Address | tr -d ' ' | awk -F ' ' '{print $1}' | awk -F '=' '{print $3}' | tr -d '\n' value:dhcp ret:0
File:(src/network_utility.cpp) Line:(181)
2022-01-19 09:02:53 - Debug: cmd:connmanctl services ethernet_c408ad971b0a_cable | grep -i 'ipv4' | grep Address | tr -d ' ' | awk -F ' ' '{print $2}' | awk -F '=' '{print $2}' | tr -d '\n' value:172.16.12
83 ret:0 File:(src/network_utility.cpp) Line:(181)
2022-01-19 09:02:53 - Debug: cmd:connmanctl services ethernet_c408ad971b0a_cable | grep -i 'ipv4.Configuration' | tr -d ' ' | awk -F ' ' '{print $1}' | awk -F '=' '{print $3}' | tr -d '\n' value:dhcp ret:0
File:(src/network_utility.cpp) Line:(181)
2022-01-19 09:02:53 - Debug: cmd:connmanctl services ethernet_c408ad971b0a_cable | grep -i 'ipv4' | grep Netmask | tr -d ' ' | awk -F ' ' '{print $3}' | awk -F '=' '{print $2}' | tr -d '\n' value:255.255.2
54.0 ret:0 File:(src/network_utility.cpp) Line:(181)
2022-01-19 09:02:53 - Debug: cmd:connmanctl services ethernet_c408ad971b0a_cable | grep -i 'ipv4.Configuration' | tr -d ' ' | awk -F ' ' '{print $1}' | awk -F '=' '{print $3}' | tr -d '\n' value:dhcp ret:0
File:(src/network_utility.cpp) Line:(181)
2022-01-19 09:02:53 - Debug: cmd:connmanctl services ethernet_c408ad971b0a_cable | grep -i 'ipv4' | grep Gateway | tr -d ' ' | awk -F ' ' '{print $4}' | awk -F '=' '{print $2}' | tr -d '\n' value:172.16.13
254 ret:0 File:(src/network_utility.cpp) Line:(181)
```

Figure Log

The monitor program of VNC server records debug message in log. Log path is “/tmp/runapp.log”.

```
root@eamp9318:~# cat /tmp/runapp.log
2022-04-18 03:22:07 - Debug: cmd:ssh -o ConnectTimeout=10 user@172.16.13.207 -v -p 5900 2>&1 output:OpenSSH_8.0p1, OpenSSL 1.1.1g 21 Apr 2020
debug1: Reading configuration data /etc/ssh/ssh_config
debug1: /etc/ssh/ssh_config line 20: Applying options for *
Pseudo-terminal will not be allocated because stdin is not a terminal.
debug1: Connecting to 172.16.13.207 [172.16.13.207] port 5900.
debug1: connect to address 172.16.13.207 port 5900: Network is unreachable
ssh: connect to host 172.16.13.207 port 5900: Network is unreachable
ret:65280 File:(c) Line:(6)
2022-04-18 03:22:07 - Debug: 172.16.13.207:5900 vnc server is not available! File:(c) Line:(6)
2022-04-18 03:22:32 - Debug: another instance is running File:(c) Line:(6)
2022-04-18 03:22:32 - Debug: another instance is running File:(c) Line:(6)
2022-04-18 03:22:33 - Debug: another instance is running File:(c) Line:(6)
2022-04-18 03:22:37 - Debug: cmd:ssh -o ConnectTimeout=10 user@172.16.13.207 -v -p 5900 2>&1 output:OpenSSH_8.0p1, OpenSSL 1.1.1g 21 Apr 2020
debug1: Reading configuration data /etc/ssh/ssh_config
debug1: /etc/ssh/ssh_config line 20: Applying options for *
Pseudo-terminal will not be allocated because stdin is not a terminal.
debug1: Connecting to 172.16.13.207 [172.16.13.207] port 5900.
debug1: fd 3 clearing O_NONBLOCK
debug1: Connection established.
```

Figure Log

12.3.17 Known issues

■ “ComboBox.qml:56: TypeError: Cannot read property 'width' of null”

This is a Qt bug at version 5.15.0. When UI dropdown combobox, it would show “ComboBox.qml:56: TypeError: Cannot read property 'width' of null” in log.

Reference: <https://bugreports.qt.io/browse/QTBUG-86131?attachmentOrder=asc>

```
2022-01-19 10:58:15 - Debug: cmd:connmanctl services ethernet_c408ad971b0a_cable | grep -i 'ipv4.Configuration' | tr -d ' ' | awk -F ' ' '{print $1}' | awk -F '=' '{print $3}' | tr -d '\n' value:dhcp ret:0
File:(src/network_utility.cpp) Line:(181)
2022-01-19 10:58:15 - Debug: cmd:connmanctl services ethernet_c408ad971b0a_cable | grep -i 'ipv4.Configuration' | tr -d ' ' | awk -F ' ' '{print $1}' | awk -F '=' '{print $3}' | tr -d '\n' value:dhcp ret:0
File:(src/network_utility.cpp) Line:(181)
2022-01-19 10:58:15 - Debug: cmd:connmanctl services ethernet_c408ad971b0a_cable | grep -i 'ipv4' | grep Address | tr -d ' ' | awk -F ' ' '{print $2}' | awk -F '=' '{print $2}' | tr -d '\n' value:172.16.12
83 ret:0 File:(src/network_utility.cpp) Line:(181)
2022-01-19 10:58:15 - Debug: cmd:connmanctl services ethernet_c408ad971b0a_cable | grep -i 'ipv4' | grep Address | tr -d ' ' | awk -F ' ' '{print $1}' | awk -F '=' '{print $3}' | tr -d '\n' value:dhcp ret:0
File:(src/network_utility.cpp) Line:(181)
2022-01-19 10:58:15 - Debug: cmd:connmanctl services ethernet_c408ad971b0a_cable | grep -i 'ipv4' | grep Netmask | tr -d ' ' | awk -F ' ' '{print $3}' | awk -F '=' '{print $2}' | tr -d '\n' value:255.255.2
54.0 ret:0 File:(src/network_utility.cpp) Line:(181)
2022-01-19 10:58:15 - Debug: cmd:connmanctl services ethernet_c408ad971b0a_cable | grep -i 'ipv4.Configuration' | tr -d ' ' | awk -F ' ' '{print $1}' | awk -F '=' '{print $3}' | tr -d '\n' value:dhcp ret:0
File:(src/network_utility.cpp) Line:(181)
2022-01-19 10:58:15 - Debug: cmd:connmanctl services ethernet_c408ad971b0a_cable | grep -i 'ipv4' | grep Gateway | tr -d ' ' | awk -F ' ' '{print $4}' | awk -F '=' '{print $2}' | tr -d '\n' value:172.16.13
254 ret:0 File:(src/network_utility.cpp) Line:(181)
2022-01-19 11:10:31 - Warning: file:///usr/lib/qml/QtQuick/Controls.2/ComboBox.qml:56: TypeError: Cannot read property 'width' of null File:(file:///usr/lib/qml/QtQuick/Controls.2/ComboBox.qml) Line:(56)
2022-01-19 11:10:31 - Warning: file:///usr/lib/qml/QtQuick/Controls.2/ComboBox.qml:56: TypeError: Cannot read property 'width' of null File:(file:///usr/lib/qml/QtQuick/Controls.2/ComboBox.qml) Line:(56)
2022-01-19 11:10:31 - Warning: file:///usr/lib/qml/QtQuick/Controls.2/ComboBox.qml:56: TypeError: Cannot read property 'width' of null File:(file:///usr/lib/qml/QtQuick/Controls.2/ComboBox.qml) Line:(56)
2022-01-19 11:10:31 - Warning: file:///usr/lib/qml/QtQuick/Controls.2/ComboBox.qml:56: TypeError: Cannot read property 'width' of null File:(file:///usr/lib/qml/QtQuick/Controls.2/ComboBox.qml) Line:(56)
2022-01-19 11:10:31 - Warning: file:///usr/lib/qml/QtQuick/Controls.2/ComboBox.qml:56: TypeError: Cannot read property 'width' of null File:(file:///usr/lib/qml/QtQuick/Controls.2/ComboBox.qml) Line:(56)
2022-01-19 11:10:31 - Warning: file:///usr/lib/qml/QtQuick/Controls.2/ComboBox.qml:56: TypeError: Cannot read property 'width' of null File:(file:///usr/lib/qml/QtQuick/Controls.2/ComboBox.qml) Line:(56)
2022-01-19 11:10:31 - Warning: file:///usr/lib/qml/QtQuick/Controls.2/ComboBox.qml:56: TypeError: Cannot read property 'width' of null File:(file:///usr/lib/qml/QtQuick/Controls.2/ComboBox.qml) Line:(56)
2022-01-19 11:10:31 - Warning: file:///usr/lib/qml/QtQuick/Controls.2/ComboBox.qml:56: TypeError: Cannot read property 'width' of null File:(file:///usr/lib/qml/QtQuick/Controls.2/ComboBox.qml) Line:(56)
```

Figure Error Log

■ Desktop Status Bar Time is Not Synced


When you clicked apply button at time configuration page, it would update time immediately. But it takes about 1 minute to update on desktop status bar.

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12.4 How to Use Gesture


There are predefined gestures on TPC-100W. This section will explain how to use gesture to open/close Settings Tool.

- 2 fingers swipe down to open Settings Tool

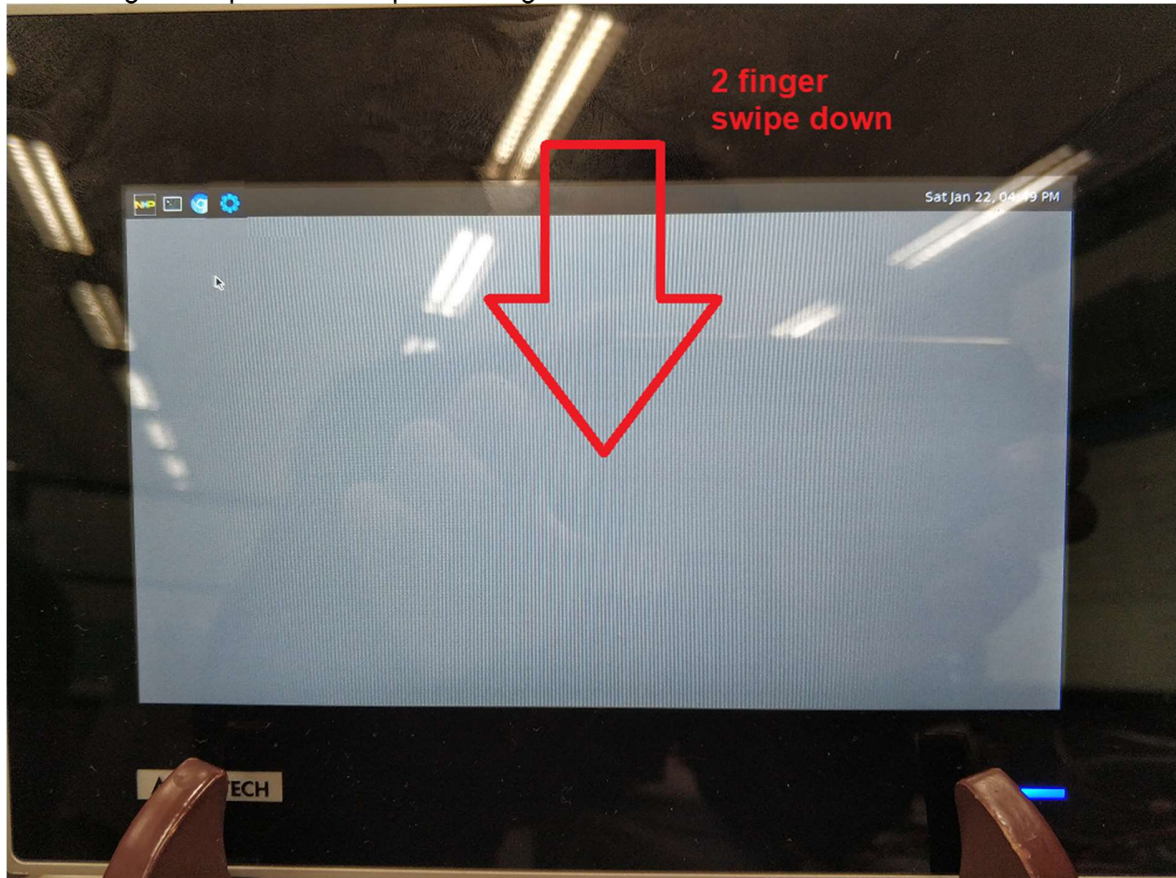


Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- 2 fingers swipe up to close activated window. This is equal to shortcuts “super + k”.

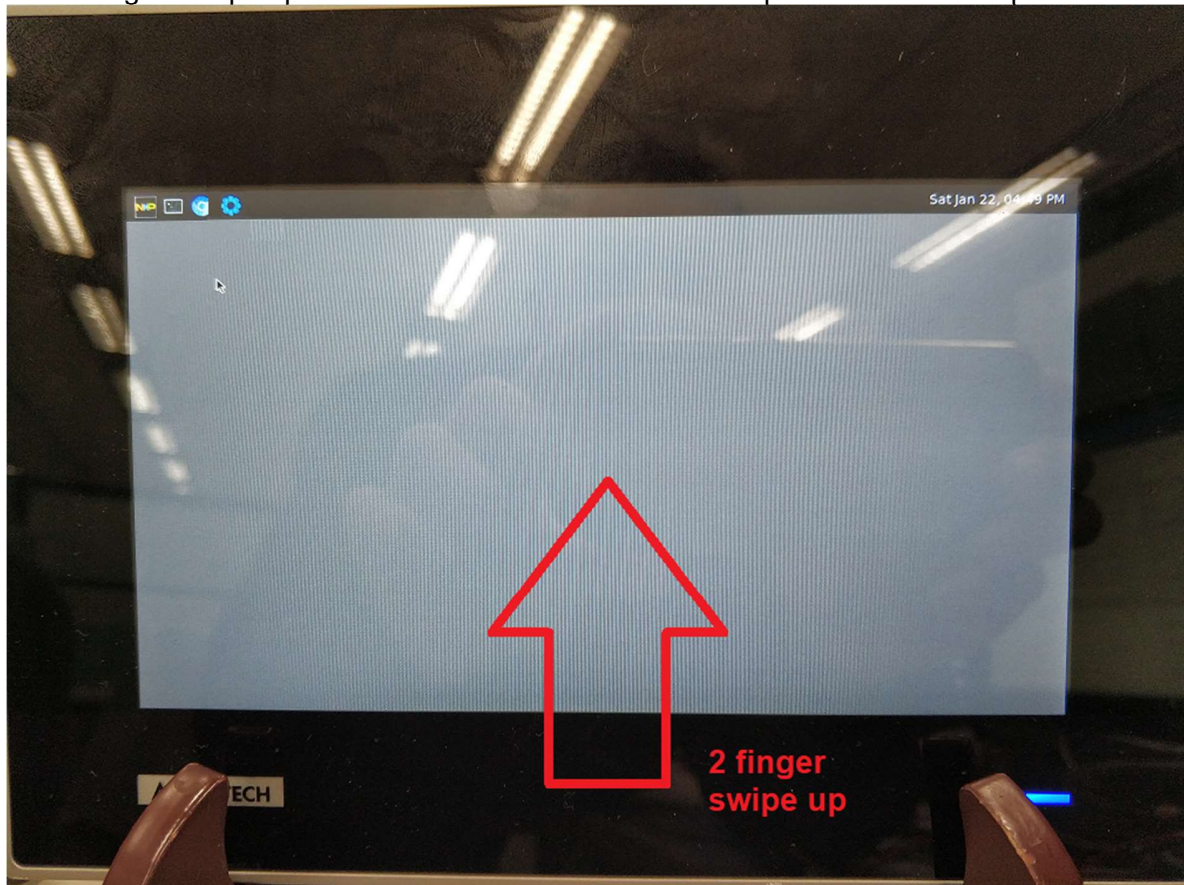

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- 2 fingers swipe right to switch window. This is equal to shortcuts “super + tab”.

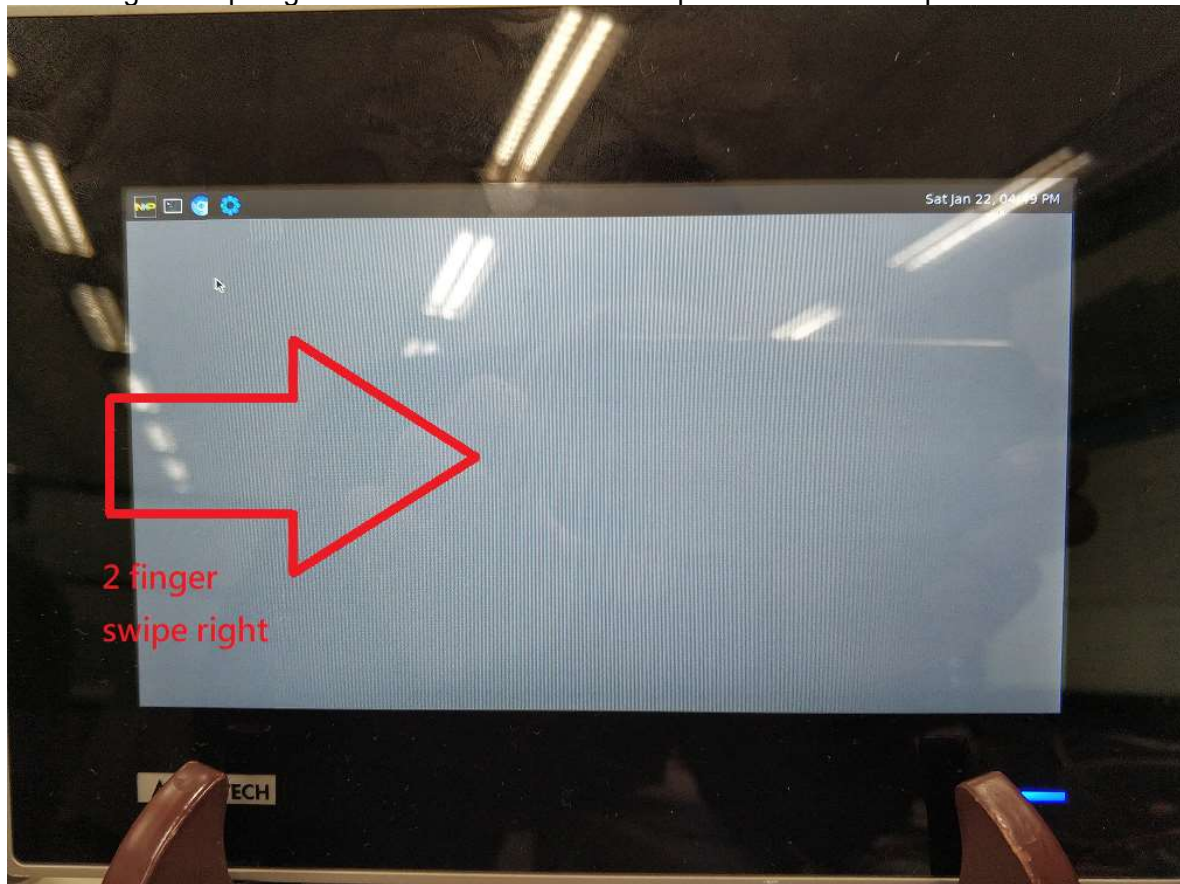


Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

12.5 How to Take Screenshots


This section will explain how to take a screenshot on the TPC-100W and where to find the saved images.

- Click top bar icon to take a screenshot

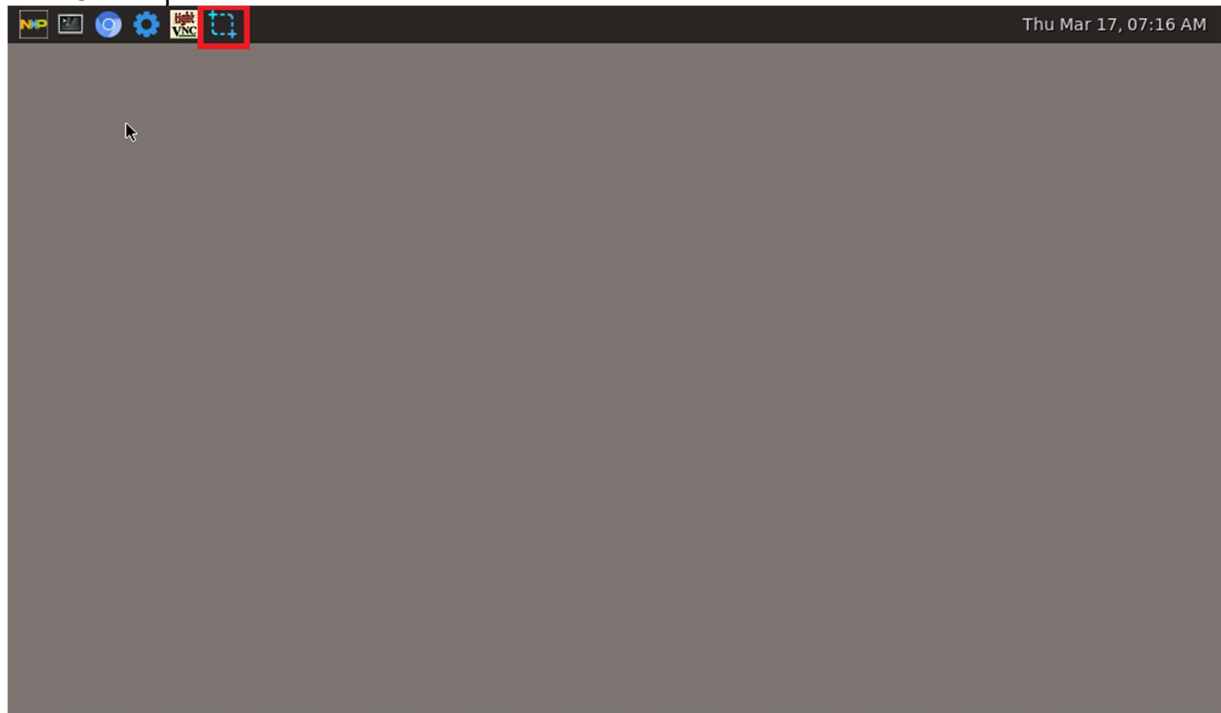

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- After you take a screenshot, you can see the image window.

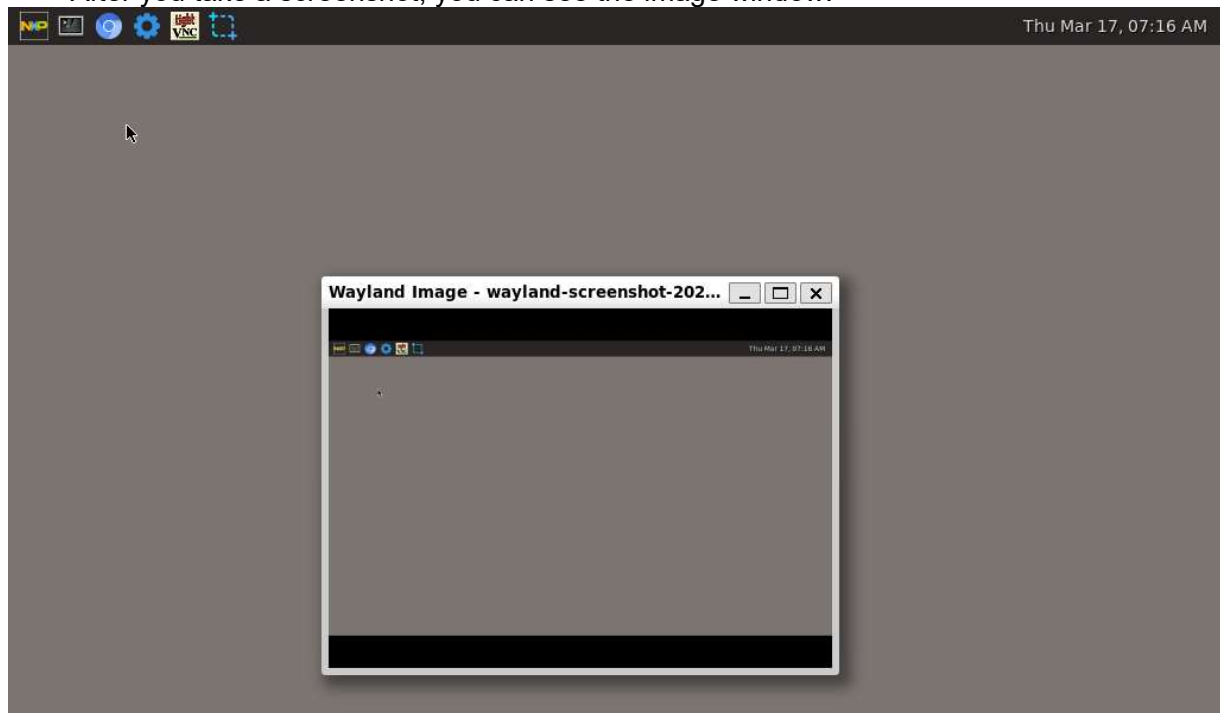

You can find the screenshot under “/userdata “.

```
root@eamb9918:~# ls -al /userdata/
total 60
drwxr-xr-x  3 root root  4096 Mar 17 07:16 .
drwxr-xr-x 21 root root  4096 Mar 16 08:11 ..
drwx----- 2 root root 16384 Mar 16 08:10 lost+found
-rw-r--r--  1 root root 12187 Mar 17 07:16 wayland-screenshot-2022-03-17_07-16-48.png
-rw-r--r--  1 root root 21799 Mar 17 07:16 wayland-screenshot-2022-03-17_07-16-51.png
root@eamb9918:~#
```

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

13. Weston Keyboard Shortcuts

The table below lists the actions that can be performed through Weston keyboard shortcuts, when the TPC-100W is connected to a keyboard. "super", i.e. Windows key between "ctrl" and "alt" (default value)

Command	Action	Condition(s)
ctrl + scroll	Zoom in / out the desktop	Keyboard + mouse
super + shift + f	Put activated window fullscreen	Keyboard
super + left mouse button	Move activated window	Keyboard + mouse
super + middle mouse button (Not support)	Rotate activated window (Not support)	Keyboard + mouse
super + right mouse button	Resize activated window	Keyboard + mouse
super + shift + left mouse button	Resize activated window	Keyboard + mouse
super + tab	Switch windows	Keyboard
super + k	Kill activated window	Keyboard
super + s	Capture a screenshot (see details below)	Keyboard

■ Capture a screenshot

Refer to the table above for the command to be used. The captured picture (PNG format) is automatically stored in /home/weston/wayland-screenshot-2022-03-08_01-48-19.png.

14. Playing video

Playing the mp4 video with below command.

```
sh-5.0# gst-launch-1.0 filesrc location=/4k.mp4 ! decodebin ! imxvideoconvert_g2d ! autovideosink
```

15. USB storage

To use USB sticks for storing image file(.swu), you need to format them to FAT32 or EXT4. After plugging in the USB storage to TPC-100W, it will be mounted to /run/media/sdx1, where x=a, b or c ...

You can check the USB storage contents by below command. We use sda1 as example.

```
sh-5.0# ls /run/media/sda1
```

If you want to safely eject USB, you can umount first by below command.

```
sh-5.0# umount /run/media/sda1
```

16. Watchdog

If you want to test watchdog, you can go to /usr/src/device/watchdog and make. You would get watchdog-test binary to test.

Go to /usr/src/device/watchdog and make.

```
sh-5.0# cd /usr/src/device/watchdog
sh-5.0# make
```

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

Set watchdog timeout to 20 seconds. It would strobe every fixed period.

```
sh-5.0# ./watchdog-test -d -t 20 -e
```

You can kill watchdog-test to check system would reboot after 20 seconds.

```
sh-5.0# killall watchdog-test
```

Please reference

<https://github.com/torvalds/linux/blob/master/tools/testing/selftests/watchdog/watchdog-test.c> for more details.

17. Change boot logo

The boot logo is configured in /etc/psplash.conf

```
IMAGE_PATH=/etc/boot_logo.bmp
BACKGROUND_COLOR=0xffffffff
TEXT_COLOR=0x004280
```

IMAGE_PATH is the path of logo image and only support 24-bit bmp format.
BACKGROUND_COLOR and TEXT_COLOR is the color code in a two digit hexadecimal format for red, green and blue (0xRRGGBB) and it cannot be 0x000000 for design reason.
If image or color is invalid, it will show the default image or color of psplash.

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

18. FRAM Testing

TPC-100W has 1MB FRAM to backup memory for unexpected power interruptions. User can use C standard Library (open/read/write) to access FRAM or use “dd” to test it.

```
# check fm25 exist?
$ dmesg | grep fm25
[ 9.268063] f25 spi1.0: 1024 KByte fm25 eeprom, pagesize 4096

# write random value to fm25
$ dd if=/dev/random of=/sys/class/spi_master/spi1/spi1.0/fm250/nvmem bs=1k count=1024
1024+0 records in
1024+0 records out
1048576 bytes (1.0 MB, 1.0 MiB) copied, 1.74818 s, 600 kB/s

# read fm25 to file (data1)
$ dd if=/sys/class/spi_master/spi1/spi1.0/fm250/nvmem of=data1
2048+0 records in
2048+0 records out
1048576 bytes (1.0 MB, 1.0 MiB) copied, 1.58103 s, 663 kB/s

# poweroff > remove power > power on > read fm25 to file (data2)
$ dd if=/sys/class/spi_master/spi1/spi1.0/fm250/nvmem of=data2
2048+0 records in
2048+0 records out
1048576 bytes (1.0 MB, 1.0 MiB) copied, 1.51934 s, 690 kB/s

# compare data1 & data2
$ md5sum data?
b156e0c2dd36285a165b370414e54ac6 data1
b156e0c2dd36285a165b370414e54ac6 data2
```

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

19. About LICENSE

19.1 Advantech TPC-100W Settings Tool

Please reference <https://github.com/Advantech-IIoT/settings/blob/master/LICENSE> for more details.

19.2 Qt Browser

Please reference <https://github.com/Advantech-IIoT/quicknanobrowser/blob/master/LICENSE> for more details.

19.3 Chromium

Please reference <https://www.chromium.org/chromium-projects/> for more details.

19.3.1 Chromium Extension

- Virtual Keyboard

Please reference <https://chrome.google.com/webstore/detail/virtual-keyboard/pflmllfnabikmfkkaddkoolinlfninn?hl=zh-TW> for more details.

Please reference <https://github.com/xontab/chrome-virtual-keyboard/blob/master/LICENSE> for more details.

19.4 ydotool

Please reference <https://github.com/Advantech-IIoT/ydotool/blob/master/LICENSE> for more details.

19.5 Java

We are using Adoptium prebuilt OpenJDK binaries.

Please reference Adoptium <https://adoptium.net/> for more details.

Please reference OpenJDK <https://github.com/openjdk/jdk/blob/master/LICENSE> for more details.

19.6 TightVNC Java Viewer

Please reference <https://www.tightvnc.com/licensing-jviewer.php> for more details.

Please reference <https://github.com/Advantech-IIoT/tvnjviewer/blob/master/LICENSE.txt> for more details.

19.7 Docker

Please reference <https://docs.docker.com/engine/> for more details.

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

20. Appendix

20.1 FAQ

Q: How to access FTP service?

Ans: The FTP service is based on SFTP (SSH File Transfer Protocol) is a secure file transfer protocol. It runs over the SSH protocol. It supports the full security and authentication functionality of SSH. You can use the ftp client with supported sftp, like FileZilla and direct access via sftp://ip-address.

Reference https://wiki.filezilla-project.org/FileZilla_Client_Tutorial_%28en%29%20%20

Q: How to enable NTP server?

Ans: NTP (Network Time Protocol) is a suite of applications that allows computers to coordinate their system time. You should edit configuration file /etc/ntp.conf for your situation. For example :

- Add reference clock peers in ntp.conf

```
server time1.google.com iburst
```

- To allow hosts to query the time and statistics in ntp.conf

```
restrict 172.16.12.0 mask 255.255.255.0 nomodify notrap
```

- To allow NTP port

```
$ iptables -A INPUT -p udp --dport 123 -j ACCEPT
$ iptables -A OUTPUT -p udp --sport 123 -j ACCEPT
```

- To enable and start the NTP server

```
$ systemctl enable ntpd
$ systemctl start ntpd
```

Reference https://docs.ntpsec.org/latest/ntp_conf.html

After setup server, you can test it with NTP client.

```
$ ntpdate -vd 172.16.12.6
```

Q: How to exit fullscreen application when gestures are disabled?

Ans: You can use the shortcut key to switch or kill application with keyboard, please refer to **13. Weston Keyboard Shortcuts**. Or you can ssh into device and enter kill command.

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

Q: How to enable docker service?

Ans: You can use systemctl command to enable docker service. Then docker service would start at boot.

- To enable and start the docker

```
$ systemctl enable docker
$ systemctl start docker
```

Note. The docker service is depend on network-online.target. It needs take 2 minutes to timeout without online ethernet device. You can skip it by follow command.

```
$ systemctl mask connman-wait-online
# Use follow command if v1.5 before
$ systemctl mask systemd-networkd-wait-online
```

Note. If you want to enable docker service under read-only system, you should setup docker data folder to /userdata. Create /etc/docker/daemon.json with following content.

```
{
  "data-root": "/userdata/docker-data"
}
```

Note. If you want to enable docker service under network bridge enabled, you could setup docker bridge to stbr0. Create /etc/docker/daemon.json with following content.

```
{
  "bridge": "stbr0"
}
```

Or you could setup iptables rules to allow forward for bridge interface. Like the following command.

```
$ iptables -I FORWARD -i stbr0 -o stbr0 -j ACCEPT
```

Reference <https://wiki.archlinux.org/title/Docker>

Q: How to start Weston(desktop service) and startup Application as non-root user?

Ans: You can use Settings tool to change default login desktop as user, or you can run the script(adv_run_weston_as_user.sh) to switch the user. You are free to use your own user account.

example :

- Add new user

```
$ useradd testuser
```

- Start Weston as non-root user
 - use your user

```
$ /usr/bin/adv_run_weston_as_user.sh testuser
$ reboot
```

Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

- To check running by testuser

```
$ ps aux | grep testuser
```

Q: How to import/export Settings config by command line interface?

Ans: You can use built-in tool.

example :

- Export Settings config

```
$ atcc.restore_settings -m export -c /userdata
```

- Import Settings config

```
$ atcc.restore_settings -m import -c /userdata/export_settings_config.tpc
```

Q: How to enable communication with the certificate in opcua server?

Ans: You can generate the certificate file and private key by follow commands.

```
# make sure the network is ok
$ cd /opt/adv-opcua
$ ./create_self-signed
```

It will create self-signed server_cert.der and server_key.der after commands. Of cause, you can generate them by your policy.

Q: How to accept self-signed certificate to avoid not secure when connect to the website by using chromium?

Ans: You can use command line to import self-signed certificate's root CA.

example :

- Import root CA

```
$ certutil -d sql:$HOME/.pki/nssdb -A -t "C,," -n "ca_nickname" -i /your/rootCA.crt
```

- Delete root CA

```
$ certutil -d sql:$HOME/.pki/nssdb -D -n "ca_nickname"
```

- List

```
$ certutil -d sql:$HOME/.pki/nssdb -L
```

Reference <https://manpages.ubuntu.com/manpages/xenial/en/man1/certutil.1.html>

Reference

https://chromium.googlesource.com/chromium/src/+master/docs/linux/cert_management.md


Advantech TPC-100W Software User Manual	Version: <1.25>
User Manual	Date: <24/03/2026>

Q: Why can't I find my USB storage when I plug it on TPC-100W?

Ans: If you plug in a USB storage but can't find the disk, here are some things you can do.

- Check your USB disk format is FAT32 or EXT4.
- Check your USB disk is not corrupted. Please plug in your USB on windows to check.

If windows show this message. Please follow the instruction to fix it or re-format it.

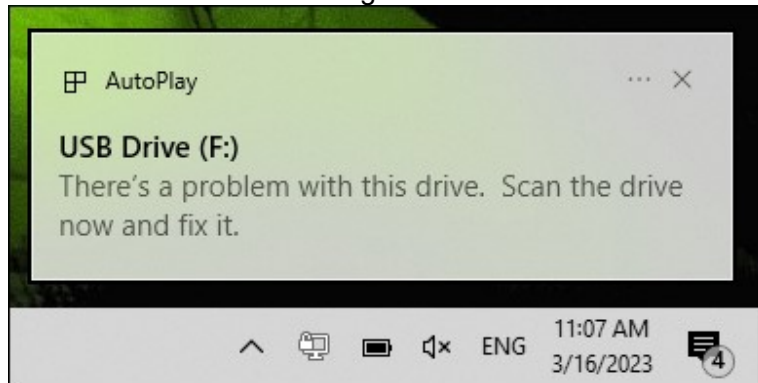

Q: How to change keyboard layout for terminal from English to another language?

Ans: You can change the value of the keymap_layout variable in the KEYBOARD section of the weston.ini.

example :

- Change to French language

```
$ nano /etc/xdg/weston/weston.ini
...
[keyboard]
keymap_layout=fr
```

- Restart Weston

```
$ systemctl restart weston
```

Reference https://man.archlinux.org/man/weston.ini.5.en#KEYBOARD_SECTION

Reference <https://man.archlinux.org/man/xkeyboard-config.7>